

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Vision HD Extra Performance LED Flashlight with Digital Focus (Model 30039800129339) User Manual

Energizer 30039800129339

Energizer Vision HD Extra Performance LED Flashlight with Digital Focus (Model 30039800129339) User Manual

Your guide to setting up, operating, and maintaining your Energizer Vision HD Flashlight.

INTRODUCTION

The Energizer Vision HD Extra Performance LED Flashlight with Digital Focus is designed for reliability and powerful illumination. Featuring MAXVIZ technology, it delivers up to 1300 lumens of bright, high-definition light, replicating natural daylight. Its durable, aircraft-grade aluminum body ensures resilience, while IPX4 water resistance provides dependable performance in various conditions. This flashlight offers versatile lighting with high, low, and strobe modes, along with proprietary Digital Focus Technology for optimal control over your light beam.



Energizer Vision HD Extra Performance LED Flashlight. This image shows the flashlight in a silver finish, highlighting its textured body and the Energizer branding near the head.

SETUP

Battery Installation

Your Energizer Vision HD Flashlight requires 6 AA batteries for operation. Please follow these steps for correct installation:

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.
2. Insert 6 Energizer MAX AA batteries into the battery cartridge. Ensure the positive (+) and negative (-) terminals align with the indicators inside the cartridge.
3. Carefully slide the battery cartridge back into the flashlight body.
4. Screw the tail cap back on by turning it clockwise. Ensure it is tightened securely to establish proper electrical contact and maintain water resistance.





This image displays the Energizer Vision HD Flashlight from a top-down perspective, showing the tail cap and the general shape of the flashlight, which is where the batteries are inserted.



A side view of the Energizer Vision HD Flashlight, illustrating its textured grip and the position of the power button.

OPERATING INSTRUCTIONS

Power On/Off

To turn the flashlight **ON**, press the power button located on the side of the flashlight body. To turn it **OFF**, press the power button again.

Light Modes

The flashlight features three distinct light modes:

- **High Mode:** Provides maximum brightness (1300 lumens) for extensive illumination.
- **Low Mode:** Offers reduced brightness for extended battery life and less intense lighting needs.
- **Strobe Mode:** A flashing light pattern for signaling or emergency situations.

To cycle through the light modes, press the power button repeatedly while the flashlight is on. Each press will advance to the next mode (High > Low > Strobe > Off).

Digital Focus

The Digital Focus feature allows you to adjust the beam intensity and focus. While the flashlight is on, press and **hold** the power button. The light output will gradually cycle between its brightest and dimmest settings. Release the button when you reach your desired brightness level.





A close-up view of the flashlight's head, showing the three LED bulbs and the textured lens for optimal light distribution.

This video demonstrates the features of Energizer Advanced LED Flashlights, including their IPX4 water resistance and various light modes, showcasing their durability and versatility in different environments.

Cleaning

To clean your flashlight, wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or internal components. Ensure the lens is clean for optimal light output.

Battery Replacement

Replace all 6 AA batteries simultaneously with new, high-quality alkaline batteries. Do not mix old and new batteries or different battery types. Remove batteries if the flashlight will not be used for an extended period to prevent leakage.

Storage

Store the flashlight in a cool, dry place away from direct sunlight and extreme temperatures. If storing for long periods, remove the batteries.

TROUBLESHOOTING

- **Flashlight does not turn on:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Check if the tail cap is securely tightened. A loose tail cap can prevent electrical contact.
 - Replace old or depleted batteries with new ones.
- **Light output is dim or flickers:**
 - Batteries may be low; replace them.
 - Clean battery contacts and terminals with a clean eraser or cotton swab.
 - Ensure the lens is clean and free from obstructions.
- **Water ingress:**
 - While the flashlight is IPX4 water-resistant (splash-proof), it is not designed for submersion. If water enters the unit, remove batteries immediately and allow all components to dry thoroughly before reassembly.

SPECIFICATIONS

Feature	Detail
Model Number	30039800129339
Light Output	Up to 1300 Lumens
Light Source Type	LED (MAXVIZ Technology)
Power Source	Battery Powered
Battery Type	6 x AA Alkaline Batteries (Included)
Runtime	Up to 19 hours
Light Path Distance	Up to 230 Meters
Water Resistance Level	IPX4 (Water Resistant)
Material	Aircraft-Grade Aluminum
Color	Silver
Item Weight	1.05 Pounds
Item Dimensions (D x W x H)	2.25"D x 2.25"W x 9"H

Feature	Detail
UPC	039800129338

WARRANTY AND SUPPORT

This Energizer product is covered by a manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the documentation included with your product or visit the official Energizer website. You can also find more information and contact options at the [Energizer Store on Amazon](#).

© 2026 Energizer. All rights reserved. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question