

## THINK 30 N770P422567T\_65429.00CUSH

# THINK 30 Acacia Wood Outdoor Chaise Lounge Instruction Manual

Model: N770P422567T\_65429.00CUSH

## 1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembling or using this product. Failure to follow these instructions may result in injury or product damage.

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of 400 lbs (181 kg). Exceeding this limit may cause the chaise lounge to collapse, leading to injury.
- **Fire Hazard:** Keep the chaise lounge away from open flames, heaters, and other heat sources to prevent fire.
- **Backrest Adjustment:** Use caution when adjusting the backrest. Ensure hands and fingers are clear of moving parts to prevent pinching.
- **Assembly Surface:** Assemble the product on a stable, level, and clean surface to prevent damage and ensure proper construction.
- **Pre-Use Inspection:** Before each use, inspect the chaise lounge for any signs of damage, loose hardware, or wear. Do not use if any damage is found.
- **Children and Pets:** Keep children and pets away from the assembly area. This product is intended for adult use.

## 2. SETUP AND ASSEMBLY

This chaise lounge requires assembly. Ensure all components are present before beginning. It is recommended to have two people for assembly.

### 2.1. Unpacking and Part Identification

1. Carefully unpack all contents from the packaging.
2. Lay out all parts on a soft, clean surface to prevent scratches.

3. Refer to the included hardware list and diagrams (if provided in your package) to identify all components and hardware. Contact customer support if any parts are missing or damaged.

## 2.2. Assembly Steps

Follow the step-by-step instructions and diagrams provided in your product's specific assembly guide. General steps typically include:

- Attaching legs to the main frame.
- Securing armrests to the frame.
- Assembling the adjustable backrest mechanism.
- Ensuring all bolts and screws are tightened securely, but do not overtighten.
- Place the cushion onto the assembled chaise lounge.



Figure 1: Product Dimensions. The chaise lounge measures 76.78 inches in length, 32.68 inches in width, and 29.9 inches in height (with backrest upright). The seat height is approximately 15.35 inches.

## 3. OPERATING INSTRUCTIONS

### 3.1. Adjusting the Backrest

The chaise lounge features a 3-position adjustable backrest for customized comfort.

1. To adjust, gently lift the backrest to disengage the support mechanism.
2. Move the backrest to your desired position (upright, reclined, or flat).
3. Ensure the support mechanism is securely engaged in one of the three notches before applying weight.



Figure 2: Side view illustrating the adjustable backrest mechanism. The backrest can be set to various angles for comfort.



Figure 3: Rear view of the chaise lounge, highlighting the sturdy wooden support structure for the adjustable backrest.

## 4. MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your chaise lounge.

### 4.1. Wood Frame Care

- The acacia wood frame has a teak finish designed to resist moisture, fading, and warping.
- Clean the wood frame with a soft cloth dampened with mild soap and water. Wipe dry immediately.
- Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- For prolonged outdoor use, consider applying a wood sealant annually to maintain its protective

properties and appearance.

- Store indoors or cover with a protective cover during inclement weather or off-season to prevent excessive exposure to elements.

#### 4.2. Cushion Care

- The 4-inch thick cushion features water-resistant fabric with a zip-off cover.
- For minor spills, blot immediately with a clean, dry cloth.
- The cushion cover is machine washable. Remove the cover and wash in cold water on a gentle cycle with mild detergent. Air dry or tumble dry on low. Do not bleach.
- Ensure the cushion is completely dry before reattaching to prevent mildew.
- Store cushions indoors during heavy rain or when not in use for extended periods.

#### 4.3. Hardware

- The chaise lounge uses rust-proof hardware.
- Periodically check all bolts and screws to ensure they remain tight. Retighten as necessary to maintain stability.

### 5. TROUBLESHOOTING

If you encounter issues with your chaise lounge, refer to the following common solutions:

- **Instability/Wobbling:** Ensure all assembly hardware is securely tightened. Verify the chaise lounge is placed on a flat, level surface.
- **Backrest Not Adjusting Smoothly:** Check for any obstructions in the adjustment mechanism. Ensure the mechanism is clean and free of debris. Do not force the adjustment.
- **Cushion Slippage:** Ensure the cushion is properly aligned on the frame. Some cushions may have ties or non-slip backing to secure them.
- **Wood Discoloration/Fading:** This can occur over time with exposure to UV rays. Regular application of a wood sealant can help mitigate this.

If problems persist, please contact THINK 30 customer support for assistance.

### 6. SPECIFICATIONS

Feature	Detail
Brand	THINK 30
Model Number	N770P422567T_65429.00CUSH
Color	Cream 3 Fold
Material	Acacia Wood, Fabric, Foam
Product Dimensions (L x W x H)	76.78" x 32.68" x 29.9"
Item Weight	59.08 Pounds

Maximum Weight Recommendation	400 Pounds
Reclining Position Count	3
Required Assembly	Yes
Indoor/Outdoor Usage	Indoor, Outdoor

## **7. WARRANTY AND SUPPORT**

---

### **7.1. Warranty Information**

For specific warranty details regarding your THINK 30 Acacia Wood Outdoor Chaise Lounge, please refer to the warranty card included with your purchase or visit the official THINK 30 website. Warranty coverage typically includes defects in materials and workmanship under normal use.

### **7.2. Customer Support**

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact THINK 30 customer service. Contact information can usually be found on the product packaging or the brand's official website.