

Zopsc Zopsc4kht0lv17p

Zopsc 4K Digital Camera (Model Zopsc4kht0lv17p) Instruction Manual

Your guide to operating and maintaining your Zopsc 4K Digital Camera.

INTRODUCTION

Thank you for choosing the Zopsc 4K Digital Camera. This manual provides essential information for the safe and efficient operation of your camera. Please read it thoroughly before use and keep it for future reference.

This camera features a 75MP image resolution, 4K video recording, 12X optical zoom, auto-focus, and WiFi connectivity, making it suitable for various photography and vlogging needs.

SAFETY INFORMATION

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from direct sunlight or high temperatures.
- Use only approved accessories and power adapters.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support for assistance.

PACKAGE CONTENTS

Verify that all items are present in your camera package:

- 1 x Zopsc 4K Digital Camera
- 1 x USB Cable
- 1 x Hand Strap
- 1 x Storage Bag
- 1 x Cleaning Cloth
- 1 x Instruction Manual (this document)
- 1 x Li Battery (2000mAh, pre-installed or separate)



Image: Zopsc 4K Digital Camera with its accessories, including a USB cable, hand strap, storage bag, cleaning cloth, and the camera itself.

SETUP

1. Battery Installation and Charging

The camera uses a 2000mAh Li-ion battery. Ensure the battery is fully charged before first use.

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the Li-ion battery, ensuring the correct polarity.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the provided USB cable and a compatible USB charger (not included) to charge the battery. The charging indicator will illuminate.

2. Memory Card Installation

The camera supports memory cards up to 256GB (not included). A high-speed card (Class 10 or higher) is recommended for 4K video recording.

1. Locate the memory card slot, typically on the side of the camera.

2. Insert the memory card with the metal contacts facing the correct direction until it clicks into place.
3. To remove, gently press the card until it springs out.

3. Initial Power On

Press and hold the Power Key (refer to the camera diagram) to turn on the camera. The 3-inch screen will display the main interface.



Image: Close-up view of the Zopsc 4K Digital Camera highlighting its various buttons, ports, and interfaces, including the Power Key and Memory Card slot.

OPERATING THE CAMERA

1. Basic Controls

- **Power Key:** Turns the camera on or off.
- **Shutter Button:** Press halfway to focus, fully to take a photo.
- **Mode Dial:** Selects different shooting modes (e.g., Photo, Video, Playback). The camera offers 9 modes.
- **Navigation Buttons:** Used to navigate menus and settings.

- **OK Button:** Confirms selections.

2. Taking Photos

The camera captures images at a maximum resolution of 75MP.

1. Turn on the camera and select Photo mode using the mode dial.
2. Frame your shot using the 3-inch display.
3. The camera features auto-focus technology for fast and accurate subject tracking. Press the shutter button halfway to engage auto-focus.
4. Press the shutter button fully to capture the image.



4K HD Photography

4K

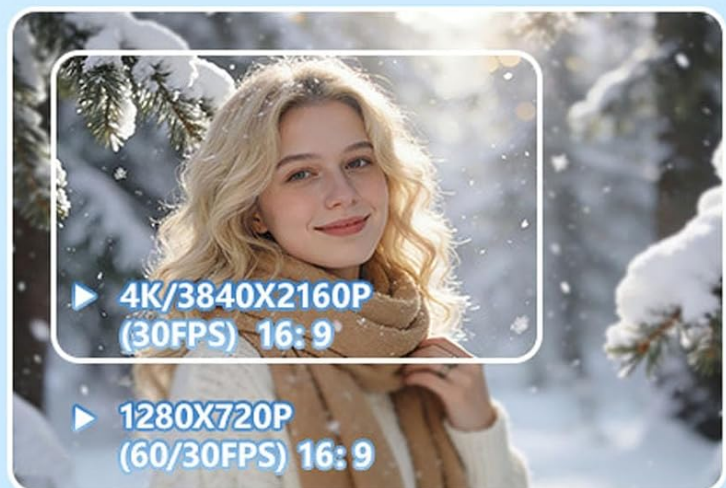


Image: The camera's display showing a captured image and options for 4K HD photography.

3. Recording Videos

Record videos in stunning 4K resolution.

1. Switch to Video mode using the mode dial.

2. Press the shutter button to start recording. A red indicator (REC) will appear on the screen.
3. Press the shutter button again to stop recording.



Image: A visual summary of key camera features, including 4K video recording and WiFi connectivity.

4. 12X Optical Zoom

Utilize the 12X optical zoom to capture distant subjects with clarity. The lens is retractable.

- Use the zoom lever (usually located around the shutter button) to zoom in or out.
- Optical zoom maintains image quality, unlike digital zoom.



12X Optical Zoom

Image: A user demonstrating the camera's 12X optical zoom capability.

5. Filters and Flash

Enhance your photos with built-in filters and ensure proper lighting with the integrated flash.

- **Filters:** Access various built-in filters through the camera's menu settings to add unique effects to your images.
- **Flash:** The integrated flash activates automatically in low-light conditions or can be manually controlled via the menu.

6. Self-Timer Function

The self-timer is useful for group photos or selfies.

1. Navigate to the self-timer settings in the camera menu.
2. Select your desired delay (e.g., 2, 5, 10 seconds).
3. Press the shutter button; the camera will count down before taking the photo.



Image: Visual representation of the self-timer function and its application in various shooting scenarios.

7. WiFi Connectivity

Transfer photos and videos wirelessly to your smartphone or computer.

1. Enable WiFi on your camera through the settings menu.
2. On your smartphone or computer, search for the camera's WiFi network and connect.
3. Use the dedicated Zopsc app (if available) or a standard file transfer method to access and transfer files.



Image: The camera connected wirelessly to a smartphone, illustrating the WiFi sharing feature.

MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the camera body and lens. For stubborn smudges on the lens, use a specialized lens cleaning solution and cloth.
- **Storage:** When not in use, store the camera in the provided storage bag in a cool, dry place, away from dust and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge it regularly, even if not in use, to maintain battery health.

TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Try charging the battery for at least 30 minutes.
Cannot take photos/record videos.	Check if a memory card is inserted and has sufficient free space. Ensure the camera is in the correct mode (Photo/Video).
Images are blurry.	Ensure the lens is clean. Allow the camera to auto-focus by pressing the shutter button halfway before fully pressing. Check lighting conditions.
WiFi connection issues.	Restart both the camera and the connecting device (smartphone/computer). Ensure the camera's WiFi is enabled and you are within range.

If the problem persists, please contact Zopsc customer support.

SPECIFICATIONS

Feature	Detail
Model Number	Zopsc4kht0lv17p
Image Resolution	75 Megapixels (Maximum)
Video Resolution	4K (Maximum)
Optical Zoom	12X
Screen Size	3 Inch
Storage Support	Up to 256GB memory card (not included)
Battery	Li Battery x 1, 2000mAh
Connectivity	WiFi
Material	ABS

WARRANTY

This Zopsc 4K Digital Camera is covered by a manufacturer warranty for 90 days from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Zopsc customer support.

- **Online Support:** Visit the official Zopsc website for FAQs and support resources.
- **Email Support:** Refer to your product packaging or the official website for customer service email addresses.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question