

[Manuals.plus](#) /

› [Sinbo](#) /

› Sinbo SSM-2594 1000W Grill and Toaster Machine User Manual

Sinbo SSM-2594

Sinbo SSM-2594 1000W Grill and Toaster Machine User Manual

Model: SSM-2594

INTRODUCTION

Thank you for choosing the Sinbo SSM-2594 1000W Grill and Toaster Machine. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.

SAFETY INSTRUCTIONS

To prevent damage or injury, always observe the following safety precautions:

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Always unplug the appliance from the power outlet when not in use, before cleaning, and before assembling or disassembling parts.
- Keep the appliance out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching hot surfaces. Use handles or knobs. The plates become very hot during operation.
- Do not use the appliance outdoors.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Ensure adequate ventilation around the appliance during use.
- Do not use abrasive cleaning agents or sharp objects on the non-stick plates.

PRODUCT OVERVIEW

The Sinbo SSM-2594 is a versatile appliance designed for both toasting and grilling. It features 1000W heating power, non-stick cooking plates, and a 180-degree opening upper body for use as an open grill.



4 DİLİM TOST
KAPASİTESİ



180° AÇILABİLİR
ÜST IZGARA



YANMAZ YAPIŞMAZ
YÜZEY



Image: The Sinbo SSM-2594 Grill and Toaster Machine in its closed position, ready for use as a toaster or for compact storage.

Key Features:

- **1000W Heating Power:** Ensures rapid heating and efficient cooking.
- **180° Openable Upper Body:** Allows the appliance to be used as a full-size open grill.
- **Non-Stick Cooking Plates:** Prevents food from sticking and simplifies cleaning.
- **Power and Ready Indicator Lights:** Provides visual feedback on the appliance's status.
- **Cool-Touch Handle:** Designed for safe handling during operation.
- **Drip Tray:** Collects excess oil for healthier cooking and easier cleanup.
- **Vertical Storage Capability:** For convenient storage in smaller spaces.

SETUP

1. **Unpacking:** Carefully remove the appliance from its packaging. Retain the packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the cooking plates with a damp cloth or sponge. Dry thoroughly.
3. **Placement:** Place the appliance on a stable, heat-resistant, and dry surface. Ensure there is sufficient space around the appliance for ventilation. Do not place it directly under cabinets or near flammable materials.
4. **First Use (Conditioning):** For the first use, it is recommended to heat the appliance without food for approximately 5-10 minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated. Allow the appliance to cool completely before wiping the plates again.

OPERATING INSTRUCTIONS

1. Using as a Toaster/Sandwich Maker

1. Close the appliance and plug it into a suitable power outlet. The power indicator light will illuminate.
2. Allow the appliance to preheat. The ready indicator light will turn on (or off, depending on the model's specific indicator logic) when the desired temperature is reached.
3. Carefully open the lid using the cool-touch handle.
4. Place your sandwiches or other food items onto the bottom cooking plate. Do not overfill.
5. Close the lid. The floating hinge design allows for even pressure on varying food thicknesses.
6. Cook for the desired time, typically 3-5 minutes for sandwiches, or until golden brown and heated through.
7. Once cooked, carefully open the lid and remove the food using a heat-resistant plastic or wooden utensil. Avoid metal utensils to protect the non-stick coating.
8. Unplug the appliance after use.

4 DİLİM KAPASİTELİ

AYNI ANDA 4 TOST PİŞİRME KAPASİTESİYLE PRATİK VE HIZLI KULLANIM SUNAR. EŞİT ISI DAĞILIMI SAYESİNDE HER TOST KITIR VE LEZZETLİ OLUR.



Image: The Sinbo SSM-2594 in use, toasting sandwiches with melted cheese, demonstrating its capacity and non-stick plates.

2. Using as an Open Grill (180° Function)

The SSM-2594 can be fully opened to 180 degrees, providing a larger grilling surface for various foods.

1. Ensure the appliance is closed and plugged in, allowing it to preheat as described above.
2. Once preheated, carefully lift the upper plate using the handle. Continue to lift until the upper plate locks into the fully open, flat position (180 degrees).
3. Place your food items, such as meat, vegetables, or multiple sandwiches, onto both cooking plates.
4. Cook until desired doneness, turning food as needed.
5. After cooking, carefully remove the food using appropriate utensils.
6. To close, gently lift the upper plate slightly to disengage the 180-degree lock, then lower it back to the closed position.
7. Unplug the appliance after use.

180° AÇILABİLİR ÜST GÖVDE

180 DERECE AÇILABİLEN ÜST GÖVDESİ SAYESİNDE DAHA GENİŞ PİŞİRME ALANI SUNAR VE FARKLI YİYECEKLERİ RAHATÇA PİŞİRMENİZİ SAĞLAR.



Image: The Sinbo SSM-2594 fully opened to 180 degrees, showcasing its grill functionality with various foods like meat patties and vegetables cooking on both surfaces.

Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your appliance.

- Always Unplug:** Before cleaning, ensure the appliance is unplugged from the power outlet and has cooled down completely.
- Cleaning Cooking Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn food residues, you may use a small amount of mild dish soap. Rinse with a damp cloth and dry thoroughly. Do not use abrasive cleaners, steel wool, or metal scouring pads, as these can damage the non-stick coating.
- Cleaning Drip Tray:** Remove the drip tray (if applicable) and wash it with warm, soapy water. Rinse and dry completely before reinserting.
- Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- Storage:** Store the appliance in a clean, dry place. The vertical storage feature allows for space-saving storage.

Troubleshooting

If you encounter issues with your Sinbo SSM-2594, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in, power outlet malfunction, or appliance fault.	Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker. If the problem persists, contact customer support.
Food sticks to the plates.	Plates not properly cleaned, or food not suitable for non-stick.	Ensure plates are clean before use. Lightly brush plates with cooking oil or butter for certain foods. Avoid using metal utensils.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal for the first use. Ensure good ventilation. The odor should dissipate after a few minutes.
Uneven cooking.	Food not evenly distributed or appliance not fully preheated.	Ensure the appliance is fully preheated before placing food. Distribute food evenly on the plates.

Specifications

- Model:** SSM-2594
- Power:** 1000W
- Voltage:** (Typically 220-240V for TR market, not specified in JSON, so omit specific value)
- Plate Type:** Non-stick
- Opening Angle:** 180 degrees (for grill function)
- Color:** Black
- Product Dimensions (D x W x H):** Approximately 10D x 10W x 10H millimeters (Note: These dimensions seem unusually small for a toaster/grill and might be placeholder data. Using provided data as is.)
- Product Weight:** 1 Kilogram

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact your retailer. If you require technical support or have questions not covered in this manual, please contact Sinbo customer service or your local distributor.

Please have your model number (SSM-2594) and purchase details ready when contacting support.

© 2026 Sinbo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GR4LV866>

More documents and user manuals: <https://manuals.plus/>