

Lemolifys XB-ws-gc

Lemolifys 4-in-1 Cordless Electric Weed Trimmer/Mower/Edger/Pruner

Model: XB-ws-gc

Brand: Lemolifys

1. INTRODUCTION

The Lemolifys 4-in-1 Cordless Electric Weed Trimmer (Model XB-ws-gc) is a versatile garden tool designed for efficient lawn maintenance. This battery-operated device functions as a weed trimmer, grass shear, edger, and electric brush cutter. Its cordless design offers freedom of movement, eliminating the need for power outlets or extension cords. Weighing approximately 2 kg (3 pounds), it is lightweight and easy to handle for various users. The tool is powered by a high-performance 20000 RPM brushless motor, providing efficient and quiet operation with zero direct emissions. This manual provides essential information for the safe and effective use of your Lemolifys weed trimmer. Please read it thoroughly before assembly and operation.

2. SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow safety instructions can result in serious injury or property damage.

- **Read the Manual:** Familiarize yourself with all controls and proper usage before operating the trimmer.
- **Personal Protective Equipment (PPE):** Always wear safety glasses or goggles, long pants, sturdy footwear, and gloves when operating the trimmer. Hearing protection is also recommended.
- **Safety Lock:** The trimmer is equipped with a safety lock button to prevent accidental starting. To operate, press the safety button and the power switch simultaneously.
- **Clear Work Area:** Ensure the work area is clear of debris, rocks, wires, and other objects that could be thrown by the cutting head or damage the blades.
- **Keep Bystanders Away:** Maintain a safe distance from other people and pets while operating the trimmer.
- **Blade Guard:** The weed guard and shock-absorbing steel ring are designed to prevent flying debris and protect the tool. Ensure they are properly installed before use.

- **Battery Safety:** Use only the provided charger and batteries. Do not expose batteries to extreme temperatures or moisture. Fully charge batteries before first use to prolong their lifespan.
- **Maintenance:** Disconnect the battery before performing any maintenance, cleaning, or blade changes.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 × Rechargeable Weed Eater Unit
- 1 × Circular Saw Blade
- 2 × Flat Iron Blades
- 1 × 3T Blade
- 1 × Thread Blade
- 1 × Replacement Thread
- 2 × 3.0 Ah Lithium-Ion Batteries
- 1 × Battery Charger
- 1 × Effort-Saving Handle
- 1 × Grass Barrier (Weed Guard)
- 1 × Detachable Wheels
- 1 × User Manual (This document)

4. SETUP AND ASSEMBLY

Assembly is required before first use. Follow these steps carefully:

1. **Attach the Handle:** Secure the effort-saving handle to the main shaft. Adjust its position for comfortable grip and balance.
2. **Install the Grass Barrier/Weed Guard:** Mount the grass barrier (weed guard) to the trimmer head. Ensure it is firmly attached to prevent debris from flying towards the user.
3. **Select and Install Blade:** Choose the appropriate blade for your task (circular saw, flat iron, 3T, or thread blade). Refer to the operating section for blade selection. Securely attach the chosen blade to the trimmer head.
4. **Attach Detachable Wheels (Optional):** For use as a wheeled mower or for added stability, attach the detachable wheels to the trimmer shaft. The plug-and-play design allows for easy attachment without additional tools.
5. **Insert Battery:** Ensure the battery is fully charged. Align the battery with the battery slot on the trimmer and slide it in until it clicks into place.

Cordless Weed Wacker With Wheel

easy use for garden and yard



Image: Illustration of the cordless weed wacker with detachable wheels and adjustable angle, demonstrating easy assembly and use in garden and yard settings.

4-IN-1 Multifunction Cordless Weed Wacker



Image: Visual representation of the 4-in-1 multifunctionality, showing the pruner, mower, edger, and trimmer modes with different blade types.

5. OPERATING INSTRUCTIONS

The Lemolifys 4-in-1 trimmer is designed for various cutting tasks. Always ensure the battery is fully charged before starting.

5.1 Starting and Stopping

1. **To Start:** Press and hold the safety lock button, then press the power switch. Release the safety lock button once the trimmer starts.
2. **To Stop:** Release the power switch.

5.2 Operating Modes and Blade Selection

The trimmer offers different modes based on the installed blade and configuration:

- **Trimmer Mode (Thread Blade):** Ideal for light grass and weed trimming around obstacles, flower beds, and walkways.
- **Edger Mode (Flat Iron Blades):** Use for precise edging along sidewalks, driveways, and garden borders. The detachable wheels can assist in maintaining a consistent height.
- **Mower Mode (Circular Saw Blade or 3T Blade with Wheels):** For cutting thicker grass or small areas of lawn. Attach the detachable wheels for easier maneuverability and even cutting.
- **Pruner/Brush Cutter Mode (3T Blade or Circular Saw Blade):** Suitable for cutting tougher weeds, blackberries, thorns, and light brush. The powerful brushless motor and robust blades handle these tasks efficiently.

The trimmer features an adjustable head that rotates to easily reach hard-to-access areas and allows for trimming without damaging plants or landscape. The 12-inch cutting width helps cover larger areas efficiently.

12" Larger Cutting Width & Cordless Design No Limited

OUR
12" Bigger
Cutting Width
20000Rpm

12 INCH
 CUTTING WIDTH

VS

Others
6" Small
Cutting Width
4000RPM

Image: Comparison illustrating the 12-inch larger cutting width of the Lemolifys trimmer versus smaller alternatives, highlighting efficiency.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your trimmer.

- **Cleaning:** After each use, disconnect the battery and clean the trimmer head, blades, and guard with a brush or damp cloth. Remove any accumulated grass or debris.
- **Blade Inspection and Replacement:** Regularly inspect blades for wear, damage, or dullness. Replace worn or damaged blades immediately. Always use genuine replacement parts.
- **Battery Care:** Store batteries in a cool, dry place. Avoid fully discharging batteries before recharging. Fully charge batteries before long-term storage.
- **Charging:** The 3000 mAh batteries fully charge in 3-4 hours, providing 40-60 minutes of runtime. Monitor battery life on the digital display.



Image: Detailed view of the 21V 3.0AH Lithium Max battery, showing internal cells and a graph illustrating battery retention over cycle time compared to other brands.

7. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged; Battery not inserted correctly; Safety lock not engaged; Power switch faulty.	Charge battery; Re-insert battery firmly; Press safety lock and power switch simultaneously; Contact customer support.
Reduced cutting performance	Dull or damaged blade; Battery low; Excessive debris on blade/head.	Replace blade; Recharge battery; Clean trimmer head and blade.
Excessive vibration	Damaged or unbalanced blade; Loose components.	Inspect and replace blade if necessary; Check all connections are secure.
Short battery runtime	Battery not fully charged; Battery degradation over time.	Ensure full charge (3-4 hours); Consider replacing battery if significantly degraded.

If problems persist, please contact customer support for assistance.

8. SPECIFICATIONS

- **Brand:** Lemolifys
- **Model Number:** XB-ws-gc
- **Power Source:** Battery Powered (2 x 3.0 Ah Lithium-Ion Batteries included)
- **Motor Type:** Brushless
- **Speed:** 20000 RPM
- **Cutting Width:** 12 inches
- **Item Weight:** Approximately 1.36 kg (3 pounds)
- **Product Dimensions:** 40.6 cm (Length) x 24.9 cm (Width)
- **Battery Charge Time:** 3-4 hours
- **Battery Runtime:** 40-60 minutes (per charge)
- **Assembly:** Required
- **Color:** Yellow

20000RPM Brushless Motor More Energy and Less Consumption

performance

Increase:



50%

lifespan



40%

power



35%

runtime

Reduce:



25%

lifespan



30%

power



42%

runtime

Before

After

Image: Diagram illustrating the 20000 RPM brushless motor, highlighting increased lifespan, power, and runtime, and reduced friction compared to brushed motors.

9. WARRANTY AND SUPPORT

Lemolifys offers a **12-month after-sales service warranty** to ensure the durability and reliability of your weed trimmer. This warranty covers manufacturing defects and issues arising from normal use.

For any assistance, questions, or warranty claims, please do not hesitate to contact our customer support team. Our customer support is available 24/7 to help you with any needs related to your product.

Contact Information: Please refer to the contact details provided on the product packaging or the official Lemolifys website for the most up-to-date support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question