

WERHY H8

WERHY H8 Electric Scooter User Manual

Model: H8 | Brand: WERHY

1. INTRODUCTION AND OVERVIEW

- The WERHY H8 Electric Scooter is designed for efficient commuting and recreational riding. It features a powerful motor, extended range, and advanced safety features to ensure a comfortable and secure riding experience.
- **Powerful Performance:** Equipped with a 500W motor, the scooter can handle inclines up to 15 degrees and reach a top speed of 22 MPH.
 - **Extended Range:** A high-capacity battery provides a travel range of 22 to 28 miles on a single charge, minimizing the need for frequent recharging.
 - **Comfortable Ride:** Dual shock absorbers and 10-inch solid tires contribute to a smooth ride, reducing fatigue on various terrains.
 - **Enhanced Safety:** The scooter features a dual braking system (electronic and mechanical) for reliable stopping power, along with bright headlights and taillights for visibility.
 - **Smart Control:** Connect to the scooter via a smart app to control speed, cruise settings, lights, and locking functions. A digital display provides real-time data.
 - **Portable Design:** The scooter features a 3-second folding mechanism, making it lightweight and easy to transport or store.



Image 1.1: Overview of the WERHY H8 Electric Scooter highlighting its main features.

Video 1.1: An animated overview demonstrating the WERHY Electric Scooter's features, including its motor, battery, and folding mechanism.

2. SETUP AND ASSEMBLY

The WERHY H8 Electric Scooter comes mostly pre-assembled. Follow these steps for final setup:

1. **Unfolding the Scooter:** Carefully lift the handlebar stem until it locks into place. Ensure the folding mechanism is securely latched.
2. **Handlebar Attachment:** Attach the handlebars to the stem, ensuring all cables are properly connected and not pinched. Secure with the provided screws.
3. **Initial Charge:** Before first use, fully charge the scooter's battery. Connect the charger to the charging port and a power outlet. The indicator light on the charger will change when fully charged.
4. **Tire Check:** Verify that the 10-inch solid tires are free from damage.



Image 2.1: Demonstrating the easy folding capability of the WERHY H8 Electric Scooter for transport.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

To power on the scooter, press and hold the power button on the digital display until the screen illuminates. To power off, press and hold the same button until the display turns off.

3.2 Acceleration and Braking

To accelerate, gently press the throttle lever located on the right handlebar. To brake, use the handbrake lever on the left handlebar, which activates both the electronic front brake and the mechanical rear drum brake. The taillight will illuminate upon braking.

3.3 Speed Modes

The WERHY H8 offers 4 distinct speed modes, catering to different riding preferences and conditions:

- **Walk Mode:** Speed at 4 MPH (up to 28 Miles range) - Ideal for walking alongside the scooter.
- **Eco Mode:** Speed at 8 MPH (up to 23 Miles range) - For energy-efficient and relaxed rides.
- **Drive Mode:** Speed at 11 MPH (up to 20 Miles range) - Balanced speed for general commuting.
- **Sport Mode:** Speed at 22 MPH (up to 15 Miles range) - For maximum performance and speed.

Switch between modes using the controls on the handlebar or via the smart app.

3.4 Smart App Control

Download the dedicated WERHY app to unlock additional features and customize your riding experience. The app allows for:

- Bluetooth Pairing
- Light Control
- Digital Lock
- Vehicle Settings Adjustment
- Battery Level Monitoring
- Switching Start Modes



Image 3.1: The 4-speed smart control system for varied riding experiences.



Image 3.2: The smart app interface for comprehensive scooter control.



Image 3.3: The scooter's headlight and taillight for night visibility.

4. SAFETY GUIDELINES

Always prioritize safety when operating your electric scooter. Adhere to local regulations and wear appropriate safety gear, including a helmet.

- **Braking System:** The dual braking system provides effective stopping. Familiarize yourself with its response.
- **Visibility:** Utilize the bright headlight and taillight, especially during low-light conditions or night rides.
- **Tire Stability:** The 10-inch solid tires are designed for stability and grip. Avoid riding on excessively rough or slippery surfaces.
- **Weight Limit:** Do not exceed the maximum weight capacity of 265 pounds (120 kg) to ensure safe operation and prevent damage.
- **Environmental Conditions:** While the scooter has some water resistance (IP56 for some components, IP65 for battery compartment on similar models), avoid riding in heavy rain or through deep puddles to prevent electrical damage.



Image 4.1: The 10-inch solid tires provide stability and shock absorption.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your WERHY H8 Electric Scooter.

- **Battery Care:** Charge the battery fully after each use and avoid completely draining it. Store the scooter in a cool, dry place if not used for extended periods, ensuring the battery is partially charged.
- **Cleaning:** Wipe down the scooter with a damp cloth. Avoid using high-pressure water jets or harsh chemicals.
- **Brake Inspection:** Periodically check the brake levers and cables for proper function and adjustment.
- **Tire Condition:** Inspect tires for wear and tear. Although solid, excessive damage can affect performance.
- **Folding Mechanism:** Ensure the folding mechanism operates smoothly and locks securely. Lubricate if necessary.

6. TROUBLESHOOTING

If you encounter issues with your WERHY H8 Electric Scooter, consider the following common solutions:

- **Scooter Not Turning On:** Check if the battery is charged. Ensure the power button is pressed and held correctly.
- **Reduced Performance/Range:** This may indicate a low battery charge. Ensure the scooter is fully charged. Riding in Sport Mode or on steep inclines will consume battery faster.
- **Brakes Not Responding:** Inspect brake cables for damage or looseness. Adjust as needed. If issues persist, contact customer support.
- **Unusual Noises:** Check for loose components or debris caught in the wheels or motor area.

For more complex issues, refer to the detailed troubleshooting section in the full manual or contact WERHY customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	WERHY
Model Name	H8
Motor Power	500W
Max Speed	22 MPH
Max Distance Range	22-28 Miles
Wheel Size	10 Inches
Wheel Material	Rubber (Solid)
Frame Material	Aluminum
Weight Limit	265 Pounds
Brake Style	Dual Braking (Electronic/Mechanical)
Suspension Type	Dual Suspension
Special Features	Cruise Control, Digital Display, Foldable, Smart App Control

8. WARRANTY AND SUPPORT

WERHY provides comprehensive warranty coverage for your electric scooter:

- **E-scooter and Parts:** One-year limited warranty.
- **Battery and Motor:** Six-month limited warranty.

For any questions, technical assistance, or warranty claims, please contact WERHY customer service. Refer to the contact information provided in your product packaging or on the official WERHY website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GR8G8K27>

More documents and user manuals: **<https://manuals.plus/>**