

WERHY H0/H03/H6

WERHY Foldable Electric Scooter User Manual

Models: H0, H03, H6
Brand: WERHY

1. SAFETY INFORMATION

Before operating your WERHY Electric Scooter, please read this manual thoroughly to ensure safe and proper use. Always wear appropriate protective gear, including a helmet, knee pads, and elbow pads, when riding. Adult supervision is recommended for younger riders.

General Safety Guidelines:

- Always check the scooter's condition, including brakes, tires, and battery level, before each ride.
- Adhere to local traffic laws and regulations.
- Avoid riding in wet conditions, on slippery surfaces, or in heavy traffic.
- Do not perform stunts or sudden maneuvers.
- Ensure the handlebar is securely locked in place before riding.

2. PRODUCT OVERVIEW

The WERHY Foldable Electric Scooter is designed for efficient and enjoyable personal transportation. It features a robust 350W motor, a long-lasting battery, and smart control options.

Key Features:

- **Stylish and Portable Design:** Modern folding design for easy transport and storage. Lightweight yet supports up to 265 lbs.
- **Powerful Performance:** 350W motor, max speed up to 19 MPH, and 15° max slope angle.
- **Long-lasting Battery:** High-capacity 187.2Ah battery, offering up to 16 miles range on a full charge.
- **Smart APP Control:** Adjust speed and monitor riding information via a smartphone app.
- **Enhanced Safety:** Bright front lights, integrated rear brake lights, front electronic brake, and rear mechanical drum brake.



19MPH
Top Speed 

15Miles
Range 

15%
Uphill climbing 

350^w
Brushless Motor 

APP smart control 

Figure 2.1: WERHY Electric Scooter highlighting key performance features.

Brushless Motor

More Durable, Stable, and Powerful

19MPH
Top Speed



15%
Uphill climbing



350W
Brushless Motor



Figure 2.2: Close-up of the 350W brushless motor.

Battery with overload protection for longer Battery Life



Overload
Protection




Range
15Miles

 


Fast charging
4-5hours

36V

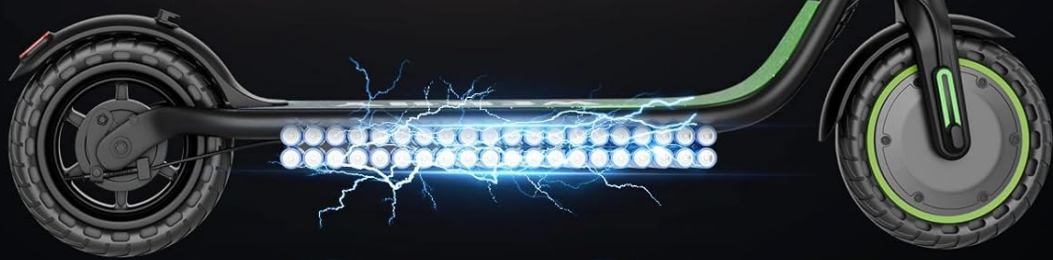

WERHY
Electric Scooter



<5hr

Figure 2.3: Battery specifications including voltage, range, charging time, and overload protection.

Dual Braking System & Dual Lighting System

Multiple layers of protection for travel safety



Figure 2.4: Dual braking and lighting system for enhanced safety.

Smart LED Display

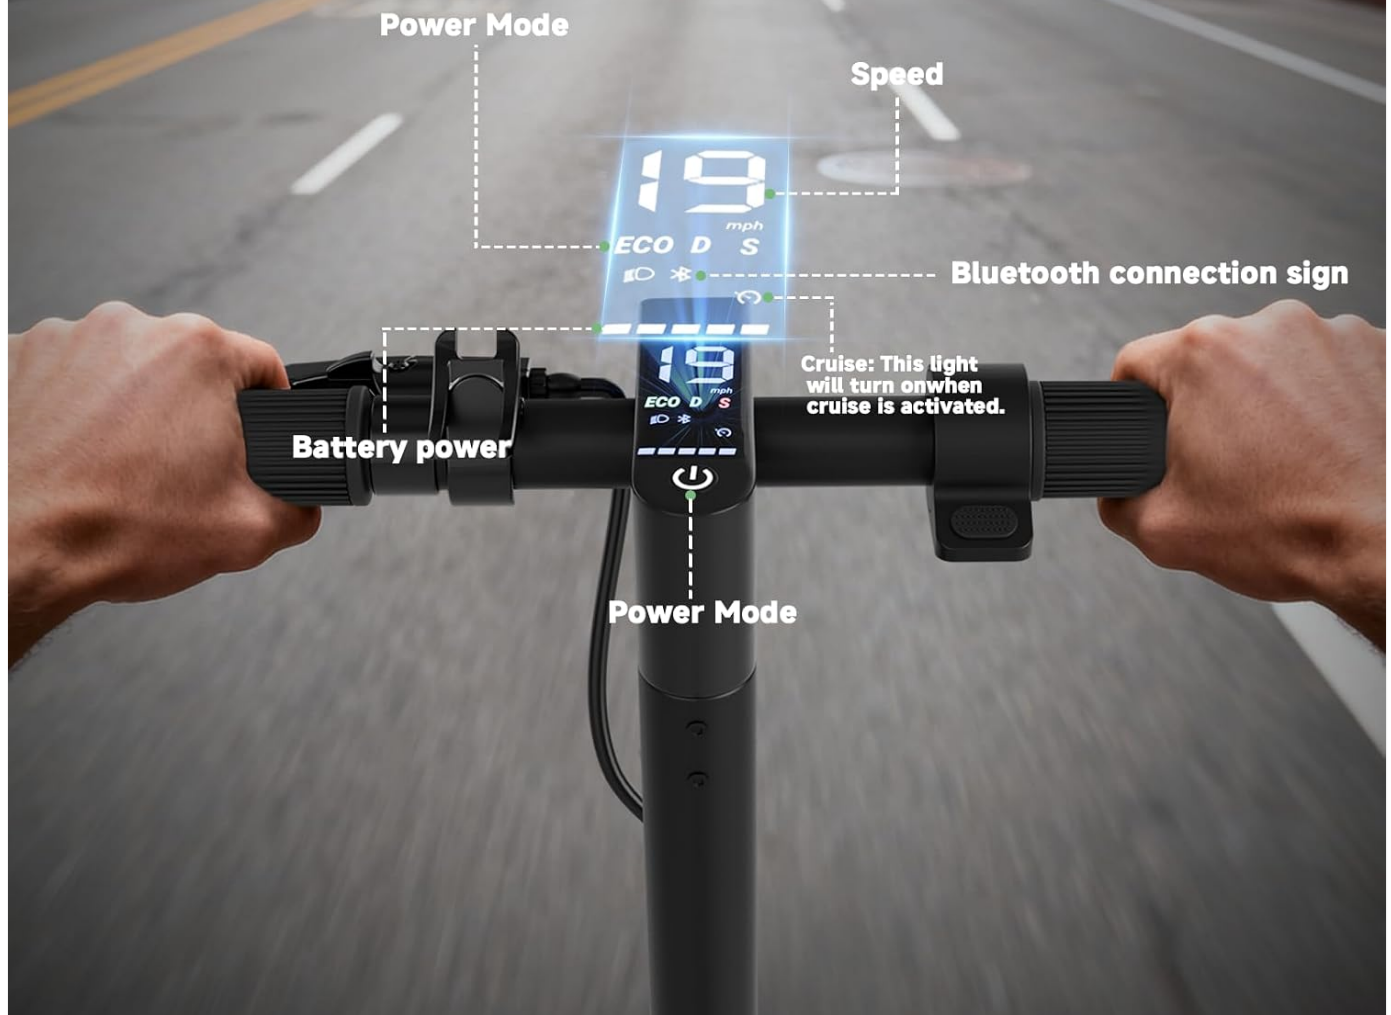


Figure 2.5: Smart LED display showing real-time riding information.

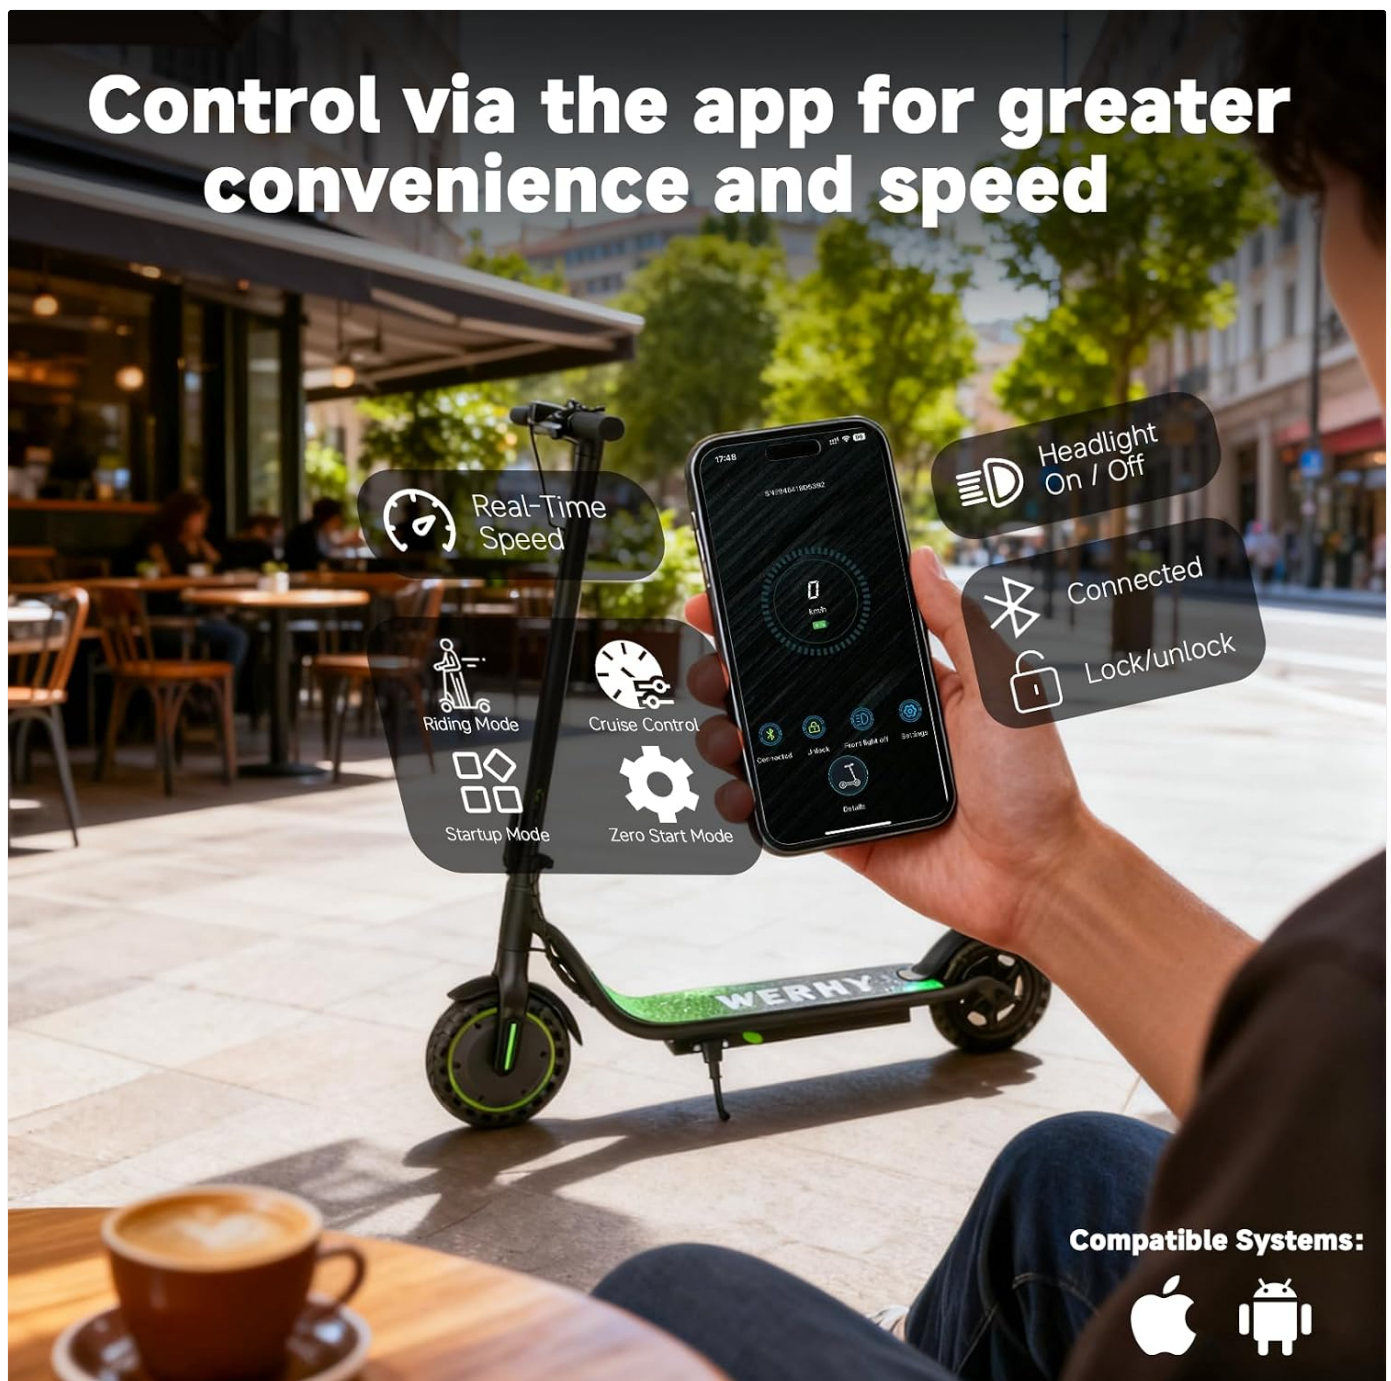


Figure 2.6: Smartphone app interface for controlling scooter settings.

3. SETUP

Unfolding the Scooter:

1. Place the scooter on a flat surface.
2. Locate the folding mechanism near the base of the handlebar stem.
3. Release the latch and carefully lift the handlebar stem until it locks into the upright position. Ensure it is securely fastened.
4. Adjust the handlebar height to a comfortable level by loosening the clamp, extending the stem, and then re-tightening the clamp.

Initial Charging:

Before first use, fully charge the scooter's battery. Connect the charger to the charging port on the scooter and then to a power outlet. The charging indicator will show when charging is complete (typically 4-5 hours).

This video illustrates the WERHY Electric Scooter's folding mechanism for easy storage and portability. It also demonstrates how to adjust the handlebar height to accommodate different rider sizes.

4. OPERATING INSTRUCTIONS

Power On/Off:

- To power on, press and hold the power button on the display until the screen illuminates.
- To power off, press and hold the power button until the display turns off.

Speed Modes:

The scooter offers multiple speed modes: ECO, D (Drive), and S (Sport). Press the power button briefly to cycle through these modes. Each mode offers a different maximum speed and acceleration profile.

- **ECO Mode:** Lower speed for extended battery life and beginner riders.
- **D Mode:** Medium speed for balanced performance.
- **S Mode:** Highest speed for experienced riders and maximum performance.

Acceleration and Braking:

- To accelerate, gently press the throttle lever.
- To brake, use the hand lever for the electronic front brake and the rear mechanical drum brake. Apply both brakes simultaneously for optimal stopping power.

Headlights and Taillights:

Press the power button twice quickly to turn the front headlight and rear taillight on or off. Always use lights when riding in low-light conditions.

Cruise Control:

To activate cruise control, maintain a consistent speed for a few seconds. The scooter will emit a beep and the cruise control indicator will light up. To deactivate, press the throttle or brake lever.

Smartphone App Control:

Download the official WERHY app to unlock additional features, including real-time speed monitoring, riding mode adjustments, digital lock, and brightness control for the display.

This video demonstrates the WERHY Electric Scooter's digital display, showcasing how to switch between ECO, D, and S speed modes, and activate the headlight. It also highlights the scooter's speed capabilities.

A demonstration of the WERHY Electric Scooter's features, including the various speed modes, the integrated bell, and the functionality of the front headlight.

5. MAINTENANCE

Battery Care:

- Charge the battery regularly, even if the scooter is not in use, to maintain its lifespan.
- Avoid completely draining the battery before recharging.
- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.
- The battery features overload protection to prevent damage from overcharging.

Tire Care:

The WERHY Electric Scooter is equipped with 8.5-inch solid tires, which are maintenance-free and do not require inflation. Regularly inspect tires for any signs of wear or damage.

Cleaning:

Wipe the scooter clean with a damp cloth. Do not use high-pressure water jets or immerse the scooter in water.

6. TROUBLESHOOTING

If you encounter any issues with your WERHY Electric Scooter, please refer to the following basic troubleshooting steps. For more complex problems, contact customer support.

- **Scooter not turning on:** Ensure the battery is charged. Try connecting the charger to see if the display responds.
- **Loss of power/speed:** Check battery level. Riding uphill or carrying heavy loads can reduce performance.
- **Brakes not responding:** Inspect brake cables and levers for proper connection and function.
- **App connectivity issues:** Ensure Bluetooth is enabled on your smartphone and the scooter is powered on. Try restarting both devices.

7. SPECIFICATIONS

Feature	Specification
Brand	WERHY
Model Name	H0/H03/H6
Motor Power	350W
Max Speed	19 MPH
Max Range	12-16 Miles
Battery Capacity	187.2Ah (36V)
Tire Type	8.5" Solid Tire
Braking System	Front Electronic Brake, Rear Mechanical Drum Brake
Weight Limit	265 Pounds
Special Features	Digital Display, Cruise Control, Smart APP Control
Age Range (Description)	Adult

8. WARRANTY AND SUPPORT

WERHY is committed to providing high-quality, reliable products. We offer a warranty for different parts: 12 months or 180 days. For specific warranty details or any questions regarding your scooter, please contact WERHY customer support directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GR8PKVL9>

More documents and user manuals: **<https://manuals.plus/>**