

- Manuals.plus /
- › ROSPE /
- › ROSPE 4-in-1 USB Memory Stick 256GB User Manual

ROSPE 001

ROSPE 4-in-1 USB Memory Stick 256GB User Manual

Model: 001 | Brand: ROSPE

1. INTRODUCTION

This manual provides instructions for the ROSPE 4-in-1 USB Memory Stick, designed for efficient data transfer and storage across multiple devices. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

正規品・4IN1 USBメモリ

アダプタ不要の一体型設計で、より速く、より安定したデータ転送を実現

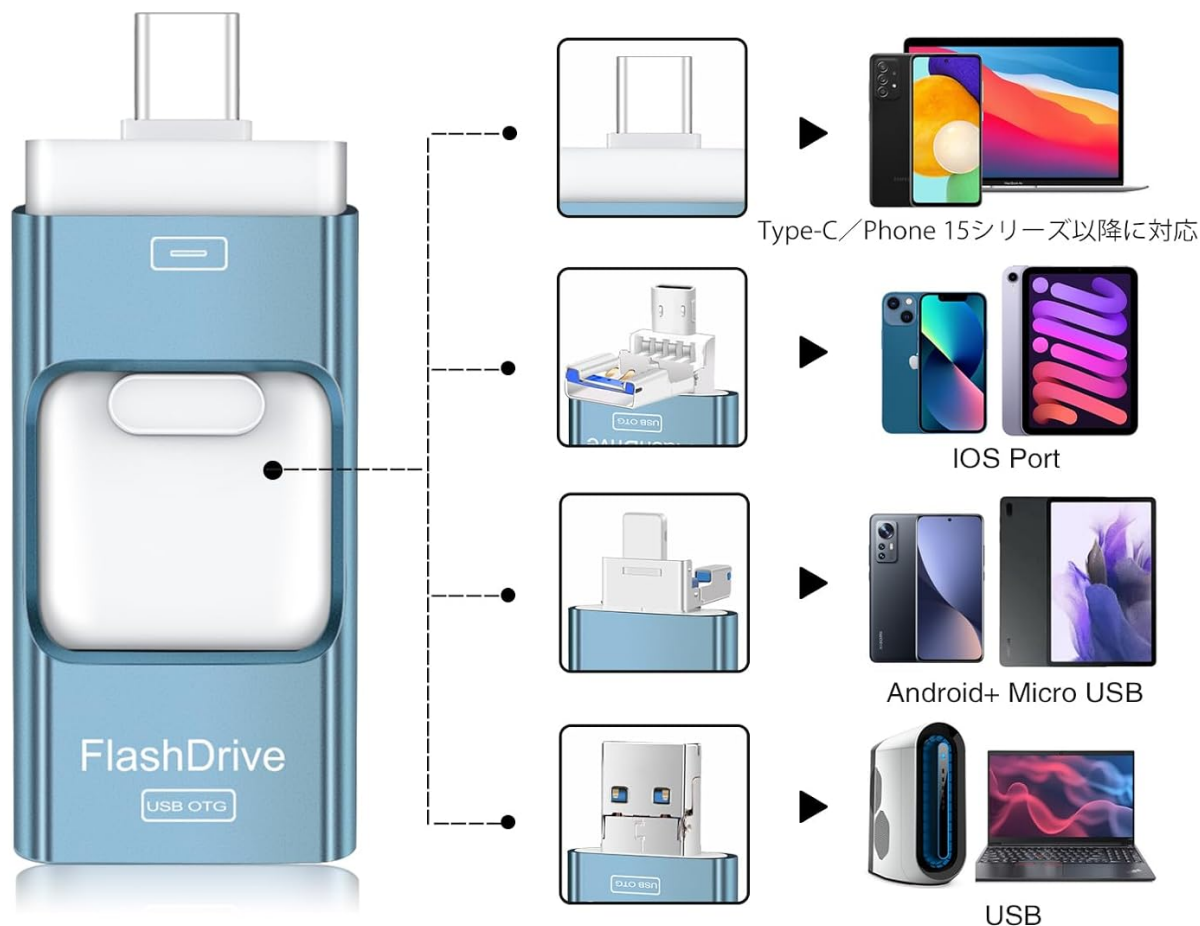 


Image showing the ROSPE 4-in-1 USB Memory Stick with its four connectors (Lightning, Type-C, USB-A, Micro USB) and compatible devices like iPhone, Android phones, and PCs.

2. PRODUCT FEATURES

- **4-in-1 Connectivity:** Features Lightning, Type-C, USB-A, and Micro USB connectors for broad compatibility with various devices.
- **High-Speed Data Transfer:** Supports read speeds up to 80MB/s (USB 3.0/Type-C) for efficient transfer of large files, including 4K videos.
- **Dedicated iOS App:** The "easyflash pro" app for iPhone/iPad offers file management, encryption, and backup functions.
- **Durable Design:** Constructed from aluminum alloy for enhanced durability and a compact, portable form factor.
- **Wide Device Compatibility:** Compatible with a range of devices including iPhones, iPads, MacBooks, Android smartphones and tablets (OTG supported), and PCs.

もっとおしゃれに、もっと大容量に



Image displaying multiple ROSPE USB Memory Sticks and an illustration of 256GB capacity for various file types.

3. SETUP GUIDE

3.1. For iOS Devices (iPhone/iPad)

1. Download the "easyflash pro" app from the App Store.
2. Insert the Lightning connector of the USB memory stick into your iOS device.
3. Open the "easyflash pro" app to manage files.

3.2. For Android Devices

1. Ensure your Android device supports OTG (On-The-Go) functionality.
2. Insert the Type-C or Micro USB connector into your Android device.
3. Access files through your device's native file manager. No dedicated app is required for Android.

3.3. For PC/MacBook

1. Insert the USB-A or Type-C connector into your computer's USB port.

2. The device will be recognized as an external drive.
3. Drag and drop files to transfer.

USBメモリの正しい挿入方法

Androidまたはiosに正しく接続して、USBメモリを認識させてください



● 表側はios用



● 裏側はAndroid用

Image illustrating the correct insertion of the USB memory stick into an iOS device (Lightning side) and an Android device (Type-C/Micro USB side).

4. OPERATING INSTRUCTIONS

4.1. Transferring Files (iOS)

Using the "easyflash pro" app:

1. Connect the USB memory stick to your iPhone/iPad.
2. Open the "easyflash pro" app.
3. Select the files (photos, videos, documents) you wish to transfer.
4. Choose the **"Copy"** option to move files to the USB stick. **Important: Do not use "Cut" for initial transfers to prevent data loss.** Verify successful transfer before deleting original files.

4.2. Transferring Files (Android/PC)

Connect the USB memory stick to your device. Use the device's native file manager (Android) or drag-and-drop functionality (PC/Mac) to copy files to and from the drive.

高速データ転送

待ち時間を減らして、もっと楽しく



音楽



映画



写真



ドキュメント



最大300%高速化

USB 3.0	読み取り	30-80 MB/s
	書き込み	10-40 MB/s
USB 2.0	読み取り	20-26 MB/s
	書き込み	3-6 MB/s

Image showing the USB memory stick connected to a laptop, highlighting high-speed data transfer capabilities for music, movies, photos, and documents. A table compares USB 3.0 (Read: 30-80 MB/s, Write: 10-40 MB/s) and USB 2.0 (Read: 20-26 MB/s, Write: 3-6 MB/s) speeds.

5. COMPATIBILITY

This USB memory stick is designed for broad compatibility across various operating systems and devices.

5.1. Supported Devices

- **iOS Devices:** iPhone 17/Air/Pro/Pro Max, iPhone 16 Pro Max/Pro/Plus/16, iPhone 15 Pro Max/Pro/Plus/15, iPhone 14 Pro Max/Pro/Plus/14, SE3, 13 series, 12 series, 11 series, XR, XS, X, 8, SE2. iPad Air (1st-3rd Gen), iPad mini (1st-5th Gen), iPad (5th-9th Gen). MacBook (Pro/Air). Requires iOS 9.0 or later.
- **Android Devices:** Many OTG-compatible Android smartphones and tablets, including Samsung S6/S6

Edge+/S7/S8/S9/S10+, J5/J7/A3/A5/A7, Note 7/8/9/10, Google Pixel series (Pixel XL, Pixel 2/2A, Pixel 3/3A, Pixel 4, Pixel 5).

- **Computers:** PCs and MacBooks with USB-A or Type-C ports.
- **Other:** Car audio systems with Micro USB or USB-A ports.

幅広い互換性

iOSデバイスだけでなく、Android、PC、さらに車載メディア用USBドライブとしても使えます。



IOS Port / USB Type-C

SamsungシリーズなどOTG対応の多くのAndroid端末に対応。

Samsung S6 / S6 Edge+ / S7 / S8 / S9 / S10 / S10+ / J5 / J7 / A3 / A5 / A7 / Note 7 / Note 8 / Note 9 / Note 10, etc.

For Google Android devices such as Google Pixel series,

Pixel XL, Pixel 2, Pixel 2A, Pixel 2A, Pixel 3A, Pixel 3, Pixel 4, Pixel 5, etc.

ROSPE USBメモリは通常のUSB-Aインターフェースにも対応し、起動可能なUSBメモリやカーオーディオ用メディアとしても使用できます。

Android端末はOTG対応で、アプリは不要です。

Fits for Phone SE / Phone 5S / Phone 5C
Phone 5 / Phone 12 / Phone 12 Pro
Phone 12 Pro Max / Phone 11
Phone 11 Pro / Phone 11 Pro Max
Phone XS / Phone XS MAX / Phone XR
Phone X / Phone 8 Plus / Phone 8
Phone 7 Plus / Phone 7 / Phone 6s Plus
Phone 6s / Phone 6 / Phone 6 plus
Pad Air 2 / Pad Air 1 gen / Pad
Pad mini 4 (3/2/1) / Pod touch 5
Macbook / Macbook pro

iOS 9.0以上が必要です。



USB Type-C / Micro USB / USB-A

Image illustrating the wide range of compatible devices, including iPhones, iPads, MacBooks, Android phones, and PCs, with a detailed list of supported models and operating system requirements.

6. DATA SECURITY

The "easyflash pro" app for iOS devices includes file encryption features to protect your data.


 
1. Within the app, you can encrypt important photos, videos, and documents.
2. This feature helps mitigate privacy risks if the USB memory stick is lost.
3. For enhanced security, consider backing up data to multiple locations, such as your PC via the USB 3.0 port.




Image comparing file management with and without the dedicated app, emphasizing the security benefits of using the 'easyflash pro' app for iOS devices, including password/Touch ID protection.

7. PRODUCT SPECIFICATIONS

Brand	ROSPE
Model Number	001
Memory Capacity	256 GB
Read Speed	Up to 80 MB/s
Flash Memory Type	USB
Hardware Interface	USB Type A, USB Type C, Lightning, Micro USB
Video Speed Class	V10
Color	Blue
UPC	611834282588
Country of Origin	China
Warranty	1 Year
Dimensions	4.29 cm (length) x 2.21 cm (width)
Weight	8.5 g

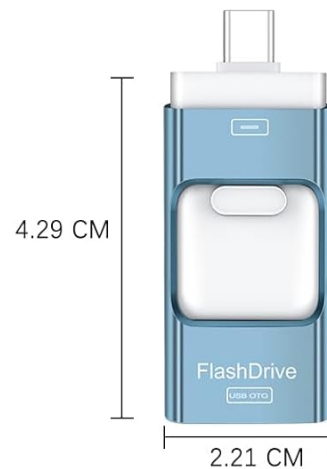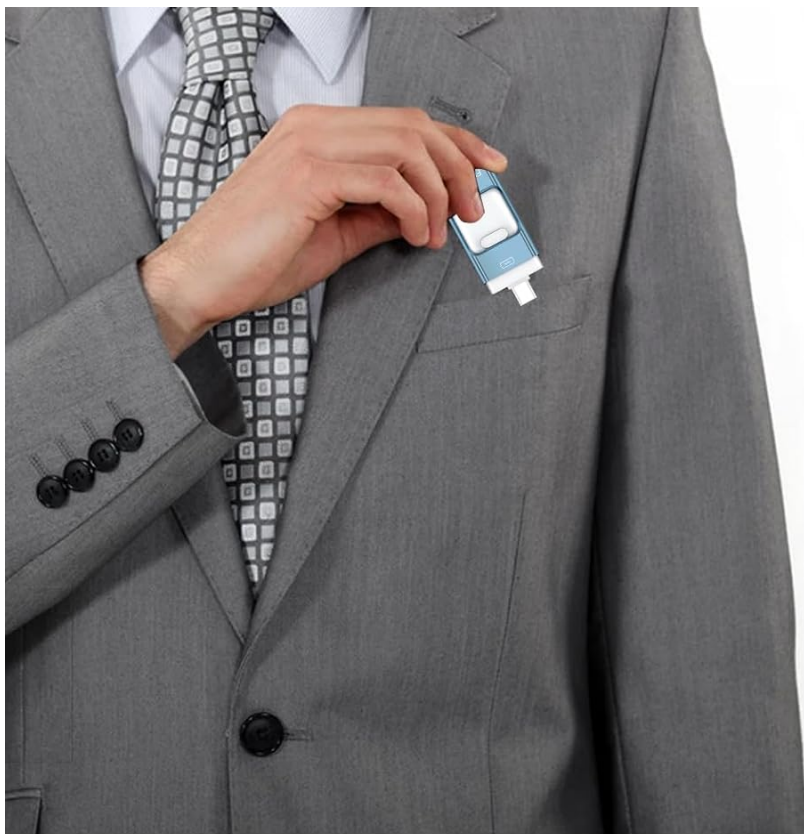 

重量=8.5 g

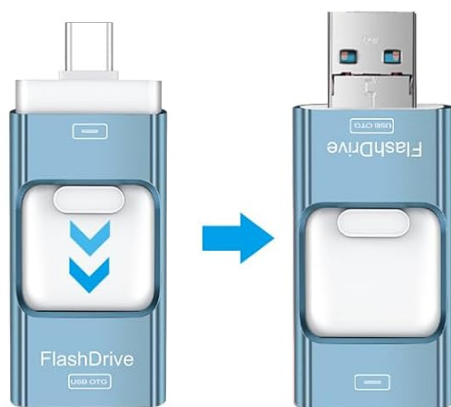 

スライド式デザイン

小さくても信頼できる



4 in 1



軽量



柔軟



信頼性抜群

Image showing the compact size and dimensions of the USB memory stick (4.29 cm length, 2.21 cm width, 8.5g weight), highlighting its 4-in-1 functionality, lightweight, flexibility, and reliability.

8. TROUBLESHOOTING

8.1. Device Not Recognized

- **For iOS:** Ensure the "easyflash pro" app is installed and open. Check if the Lightning connector is fully inserted.
- **For Android:** Verify your device supports OTG. Try restarting your device. Ensure the connector (Type-C or Micro USB) is fully inserted.
- **For PC/Mac:** Try a different USB port. Ensure the USB-A or Type-C connector is fully inserted. Restart your computer.

8.2. Slow Transfer Speeds

- Ensure you are using a USB 3.0 compatible port on your computer for optimal speeds. USB 2.0 ports will result in slower transfers.

- Avoid transferring an excessive number of small files simultaneously, as this can reduce overall speed.

8.3. Data Loss During Transfer

- Always use the **"Copy"** function when moving files, especially for the first time. Avoid **"Cut"** until you have verified the files are safely stored on the USB memory stick.
- Consider backing up critical data to multiple locations (e.g., both the USB stick and your computer) to prevent accidental loss.

8.4. App Issues (iOS)

- Ensure your "easyflash pro" app is updated to the latest version.
- Restart the app or your iOS device if it freezes or malfunctions.
- Check for sufficient storage space on both your device and the USB stick.

9. CARE AND MAINTENANCE

- Keep the USB memory stick dry and away from extreme temperatures.
- Avoid dropping the device or subjecting it to strong impacts.
- Regularly back up important data to other storage devices to prevent loss.
- Clean the connectors gently with a dry, lint-free cloth if necessary.
- Always safely eject the USB memory stick from your computer or device before removing it physically.

10. WARRANTY AND CUSTOMER SUPPORT

This ROSPE USB Memory Stick comes with a 1-year warranty.

10.1. Contacting Support

If you encounter any issues or have questions, please contact our customer support team through Amazon:

1. Go to your Amazon account.
2. Navigate to "Order History".
3. Select your order for this product.
4. Click on the seller's name.
5. Choose "Contact Seller".

Our team is committed to providing prompt and courteous assistance to ensure your satisfaction.

© 2026 ROSPE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GR8WR4VW>

More documents and user manuals: **<https://manuals.plus/>**