

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [G-Shock](#) /

> [G-Shock Casio GA2100BM Watch User Manual](#)

## G-Shock GA2100

# G-Shock Casio GA2100BM Watch User Manual

Model: GA2100BM

## INTRODUCTION

---

This manual provides detailed instructions for the proper use and care of your G-Shock Casio GA2100BM watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The GA2100BM features an octagonal bezel, a durable carbon core guard structure, and 200-meter water resistance, designed for robust daily use.

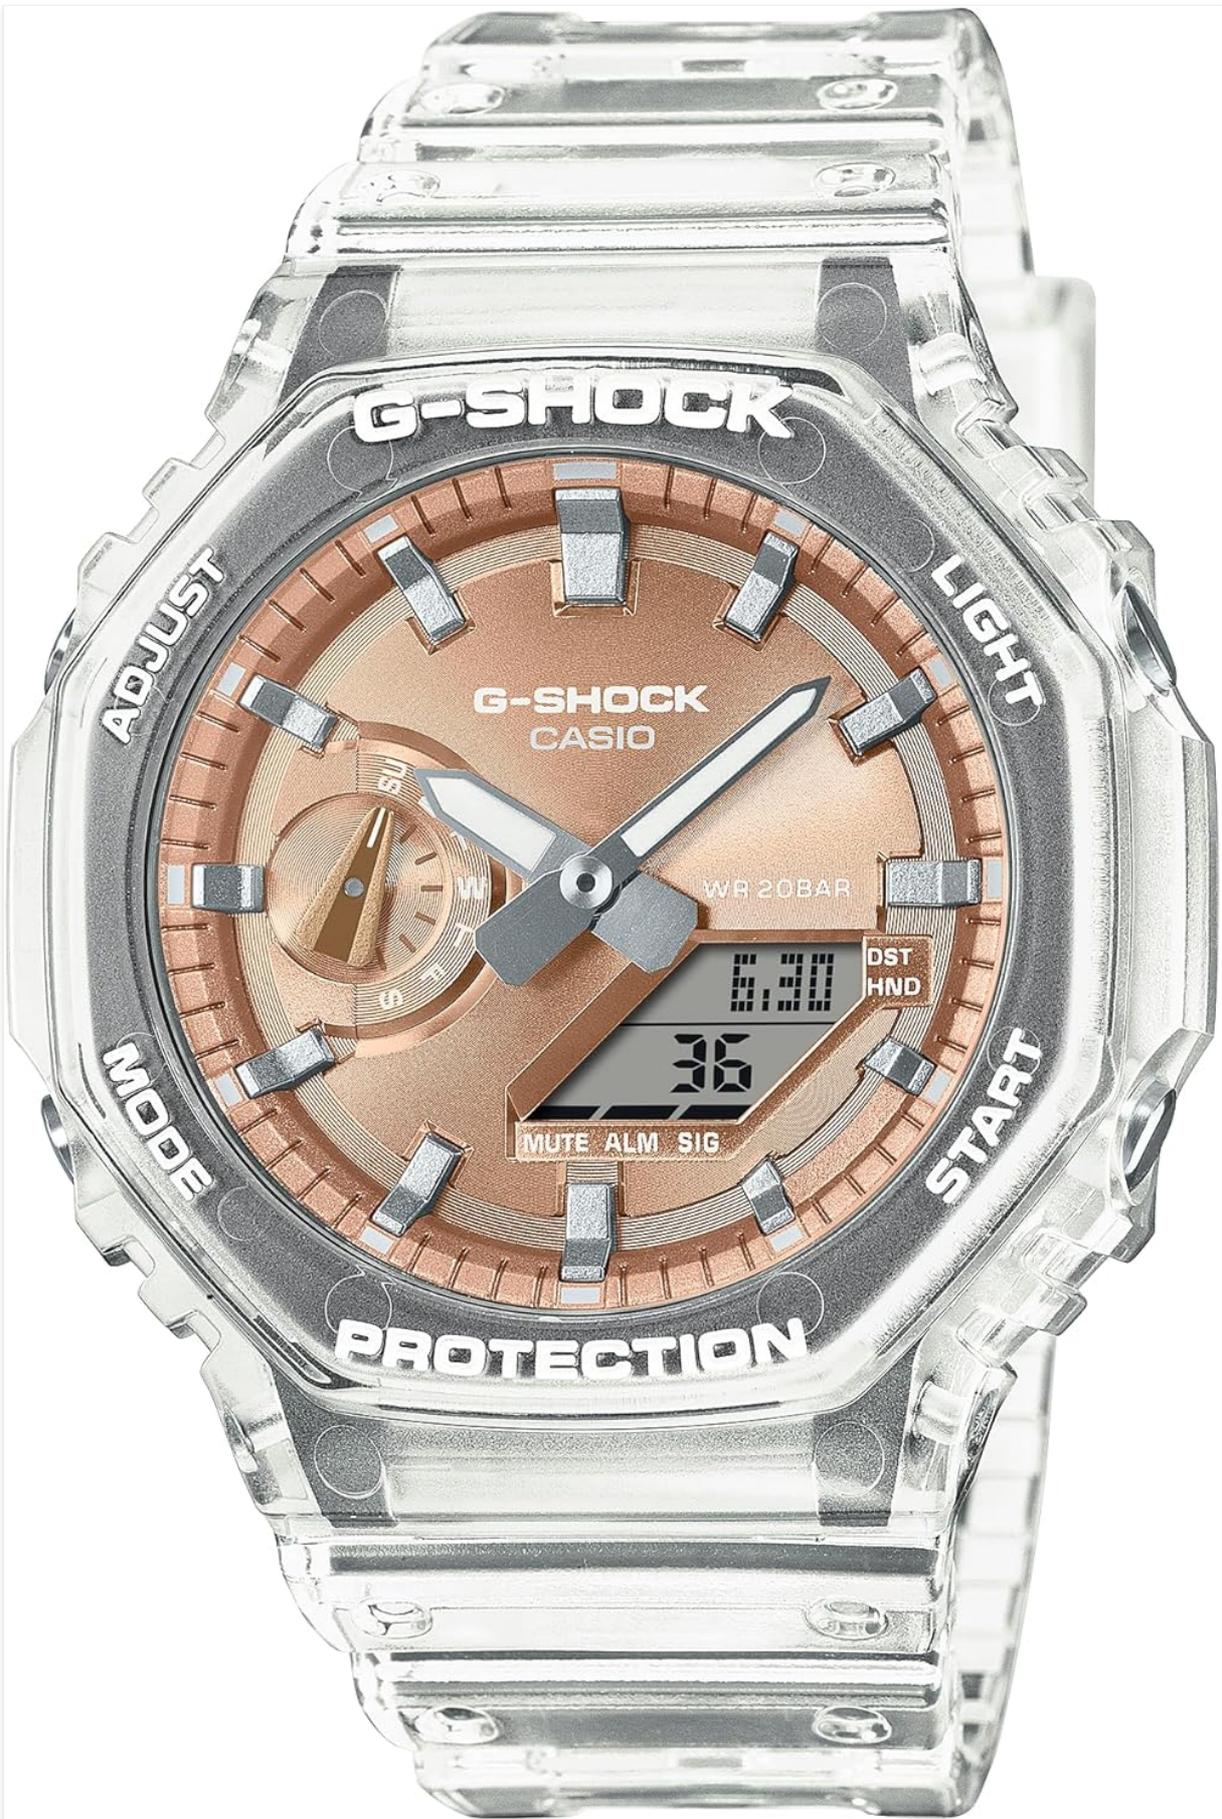


Figure 1: Front view of the G-Shock Casio GA2100BM watch, featuring a clear translucent band and a rose gold dial with analog-digital display.

## SETUP

### Initial Time Setting

1. **Unboxing:** Carefully remove the watch from its packaging.
2. **Button Identification:** Familiarize yourself with the four buttons on the watch:
  - **ADJUST (Top Left):** Used to enter and exit setting modes.
  - **MODE (Bottom Left):** Used to cycle through different modes (Timekeeping, Stopwatch, Alarm, World Time).
  - **LIGHT (Top Right):** Activates the backlight.
  - **START (Bottom Right):** Used to adjust settings or start/stop functions in various modes.
3. **Entering Time Setting Mode:** In Timekeeping Mode, press and hold the **ADJUST** button until the city code starts to flash.
4. **Selecting Settings:** Use the **MODE** button to cycle through the settings (City Code, DST, 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day).
5. **Adjusting Values:** Use the **START** and **LIGHT** buttons to change the flashing value. **START** typically increases the value, and **LIGHT** decreases it.
6. **Exiting Setting Mode:** Press the **ADJUST** button to save your settings and return to Timekeeping Mode.

### Analog Hand Adjustment

If the analog hands do not match the digital time, they can be adjusted. Refer to the full Casio module manual for detailed instructions on hand alignment, typically found by holding a specific button combination in a particular mode.

## OPERATING INSTRUCTIONS

---

### Timekeeping Mode

This is the default mode, displaying the current time and date. The watch features both analog hands and a digital display for timekeeping.

### World Time Mode

Press the **MODE** button to cycle to World Time Mode. Use the **START** button to view different city codes and their corresponding times. This mode allows you to check the current time in major cities around the world.

### Stopwatch Mode

From Timekeeping Mode, press **MODE** until "STW" or "STOP" appears on the digital display.

- Press **START** to begin timing.
- Press **START** again to pause timing.
- Press **ADJUST** to reset the stopwatch to zero while it is paused.

### Alarm Mode

Cycle to Alarm Mode using the **MODE** button. "ALM" will be displayed.

- Press **ADJUST** to enter alarm setting mode.
- Use **MODE** to select hour or minute.
- Use **START** and **LIGHT** to set the desired alarm time.
- Press **ADJUST** to exit.
- Press **START** in Alarm Mode to toggle the alarm on/off.

## Illumination (Light)

Press the **LIGHT** button to illuminate the digital display for easy viewing in low-light conditions. The illumination duration is preset.

## MAINTENANCE

---

### Cleaning Your Watch

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For stubborn dirt, especially on the resin band and case, use a mild soap solution and a soft brush, then rinse thoroughly with fresh water and dry completely. Avoid using harsh chemicals or abrasive cleaners.

### Water Resistance

This watch is rated for 200-meter water resistance. This means it is suitable for recreational scuba diving. However, do not operate the watch buttons while it is wet or submerged, as this can compromise the water resistance. Avoid exposing the watch to hot water or steam, which can also affect the seals.

### Battery Replacement

The watch is powered by two SR726W batteries, with an approximate life of 3 years. When the display becomes dim or functions become erratic, it may be time for battery replacement. It is highly recommended to have the battery replaced by an authorized service center to ensure proper sealing and maintain water resistance.

## TROUBLESHOOTING

---

- **Digital Display is Blank or Dim:** This usually indicates a low battery. Replace the batteries at an authorized service center.
- **Analog Hands Do Not Match Digital Time:** Perform an analog hand alignment. Refer to the detailed module manual for your specific watch module (often found on the manufacturer's website by searching for "GA2100 module manual").
- **Buttons Are Unresponsive:** Ensure the watch is not in a locked mode (if applicable, though GA2100 typically does not have a button lock). If the issue persists, a battery replacement might be necessary, or contact support.
- **Water Inside the Watch:** If you notice condensation or water droplets inside the watch, immediately take it to an authorized service center. Do not attempt to dry it yourself, as this can cause further damage.
- **Time is Incorrect:** Re-adjust the time settings as described in the "Setup" section. Ensure the correct city code and Daylight Saving Time (DST) settings are applied.

## SPECIFICATIONS

---

<b>Model Name</b>	GA2100BM
<b>Case Size (L x W x H)</b>	48.5 x 45.4 x 11.8 mm
<b>Weight</b>	51 g (0.11 lbs)
<b>Case and Bezel Material</b>	Carbon / Resin

<b>Band Material</b>	Resin
<b>Construction</b>	Shock Resistant, Carbon Core Guard structure
<b>Water Resistance</b>	200-meter water resistance
<b>Power Supply</b>	Approx. 3 years on SR726W X 2 batteries
<b>Display Type</b>	Analog-Digital
<b>Watch Movement Type</b>	Japanese Quartz
<b>Crystal</b>	Mineral Glass
<b>Clasp Type</b>	Buckle
<b>UPC</b>	889232399737

## WARRANTY AND SUPPORT

### Warranty Information

Your G-Shock Casio GA2100BM watch comes with a **Limited Warranty**. The terms and conditions of this warranty are typically provided with your purchase documentation. Please retain your proof of purchase for warranty claims. The warranty generally covers manufacturing defects but does not cover damage resulting from improper use, accidents, or unauthorized repairs.

### Customer Support

For further assistance, technical support, or warranty service, please contact Casio customer support. You can typically find contact information on the official Casio website or through the retailer where the watch was purchased. When contacting support, please have your watch model number (GA2100BM) and proof of purchase readily available.

For detailed module-specific instructions, visit the official G-Shock or Casio website and search for the module number associated with the GA2100 series.