



[Manuals.plus](#) /

› [Nothing](#) /

› Nothing Phone (4a) Pro User Manual

Nothing Phone (4a) Pro

Nothing Phone (4a) Pro User Manual

Model: Phone (4a) Pro

1. INTRODUCTION

Welcome to the user manual for your new Nothing Phone (4a) Pro. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly to ensure optimal performance and longevity of your smartphone.



Figure 1.1: Front view of the Nothing Phone (4a) Pro. This image displays the sleek design and full-screen display of the device.

2. Box CONTENTS

Verify that your package contains the following items:

- Nothing Phone (4a) Pro Handset
- Nothing USB-C Cable
- Phone Case
- Pre-applied Screen Protector
- SIM Ejector Tool

- Safety Information
- Warranty Card

3. INITIAL SETUP

3.1. Inserting the SIM Card

1. Locate the SIM card tray on the side of your phone.
2. Insert the provided SIM ejector tool into the small hole on the tray and press gently until the tray pops out.
3. Place your Nano SIM card(s) into the tray with the gold contacts facing down. The Phone (4a) Pro supports Dual Nano SIM.
4. Carefully push the tray back into the phone until it clicks into place.

3.2. Powering On Your Device

Press and hold the **Power button** located on the side of the phone until the Nothing logo appears on the screen. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

3.3. Charging the Battery

Before first use, it is recommended to fully charge your device. Connect the Nothing USB-C cable to the phone's USB Type-C port and the other end to a compatible power adapter (sold separately). The phone supports quick charging.

4. OPERATING YOUR DEVICE

4.1. Basic Navigation

The Nothing Phone (4a) Pro features a responsive touchscreen. Use gestures such as tapping, swiping, pinching, and spreading to navigate the interface, open apps, and interact with content.

4.2. In-Display Fingerprint Sensor

Your device is equipped with an in-display fingerprint sensor for secure unlocking and authentication. To set up, navigate to **Settings > Security > Fingerprint** and follow the instructions to register your fingerprint(s).

4.3. Operating System

The Nothing Phone (4a) Pro runs on **Nothing OS based on Android 16**, offering a clean and intuitive user experience with access to a wide range of applications via the Google Play Store.

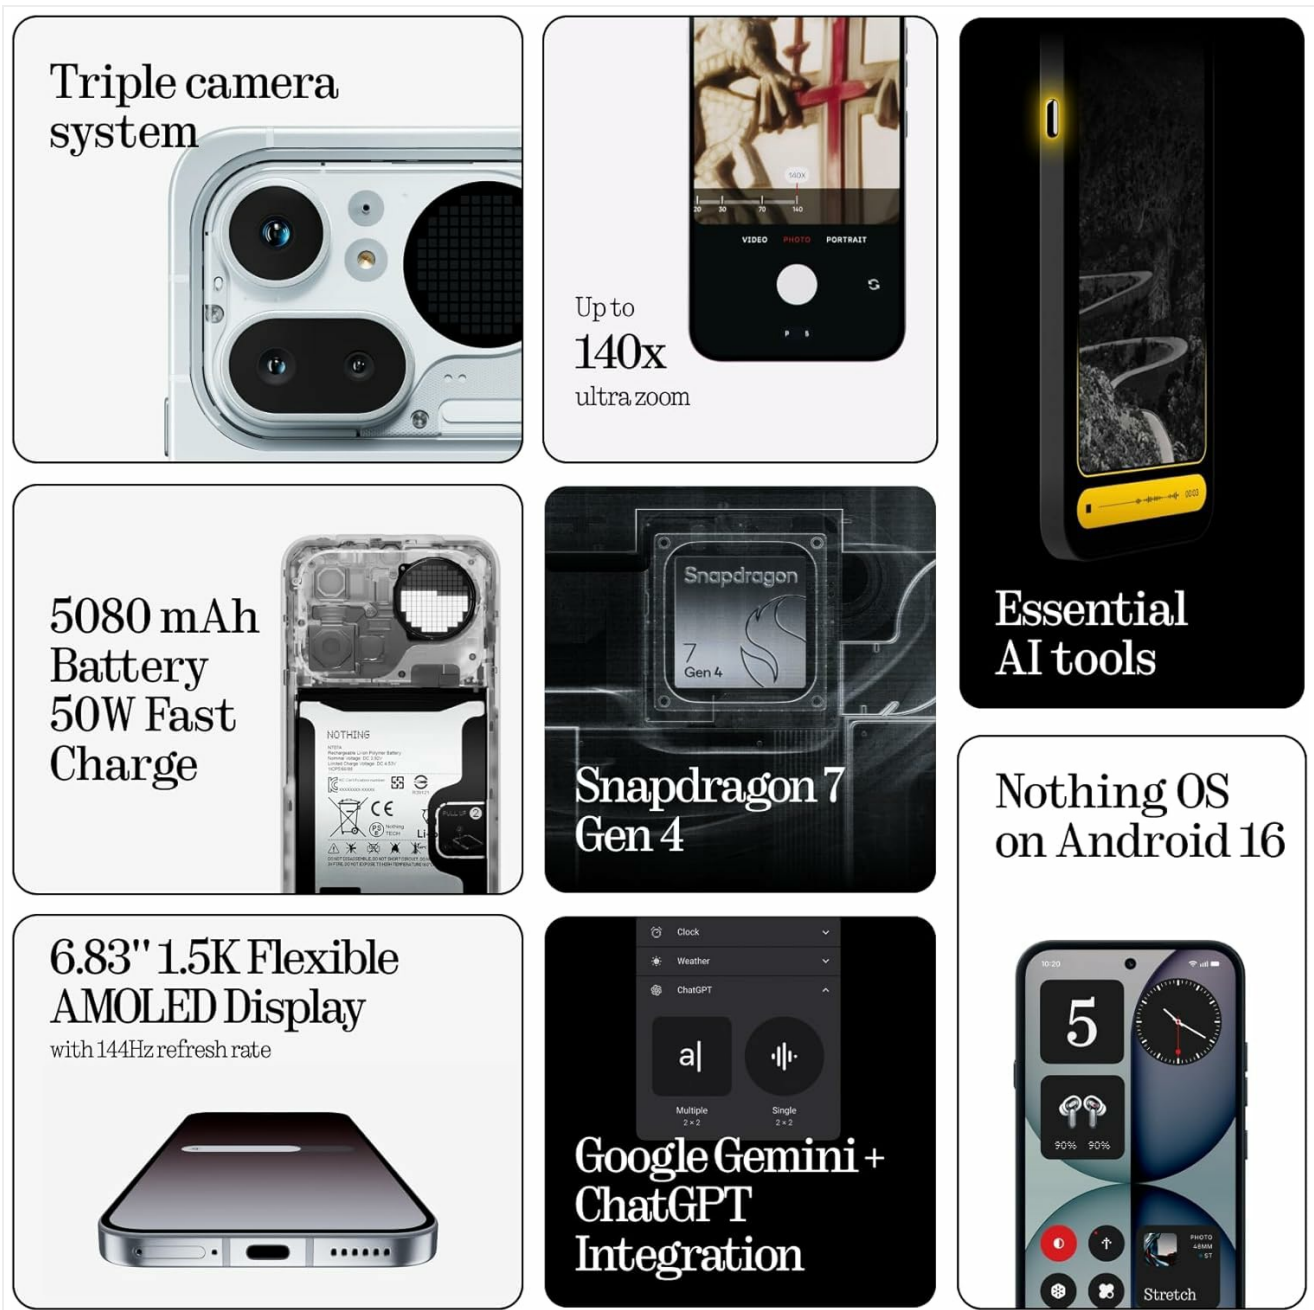


Figure 4.1: Overview of Nothing Phone (4a) Pro key features, including the triple camera system, 140x ultra zoom, 5080 mAh battery with 50W fast charge, Snapdragon 7 Gen 4 processor, essential AI tools, Nothing OS on Android 16, 6.83" 1.5K flexible AMOLED display, and Google Gemini + ChatGPT integration.

5. CAMERA FEATURES

The Nothing Phone (4a) Pro is equipped with an advanced camera system to capture high-quality photos and videos.

5.1. Rear Camera System

The rear camera setup includes a **50MP main sensor**, a **50MP ultra-wide sensor**, and an **8MP telephoto sensor**. Key features include:

- **OIS + EIS:** Optical Image Stabilization and Electronic Image Stabilization for steady shots.
- **Autofocus:** Fast and accurate focusing.
- **Ultra XDR:** Enhanced dynamic range for vibrant images.
- **7X In-sensor Zoom:** High-quality zoom without loss of detail.

- **70X Ultra Zoom:** Extended zoom capabilities for distant subjects.
- **4K Video Recording:** Capture high-resolution videos.

5.2. Front Camera

The front camera features a **32MP sensor**, supporting **1080p video recording at 30fps/60fps** with Ultra XDR, ideal for selfies and video calls.



Figure 5.1: Diagram illustrating the Pro 3-Camera System of the Nothing Phone (4a) Pro, highlighting the 50 MP OIS Periscope Camera, 50 MP OIS Sony Main Camera, 120° Sony Ultra-Wide Camera, and 32 MP Front Camera.

6. DISPLAY AND PERFORMANCE

6.1. Display

The device features a **6.83-inch 144Hz flexible LTPS AMOLED display** with a resolution of **1260 x 2800 pixels** and a pixel density of **450 ppi**. This provides sharp visuals, smooth scrolling, and an immersive viewing experience.

6.2. Performance

Powered by the **Qualcomm Snapdragon 7 Gen 4 octa-core processor** with a clock speed of up to **2.8GHz**, the Phone (4a) Pro delivers robust performance for multitasking, demanding applications, and gaming. It is complemented by **12GB LPDDR5X RAM** and **256GB of internal storage**.

7. BATTERY AND CHARGING

The Nothing Phone (4a) Pro is equipped with a **5400mAh Lithium-Ion battery**, providing extended usage time. It supports **quick charging** via the USB Type-C port, allowing for rapid power replenishment.

8. CONNECTIVITY

Your device offers comprehensive connectivity options:

- **Network:** Dual Nano SIM, 5G, 4G VoLTE
- **Wireless:** Wi-Fi 6, Bluetooth v5.4
- **Ports:** USB Type-C (OTG compatible)
- **Navigation:** GPS

9. MAINTENANCE AND CARE

9.1. Water Resistance

The Nothing Phone (4a) Pro is rated as **Water Resistant**. While it can withstand splashes and light rain, it is not fully waterproof. Avoid submerging the device in water or exposing it to high-pressure water jets.

9.2. Cleaning

To clean your phone, use a soft, lint-free cloth. Avoid using abrasive materials, solvents, or aerosol sprays, as these can damage the screen or finish.

9.3. Environmental Conditions

Operate and store your device within recommended temperature ranges. Extreme heat or cold can affect battery life and overall performance.

10. TROUBLESHOOTING

If you encounter issues with your Nothing Phone (4a) Pro, try the following basic troubleshooting steps:

- **Device Not Powering On:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Screen Unresponsive:** Restart the device by pressing and holding the Power button for approximately 10-15 seconds.
- **Network Issues:** Check if your SIM card is properly inserted. Try toggling Airplane Mode on and off. Ensure you have network coverage.
- **App Crashing:** Close and reopen the app. If the issue persists, clear the app's cache and data in **Settings > Apps**.
- **Slow Performance:** Close unnecessary background apps. Restart your device. Consider performing a factory reset as a last resort (*note: this will erase all data on your phone*).

11. SPECIFICATIONS

Feature	Detail
Brand	Nothing
Model	Phone (4a) Pro
Operating System	Android 16
Processor	Qualcomm Snapdragon 7 Gen 4 Octa-core (up to 2.8 GHz)
RAM	12 GB LPDDR5X
Internal Storage	256 GB
Display Size	6.83 Inches
Display Type	Flexible LTPS AMOLED
Display Resolution	1260 x 2800 Pixels
Refresh Rate	144 Hz
Rear Camera	50MP + 50MP + 8MP (OIS + EIS, Ultra XDR, 7X in-sensor zoom, 70X ultra zoom, 4K video)
Front Camera	32MP (1080p video at 30fps/60fps, Ultra XDR)
Battery Capacity	5400 mAh Lithium-Ion
Charging	Quick Charging, USB Type-C
Connectivity	5G, Dual SIM, Wi-Fi 6, Bluetooth v5.4, OTG, GPS
Security	In-display Fingerprint Sensor
Water Resistance	Water Resistant
Dimensions	16.4 x 7.8 x 0.8 Centimeters
Weight	190 Grams

12. WARRANTY INFORMATION

The Nothing Phone (4a) Pro comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please refer to the included Warranty Card for detailed terms and conditions, exclusions, and how to claim warranty services.

13. SUPPORT

For further assistance, technical support, or service inquiries, please visit the official Nothing support website or contact their customer service. Keep your purchase receipt and warranty card handy when seeking support.