

Garvee ZYGV-34Q5-KK-79ZFX-gbHfK1X

Garvee Outdoor Porch Swing with Adjustable Canopy - Instruction Manual

Model: ZYGV-34Q5-KK-79ZFX-gbHfK1X

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use of this product. Failure to follow these instructions may result in injury or product damage.

- Adult assembly is required.
- Ensure all bolts and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 800 lbs (approximately 3 adults).
- Place the swing on a flat, stable, and level surface.
- Keep children and pets away from the assembly area.
- Do not stand on the swing or use it as a ladder.
- Avoid using the swing in strong winds or severe weather conditions.

PRODUCT OVERVIEW

The Garvee Outdoor Porch Swing is designed for comfortable outdoor relaxation. It features a durable iron frame, an adjustable canopy for sun protection, and a versatile seat that can recline into a bed-like position. Integrated cup holder trays provide convenience.



Figure 1: Garvee 3-Seat Outdoor Porch Swing with Khaki Canopy.

This porch swing is constructed with a heavy-duty powder-coated steel frame for stability and rust resistance, supporting up to 800 lbs. The canopy is made from UV-resistant fabric and can be tilted to various angles to provide optimal shade throughout the day. The seat cushions are designed for comfort, and the backrest can be adjusted to a 180-degree recline, transforming the swing into a lounge bed. Two foldable side trays offer convenient storage for beverages and small items.

PARTS LIST

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

Typical Components:

- Main Frame Components (legs, crossbars, support beams)
- Swing Seat Frame
- Canopy Frame and Fabric
- Suspension Springs/Chains
- Seat Cushions (Note: Pillows are not included)
- Cup Holder Trays

- Hardware Pack (bolts, nuts, washers, caps, wrenches)

Refer to the included assembly diagram for a detailed visual list of all components and hardware.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Clear a spacious area for assembly and lay out all components. Do not fully tighten bolts until instructed.

Step-by-Step Guide:

1. **Assemble the Base Frame:** Connect the bottom crossbars to the side legs using the provided bolts and washers. Hand-tighten only.
2. **Attach the Upper Frame:** Connect the upper support beams to the side legs. Ensure the frame is stable before proceeding.
3. **Install the Swing Seat:** Attach the swing seat frame to the main frame using the suspension springs or chains. Ensure the connections are secure.
4. **Assemble the Canopy Frame:** Connect the canopy frame pieces. Slide the canopy fabric onto the frame.
5. **Attach the Canopy:** Secure the assembled canopy to the top of the main frame. Ensure it is properly aligned and can be adjusted.
6. **Install Cup Holder Trays:** Attach the foldable cup holder trays to the designated spots on the side of the swing frame.
7. **Place Cushions:** Position the seat cushions on the swing.
8. **Final Tightening:** Once all components are in place and aligned, fully tighten all bolts and fasteners using the provided tools. Do not overtighten.



Figure 2: Assembled Garvee Outdoor Porch Swing.

DOUBLE FOLDABLE CUP HOLDERS



Figure 3: Detail of the foldable cup holder trays.


OPERATING INSTRUCTIONS

Adjusting the Canopy:

The canopy features a smooth knob adjustment system. To adjust the angle, locate the knobs on either side of the canopy frame. Loosen the knobs slightly, tilt the canopy to your desired angle for optimal shade, and then re-tighten the knobs to secure it in place. The canopy can be tilted up to 40 degrees.

STEPLESS ADJUSTABLE CANOPY

Adjust the Angle of the
Canopy for Your Needs

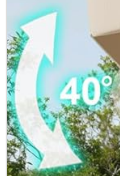

Adjustable Device



Figure 4: Canopy adjustment mechanism.

Reclining the Seat:

The swing seat is designed with a flexible backrest mechanism, allowing it to recline up to 180 degrees. To recline, gently push the backrest backward while applying slight pressure to the seat. Adjust to your preferred angle or fully recline to transform it into a lounge bed. Ensure the seat is securely locked in position before use.

2-IN-1 CONVERTIBLE SEAT



Figure 5: Swing seat in reclined position.

Using Cup Holders:

The swing is equipped with two foldable cup holder trays on each side. To use, simply pull the tray outwards until it locks into place. To fold, push the tray inwards. These trays can hold beverages, phones, or small snacks.

MAINTENANCE

Regular maintenance will extend the life and appearance of your porch swing.

- **Cleaning the Frame:** Wipe the metal frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust. Avoid abrasive cleaners.
- **Cleaning the Canopy and Cushions:** The canopy fabric and cushion covers are water-resistant. Spot clean with a mild soap solution and a soft brush or cloth. Rinse and air dry. Do not machine wash or tumble dry.
- **Inspection:** Periodically inspect all bolts, nuts, and connections to ensure they are tight. Check for any signs of wear, rust, or damage to the frame, canopy, or suspension components. Replace worn parts immediately.
- **Storage:** While designed for outdoor use, prolonged exposure to harsh weather conditions (heavy

rain, snow, extreme sun) can reduce the product's lifespan. Consider storing cushions and canopy indoors during off-seasons or severe weather. If storing the entire swing, cover it with a protective outdoor furniture cover.

HIGH-QUALITY THICKENED PIPE MATERIAL



Figure 6: Thickened pipe material for durability.

TROUBLESHOOTING

If you encounter issues with your porch swing, refer to the following common problems and solutions:

- **Swing feels unstable or wobbly:**
 - a. Ensure all bolts and fasteners are fully tightened. Refer to the assembly instructions to verify all connections.
 - b. Check that the swing is placed on a completely flat and level surface.
- **Canopy does not adjust smoothly or stay in place:**
 - a. Ensure the adjustment knobs on the canopy frame are properly loosened before attempting to adjust, and then securely tightened afterward.
 - b. Check for any obstructions or damage to the canopy frame or adjustment mechanism.
- **Parts do not fit together during assembly:**
 - a. Double-check the assembly instructions and diagrams to ensure you are using the correct parts for each step.

b. Do not force parts together. If a part does not fit, re-examine the orientation or contact customer support for assistance.

- **Rust appears on the frame:**

a. While the frame is powder-coated for rust resistance, prolonged exposure to moisture can cause rust. Clean any rust spots with a wire brush and apply rust-inhibiting paint if necessary.

b. Ensure the swing is dried thoroughly after rain and consider covering it when not in use.

If these solutions do not resolve the issue, please contact customer support.

SPECIFICATIONS

Brand	Garvee
Model Number	ZYGV-34Q5-KK-79ZFX-gbHfK1X
Material	Iron (Frame)
Color	Khaki
Product Dimensions (D x W x H)	76.38" x 47.24" x 68.11"
Item Weight	104.72 Pounds
Maximum Weight Recommendation	800 Pounds
Seating Capacity	3 People
Assembly Required	Yes

PRODUCT SIZE

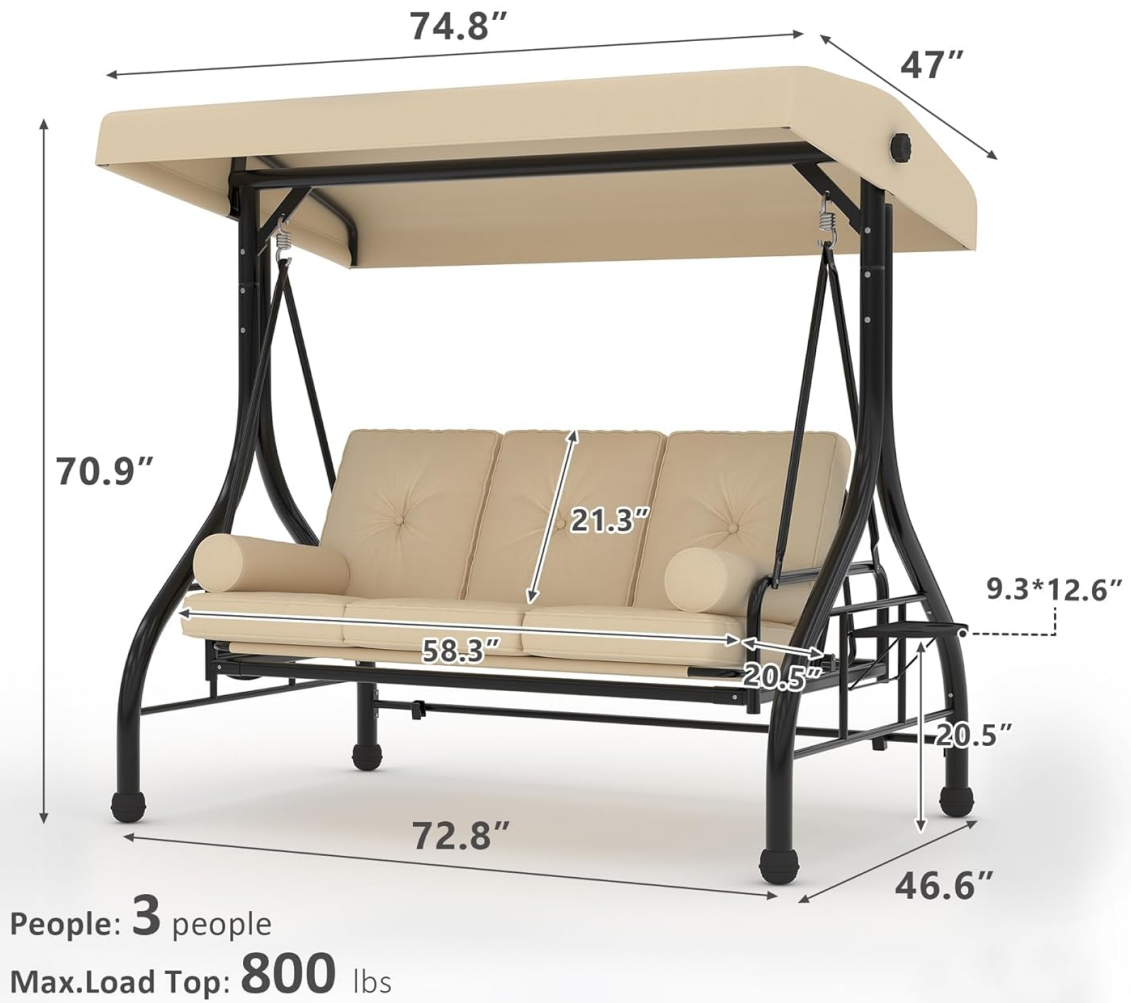


Figure 7: Product dimensions and capacity.

WARRANTY AND SUPPORT

For warranty information, missing parts, or any product-related inquiries, please contact Garvee customer support. Keep your purchase receipt and model number handy for faster service.

Contact information can typically be found on the product packaging or the retailer's website where the product was purchased.