

Decofy DC-SCB02

Decofy DC-SCB02 Shoe Cabinet User Manual

Model: DC-SCB02

INTRODUCTION

Thank you for purchasing the Decofy DC-SCB02 Shoe Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new shoe cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.

SAFETY INFORMATION

WARNING: To prevent tipping, this furniture must be securely attached to the wall using the anti-tipping device provided. Tipping furniture can cause serious or fatal crushing injuries. Always use the anti-tipping device.

- Ensure all parts are present and undamaged before assembly.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws.
- Keep children away from the assembly area.
- Periodically check all connections to ensure they remain tight.

Prevent Tip-over Incidents

Ensuring your family's Safety

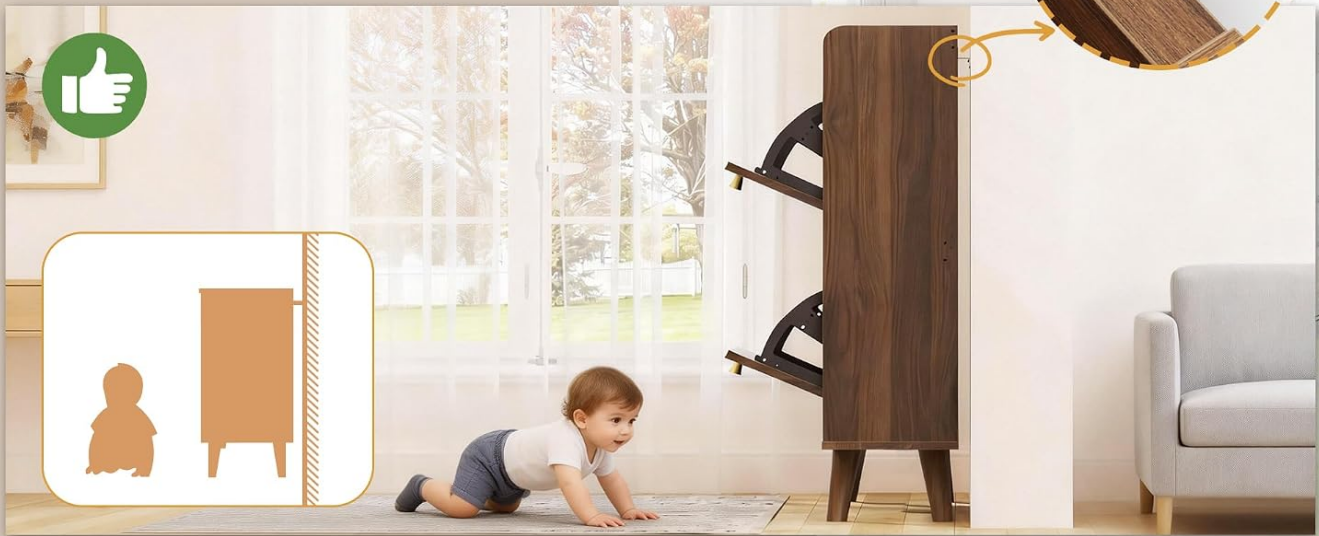


Figure 1: Importance of Anti-Tipping Device. The image shows a comparison between a shoe cabinet properly secured to the wall with an anti-tipping device, preventing it from falling, and a cabinet that is not secured, illustrating the danger of tipping, especially with children present.



Figure 2: Anti-Tip Device Installation. This image provides a visual guide for installing the anti-tip device, showing the attachment points on the cabinet and the wall for secure fastening.

PACKAGE CONTENTS

Before assembly, please verify that all components and hardware are present. Refer to the included assembly instructions for a detailed list of parts.

- Shoe Cabinet Panels (various sizes)
- Flip-Down Drawer Mechanisms
- Adjustable Shelf Panels
- Solid Wood Legs
- Metal Handles
- Anti-Tipping Device
- Assembly Hardware (screws, dowels, etc.)
- User Manual (this document)

ASSEMBLY INSTRUCTIONS

Assembly is required for this shoe cabinet. Please follow the step-by-step instructions provided in the separate assembly guide included in your package. An assembly video is also available for visual guidance.

Assembly Video Guide

Your browser does not support the video tag.

Video 1: Decofy Shoe Cabinet Assembly Guide. This video provides a visual, step-by-step walkthrough of the assembly process for the shoe cabinet, demonstrating how to connect components and install hardware.

Key Assembly Steps & Features

1. **Unpack and Identify Parts:** Lay out all components and hardware. Refer to the parts list in your assembly guide.
2. **Assemble the Frame:** Connect the side panels to the base and top panels using the provided hardware.
3. **Install Flip-Down Drawers:** Attach the flip-down mechanisms and drawer fronts. Ensure smooth operation.
4. **Attach Solid Wood Legs:** Secure the four solid wood legs to the base of the cabinet.
5. **Install Anti-Tipping Device:** Crucially, attach the anti-tipping device to the top rear of the cabinet and secure it to a wall stud or appropriate anchor.



Figure 3: Assembled Shoe Cabinet Features. This image displays the fully assembled shoe cabinet, pointing out its key design elements such as the protective top fence, the decorative carved line finish on the drawers, and the sturdy solid wood legs.

3 Position Adjustable Shelf



Figure 4: Adjustable Shelf Mechanism. This detailed image illustrates how the internal shelf within each flip-down drawer can be adjusted to three different height positions, allowing for versatile storage of various shoe types.

OPERATION

Using the Flip-Down Drawers

The shoe cabinet features two flip-down drawers for easy access to your footwear. Gently pull the metal handle to open each drawer. The drawers are designed to open smoothly, revealing the shoe storage compartments.

Adjusting Shelf Levels

Each flip-down drawer contains an adjustable shelf. This shelf can be set to three different levels or removed entirely to accommodate various shoe heights, such as sneakers, heels, or boots. To adjust, carefully lift the shelf and reposition it into the desired grooves.



Figure 5: Shoe Storage Configuration. This image demonstrates how different types of shoes, including home shoes, casual shoes, and slippers, can be stored by utilizing or removing the adjustable shelf within the flip-down drawers. It also notes recommendations for shoes size 10 and below.

Top Surface Usage

The top surface of the cabinet can be used for decorative items, keys, or other small belongings. The integrated fence helps prevent items from falling off.



Figure 6: Ample Storage Space. This image illustrates the interior capacity of the shoe cabinet with both flip-down drawers open, demonstrating how multiple pairs of shoes can be neatly organized.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly wipe up any spills to prevent moisture damage.
- **Inspection:** Periodically check all hardware and connections to ensure they are secure. Tighten any loose screws as needed.
- **Environmental:** This product is EPA green certified and formaldehyde-free, ensuring a safe environment.



Figure 7: Product Environmental Features. This image highlights the cabinet's waterproof properties, EPA Green Certification, and the absence of added formaldehyde, emphasizing its eco-friendly and safe design.

TROUBLESHOOTING

Issue: Shoes do not fit in the drawers.

Solution: The cabinet is designed for shoes up to size 10. For larger shoes or bulkier footwear, consider removing the adjustable shelf within the flip-down drawer to create more space. Some shoes may need to be placed sideways.

Issue: Drawers are stiff or do not open smoothly.

Solution: Check that all assembly hardware for the flip-down mechanism is correctly installed and not overtightened. Ensure no objects are obstructing the drawer's movement.

Issue: Missing parts or damaged components.

Solution: If you receive damaged goods or missing parts, please contact Decofy customer support immediately. Refer to the "Warranty & Support" section for contact information. Provide your model number and a description of the issue for prompt assistance.

Issue: Cabinet feels unstable.

Solution: Ensure the anti-tipping device is correctly installed and securely fastened to a wall stud or appropriate anchor. Verify that all leg connections are tight and the cabinet is on a level surface.

SPECIFICATIONS

Brand	Decofy
Model Number	DC-SCB02
Material	Engineered Wood
Color	Walnut
Overall Dimensions (H x W x D)	37.6" x 31.5" x 9.4"
Number of Drawers	2 (Flip-Down)
Adjustable Shelf Levels	3 per drawer
Weight	42.7 pounds
Special Features	Adjustable Shelf, Anti-Tipping Device, Engraved Line Finish, Solid Wood Legs, EPA Green Certified, Formaldehyde-Free
Recommended Use	Entryway, Hallway, Living Room



Figure 8: Product Dimensions. This image provides a clear visual representation of the shoe cabinet's overall dimensions, including its height, width, and depth.

WARRANTY & SUPPORT

Decofy is committed to providing quality products and customer satisfaction. If you encounter any issues, have questions about assembly, or require replacement parts, please contact our customer support team.

Customer Support: Refer to the contact information provided with your purchase or visit the official Decofy website for assistance. We aim to provide a satisfactory answer within 24 hours for any product-related inquiries. Please have your model number (DC-SCB02) and purchase details ready when contacting support.

© 2026 Decofy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question