

FOSSIBOT S7

FOSSIBOT S7 Smartphone User Manual

Model: S7

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your FOSSIBOT S7 smartphone. Please read this manual thoroughly before using your device to ensure proper functionality and longevity.

PACKAGE CONTENTS

Verify that your package contains the following items:

- FOSSIBOT S7 Smartphone
- USB OTG Adapter
- Charging Cable (USB Type-C)
- User Manual (this document)

Note: Other accessories may be sold separately.

DEVICE OVERVIEW

Familiarize yourself with the physical components of your FOSSIBOT S7 smartphone.



Image: Front and back view of the FOSSIBOT S7 smartphone, highlighting its dual-screen design and camera module.

Ultra-light+Ultra-thin=Comfortable Grip



SETUP

1. Inserting SIM Cards and TF Card

The FOSSIBOT S7 supports Dual SIM cards and a TF (microSD) card for expandable storage up to 2TB.

1. Locate the SIM card tray on the side of the device.
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place your Nano SIM cards and/or TF card into the designated slots. Ensure correct orientation.
4. Gently push the tray back into the device until it is flush.

2. Initial Power On and Setup

1. Press and hold the Power button until the FOSSIBOT logo appears.
2. Follow the on-screen instructions to select your language, connect to Wi-Fi, and set up your Google account.

3. Biometric Security Setup (Face ID & Fingerprint ID)

Enhance your device security with Face ID and Fingerprint ID.

- Navigate to **Settings > Security & Privacy > Face Unlock** or **Fingerprint Unlock**.
- Follow the prompts to register your face or fingerprint. Ensure good lighting for Face ID and clean fingers for Fingerprint ID.

Fingerprint ID Face Unlock



Image: Demonstrates the Face ID and Fingerprint ID features for unlocking the FOSSIBOT S7 smartphone.

OPERATING YOUR FOSSIBOT S7

Android 16 Operating System

Your FOSSIBOT S7 runs on Android 16, offering a smooth and intuitive user experience. Navigate through apps, customize your home screen, and manage notifications with ease.

Android 16 OS

Higher system And Better Performance



Image: The FOSSIBOT S7 displaying the Android 16 operating system interface with various application icons.

Display Features

The device features a 6.9-inch FHD+ display with a 120Hz refresh rate for fluid visuals and a secondary touch-sensitive display on the back for quick access to information and controls.

6.9" HD+ 120Hz Display



720*1640
Resolution



20:9
Aspect Ratio



260.33
PPI Pixel density



16.7M
Colors



400MIN
450TYPcd/m2



Image: The FOSSIBOT S7's main display showcasing its 6.9-inch size, HD+ resolution, 20:9 aspect ratio, 260.33 PPI, 16.7M colors, and 400 nits brightness.

Personalized Touch-Sensitive Secondary Display



Image: Various customizable watch faces and widgets displayed on the FOSSIBOT S7's secondary touch-sensitive screen.

Performance and Storage

Equipped with a Unisoc Octa-core processor, 16GB total RAM (4GB physical + 12GB extended), and 128GB internal storage, expandable up to 2TB with a TF card, the S7 handles multitasking and demanding applications efficiently.



Image: Illustrates the FOSSIBOT S7's Unisoc Octa-core processor, 16GB RAM (4GB+12GB extended), and 128GB ROM with 2TB TF card expansion.

Gemini AI Assistant

The integrated Gemini AI Assistant provides smart Q&A, AI image creation from text prompts, and an AI coding assistant. Access it for instant information, creative tasks, or development support.

Gemini AI Assistant

From Conversation to Creation Built-in, Not Bolted-on

Gemini



From Conversation to Creation



Built-in, Not Bolted-on



AI Coding assistant



AI Create an image

Image: Demonstrates the Gemini AI Assistant's capabilities, including Smart Q&A, AI image creation, and AI coding assistance.

Camera Functions

Capture moments with the 16MP rear camera and 8MP front camera. Utilize various shooting modes for different scenarios.

- **Rear Camera:** 16MP, supports Panorama Mode, Night Mode, and Video Mode.
- **Front Camera:** 8MP, ideal for selfies and video calls.

New Heights in Photography

8MP

Front Camera



16MP

Rear Camera



Image: Highlights the 16MP rear camera and 8MP front camera of the FOSSIBOT S7, with example photos.

Connectivity

The FOSSIBOT S7 supports 4G cellular networks, Wi-Fi (2.4GHz/5GHz), Bluetooth 5.0, and GPS/GLONASS/Galileo/Beidou for navigation.

- **Supported Carriers:** T-Mobile, Boost Mobile (T-Mobile), Metro by T-Mobile, Straight Talk, Consumer Cellular, Mint, Ultra Mobile, Red Pocket Mobile, Good2Go Mobile.
- **Unsupported Carriers:** ATT and CRICKET.

Integrated Software Toolkit

Your device includes a suite of practical tools:

- Compass
- Magnifier
- Gradients

- Flashlight
- Pic Hanging
- Sound Meter
- Height Measure
- Warning Siren
- Protractor
- Plumb Bob

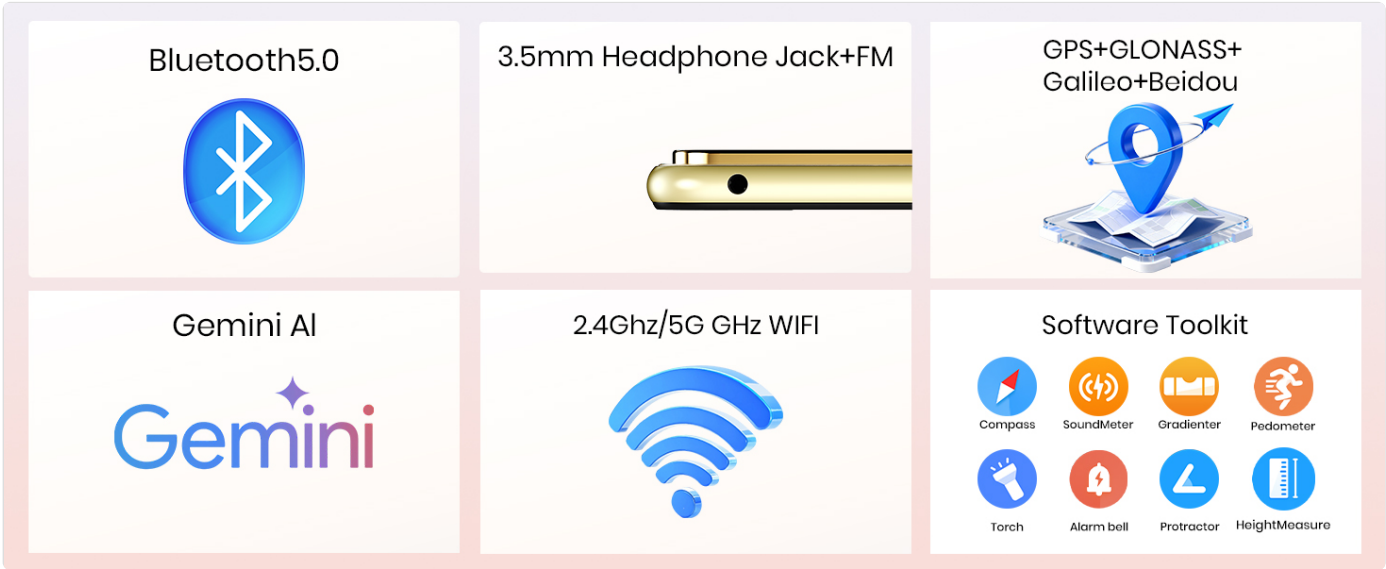


Image: Overview of FOSSIBOT S7 features including Bluetooth 5.0, 3.5mm Headphone Jack, GPS/GLONASS/Galileo/Beidou, Gemini AI, 2.4Ghz/5Ghz WiFi, and the Software Toolkit icons.

BATTERY AND CHARGING

The FOSSIBOT S7 is equipped with a 5000mAh Lithium-Polymer battery, providing extended usage times.

- Up to 550 hours standby time.
- Up to 40 hours talk time.
- Up to 7 hours video playback.
- Up to 6.5 hours gaming.

Charging Guidelines

1. Use the provided USB Type-C charging cable and a compatible power adapter.
2. Connect the cable to the phone's USB Type-C port and the adapter to a power outlet.
3. A full charge typically takes approximately 16 hours.
4. Avoid using damaged cables or chargers.
5. Do not expose the device to extreme temperatures during charging.

All-day Battery Life

Massive 5000mAh Battery for Non-Stop Use



550hrs

Standby



40hrs

Talk



7hrs

Video



6.5hrs

Game

5000mAh

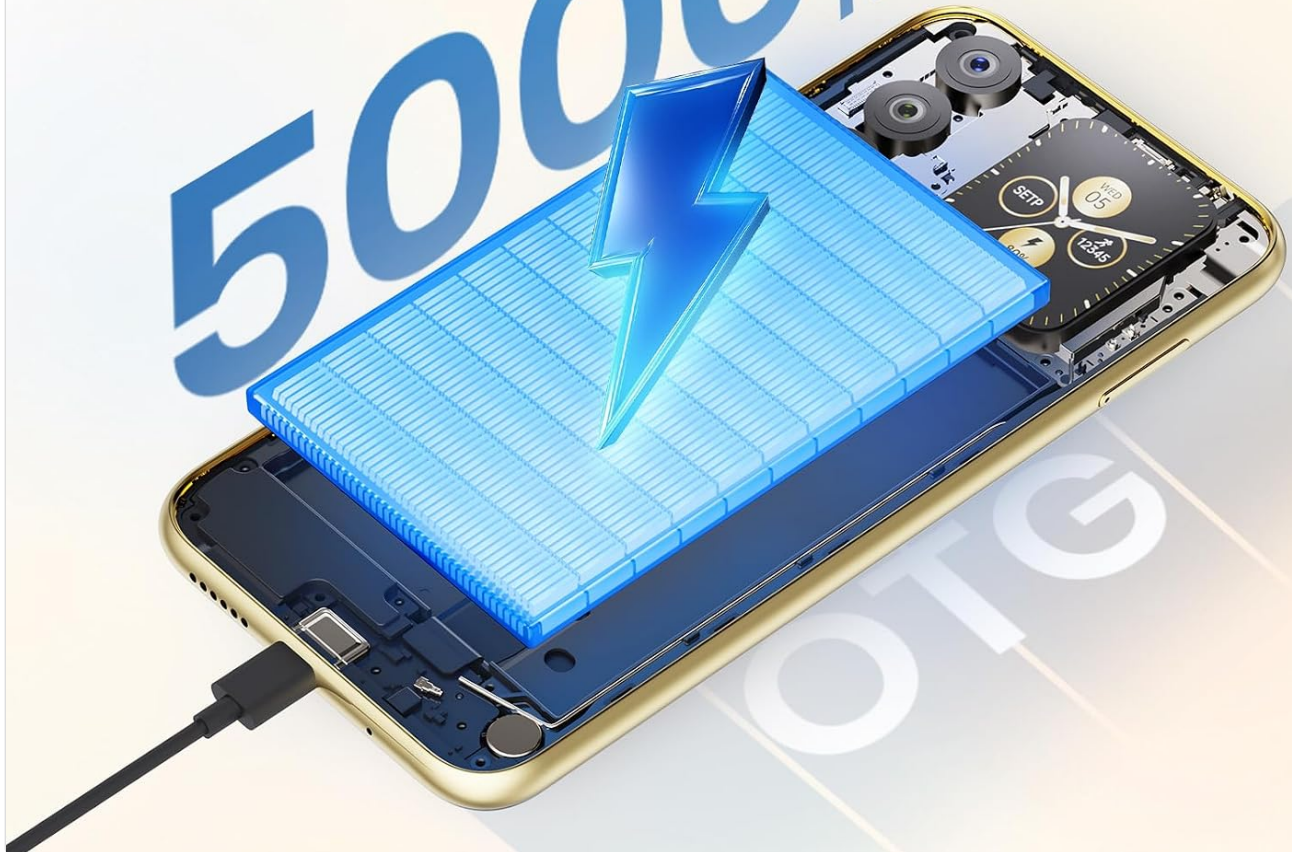


Image: Graphic illustrating the 5000mAh battery capacity and its estimated usage times for standby, talk, video, and gaming.

MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Water Resistance:** This device is **NOT Water Resistant**. Avoid exposure to liquids.
- **Temperature:** Operate the device within recommended temperature ranges. Avoid extreme heat or cold.
- **Storage:** Store the device in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a charger for at least 30 minutes, then try powering on again.
Poor network signal or no service.	Check if your SIM card is properly inserted. Verify that your carrier is supported (T-Mobile, Boost Mobile, Metro by T-Mobile, Straight Talk, Consumer Cellular, Mint, Ultra Mobile, Red Pocket Mobile, Good2Go Mobile). Restart the device.
Applications are slow or crashing.	Close unnecessary background applications. Clear app cache in Settings. Restart the device. Ensure sufficient storage space.
Battery drains quickly.	Reduce screen brightness. Disable unused features like Wi-Fi, Bluetooth, GPS. Close background apps. Check for app updates.
Touchscreen unresponsive.	Restart the device. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	FOSSIBOT
Model Name	FOSSiBOT S7
Operating System	Android 16
RAM Memory Installed Size	16 GB (4GB physical + 12GB extended)
CPU Speed	2 GHz (Unisoc Octa-core)
Memory Storage Capacity	128 GB
Flash Memory Supported Size Maximum	2 TB (with TF card)
Screen Size	6.9 inches
Resolution	2400 x 1080 (FHD+)
Refresh Rate	120 Hz
Display Type	LCD
Display Pixel Density	230.33 pixels_per_inch
Rear Facing Camera Photo Sensor Resolution	16 MP
Front Photo Sensor Resolution	8 MP
Battery Capacity	5000 mAh
Battery Type	Lithium-Polymer
Battery Charge Time	16 hours (approx.)

Feature	Detail
Cellular Technology	4G
Connectivity Technology	Wi-Fi (2.4GHz/5GHz), Bluetooth 5.0
Supported Satellite Navigation System	GPS, GLONASS, Galileo, Beidou
SIM Card Slot Count	Dual SIM (Nano)
Connector Type	USB Type C
Biometric Security Feature	Face Recognition, Fingerprint ID
Water Resistance Level	Not Water Resistant
Headphones Jack	3.5 mm
Model Year	2026

WARRANTY AND SUPPORT

Warranty Information

FOSSIBOT provides a **2-year warranty** covering material and workmanship defects under normal use. This warranty ensures your device is protected against manufacturing faults.

Customer Support

For any questions, technical assistance, or warranty claims, FOSSIBOT offers **24/7 online after-sales support**. Please refer to the official FOSSIBOT website or your purchase documentation for contact details.

PRODUCT VIDEO

Your browser does not support the video tag.

Video: An overview of the FOSSIBOT S7 smartphone, showcasing its design and key features in action.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My FOSSIBOT S7 is stuck on the logo screen and will not turn off or reset. How can I fix this?

If your FOSSIBOT S7 is completely frozen on the logo screen and unresponsive to the power button, you can attempt a forced restart or a recovery mode reset. Please try the following steps: Forced Restart:...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0GRVMYCB6>

More documents and user manuals: <https://manuals.plus/>