

## Pigeon 19004924

# Pigeon 4.2L Digital Air Fryer (Model 19004924) Instruction Manual

Your guide to safe and efficient operation

## INTRODUCTION

---

Thank you for purchasing the Pigeon 4.2L Digital Air Fryer, Model 19004924. This appliance is designed to cook a variety of foods using rapid air circulation, offering a convenient method for preparing meals. Please read this manual thoroughly before operating the appliance to ensure safe and proper use. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Supervise children closely when the appliance is in use.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged. Contact customer support for assistance.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block the air inlet or outlet vents during operation.
- The appliance generates heat and steam during use. Keep hands and face away from hot steam and air outlet openings.
- Do not place anything on top of the appliance.
- Use only accessories recommended by the manufacturer.
- This appliance is for household use only. Do not use outdoors.

- Exercise extreme caution when removing the hot basket or disposing of hot grease.

## PRODUCT COMPONENTS

---

The Pigeon 4.2L Digital Air Fryer includes the following main components:

- Main Unit with Digital Display and Touch Controls
- Removable Non-Stick Frying Basket
- Silicon Basket (for enhanced non-stick properties and easy cleaning)
- Power Cord
- Handle Tool
- Rotisserie Fork



Image: The Pigeon 4.2L Digital Air Fryer with its pull-out basket, showing the silicon basket insert filled with cooked fries and paneer. This image illustrates the main unit and the removable cooking basket with its silicon liner.

## SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials from the air fryer and its accessories.
2. **Clean:** Wipe the exterior of the air fryer with a damp cloth. Wash the non-stick frying basket and the silicon basket with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper air circulation.
4. **First Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.
5. **Insert Silicon Basket:** Place the silicon basket inside the non-stick frying basket before adding food. This enhances non-stick properties and simplifies cleaning.



**Non-Stick Silicone Surface**

Effortless food release - no scrubbing, no residue, no frustration



 **Heat Resistant**     **Reusable**     **Non-Stick**     **High Flexibility**     **UV Resistance**

Image: Two silicon baskets, one red and one blue, demonstrating their features: heat resistant, reusable, non-stick, high flexibility, and UV resistance. These baskets are designed to fit inside the air fryer's main basket.

## OPERATING THE AIR FRYER

## Basic Operation

1. **Prepare Food:** Place your ingredients into the silicon basket within the non-stick frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the air fryer until it clicks securely into place.
3. **Power On:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.
4. **Set Temperature and Time:** Use the touch controls on the digital display to set the desired cooking temperature and time. Refer to recipe guidelines for specific settings. The 360° Rapid Air Circulation technology will ensure even cooking.
5. **Start Cooking:** Press the start button to begin the cooking process. The air fryer will automatically shut off when the timer reaches zero.
6. **Check Food:** For best results, shake the basket halfway through the cooking time for items like fries or nuggets. Carefully pull out the basket using the strong handle, shake, and reinsert.
7. **Remove Food:** Once cooking is complete, carefully pull out the basket. Use heat-resistant tongs or the provided handle tool to remove the cooked food from the silicon basket.

## Using Preset Menus

The Pigeon Air Fryer features 8 preset menus for common dishes. To use a preset:

1. After plugging in the unit, select the desired preset icon on the touch control panel.
2. The air fryer will automatically set the optimal temperature and time for that specific food.
3. You can adjust the temperature and time manually even after selecting a preset, if needed.
4. Press the start button to begin cooking.

The Pigeon logo, featuring the brand name in white text on a red oval background with a small white pigeon icon to the right.

## Easy Lift & Handle Design

Remove hot food safely without spilling or burns



Image: A person holding a blue silicon basket filled with a variety of cooked vegetables and potatoes. This illustrates the "Easy Lift & Handle Design" of the silicon basket, allowing safe removal of hot food.

## Designed for Multiple Uses

Bake, Roast, Reheat, Serve



Air Fryer



Oven



Microwave



Electric Cooker

Image: A collage of four images showing the red silicone basket in use. It is depicted inside an air fryer, a conventional oven, a microwave, and an electric cooker, highlighting its design for multiple uses including baking, roasting, reheating, and serving.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Frying Basket and Silicon Basket:** Wash the non-stick frying basket and the silicon basket with warm, soapy water. Use a non-abrasive sponge to prevent damage to the non-stick coating. Rinse thoroughly and dry completely. **Note: The air fryer components are NOT dishwasher safe.**
3. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or scouring pads.
4. **Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Do not immerse the main unit in water.
5. **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.

## Quick Rinse and Dishwasher Clean

Clean up in seconds so you can enjoy food, not chores



Image: A blue silicon basket being rinsed under a kitchen faucet. This demonstrates the ease of cleaning the silicon basket with a quick rinse, making maintenance simple.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working. Basket is not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance. Push the frying basket firmly until it clicks into place.
Food is not cooked evenly.	Basket is overfilled. Food items are stacked. Temperature or time settings are incorrect.	Do not overfill the basket. Cook in smaller batches if necessary. Shake the basket halfway through cooking. Adjust temperature and time according to recipe.

Problem	Possible Cause	Solution
White smoke comes from the appliance.	Grease residue from previous use. Fatty ingredients being cooked.	Clean the basket and heating element thoroughly after each use. For very fatty foods, you may need to drain excess fat from the basket during cooking.
Food is not crispy.	Too much moisture in food. Not enough oil (if required). Basket overfilled.	Pat food dry before air frying. Lightly brush or spray food with oil. Cook in smaller batches.

## PRODUCT SPECIFICATIONS

---

**Model Number:** 19004924

**Capacity:** 4.2 Liters

**Wattage:** 1200 Watts

**Voltage:** 240 Volts

**Control Method:** Touch Control with Digital Display

**Special Features:** Automatic Shut-Off, Programmable, Temperature Control, 360° Rapid Air Circulation

**Product Dimensions (D x W x H):** 25.2D x 29.1W x 34.5H Centimeters

**Item Weight:** 4000 Grams

**Color:** GREEN

**Included Components:** Air Fryer Unit, Silicon Basket, Handle Tool, Rotisserie Fork

**Dishwasher Safe:** No

## WARRANTY INFORMATION

---

This Pigeon 4.2L Digital Air Fryer (Model 19004924) comes with a **2-Year Manufacturer's Warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. Please retain your purchase receipt as proof of purchase for warranty claims.

The warranty does not cover damage resulting from misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

## CUSTOMER SUPPORT

---

For any questions, service, or warranty claims regarding your Pigeon Air Fryer, please contact the manufacturer directly:

**Manufacturer:** Stovekraft Limited

**Address:** 81/1 Harohalli Industrial Area, Kanakapura Taluk, Bangalore, Karnataka 562112, India.

**Website:** [www.pigeonindia.com](http://www.pigeonindia.com)

Please have your model number (19004924) and proof of purchase ready when contacting support.

