

FIBRAVE FS-HX-R520

FIBRAVE Ceiling Fan with Light and Remote Control

Model: FS-HX-R520

INTRODUCTION

Thank you for choosing the FIBRAVE Ceiling Fan with Light. This product combines a ceiling fan and an LED light, offering adjustable fan speeds and customizable lighting to enhance comfort and ambiance in your living space. Designed for easy installation and quiet operation, it is suitable for various indoor and covered outdoor areas. Please read this manual carefully before installation and use to ensure safe and optimal performance.

SAFETY INSTRUCTIONS

- Always turn off the main power supply at the circuit breaker before attempting any installation, maintenance, or cleaning.
- Ensure the installation location can support the weight of the fan.
- This product is designed for flush mount installation into an E27 bulb socket. Do not attempt to wire it separately for light and fan functions if your wiring does not support it.
- Do not use with dimmer switches or multi-speed fan switches not specifically designed for this product, as this may cause abnormal operation or damage.
- Keep hands and objects clear of the fan blades during operation.
- This fan is not waterproof. Do not expose it directly to rain or use in areas where it can get wet. Suitable for covered outdoor areas only.
- Ensure all connections are secure and properly insulated.
- If you are unsure about the installation process, consult a qualified electrician.

PACKAGE CONTENTS

Please check that all components are present and undamaged:

- 1x Ceiling fan with integrated light
- 1x Remote control
- 1x E27 base (with screws)
- 1x Extension rod

- 1x Installation manual

 
INSTALLATION

The FIBRAVE Ceiling Fan is designed for easy flush mount installation into a standard E27 bulb socket. Follow these steps carefully:

1. **Step 1: Power Off.** Before starting installation, ensure the power supply to the light fixture is turned off at the main circuit breaker.
2. **Step 2: Assemble Blades.** Attach the fan blades to the main unit as shown in the diagram. Ensure they are securely fastened.
3. **Step 3: Install E27 Base.** Screw the provided E27 base into your existing E27 bulb socket. If necessary, use the extension rod to adjust the fan's height.
4. **Step 4: Attach Fan Unit.** Connect the fan unit to the E27 base. Ensure it is firmly attached and stable.
5. **Step 5: Restore Power.** Once the fan is securely installed, restore power at the circuit breaker.

Installation

01

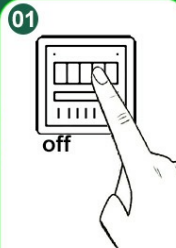


Étape 1:
Assurez-vous d'éteindre le courant avant l'installation.

02




Étape 2:
Assembler les 6 pales du ventilateur comme indiqué sur l'image.

 03

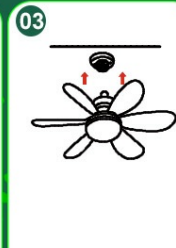

Étape 3:
Installer la lampe complète sur la douille.

 04

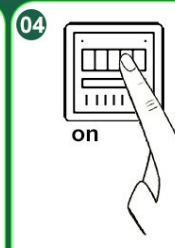

Étape 4:
Après installation, activez l'alimentation pour utiliser le ventilateur-lumière.

Consignes de la Télécommande

Power ON/OFF(Memory Function)

Light ON/OFF

 
3 Color temperature switching

Brightness

Medium wind

Soft wind

2h Timing



Fan ON/OFF

White light-

Brightness+

Warm light+

Strong wind

4h Timing

Night light

NOTE:
Veuillez insérer 2 piles avant utilisation.
Piles AAA 1,5 V × 2 (non fournies)

Detailed installation steps and remote control layout. Ensure power is off before installation.



Pour garantir un produit original et de qualité,
veuillez choisir exclusivement le vendeur **FIBRAVE-FR.**

✓
Installation 30 min

✓
Moins d'électricité

The fan is designed for quick installation, typically within 30 minutes.

Wall Switch Compatibility

This fan is compatible with classic ON/OFF wall switches to control both the fan and light simultaneously. It is not compatible with dimmer switches or multi-speed fan switches that are not specifically designed for this product.



Use standard ON/OFF switches. Avoid dimmer or multi-speed switches not designed for this unit.

OPERATING INSTRUCTIONS

The fan and light functions are controlled via the included remote control. Ensure 2x AAA 1.5V batteries (not included) are inserted into the remote before use.

Remote Control Functions:

- **Power ON/OFF (Memory Function):** Turns the unit on or off. The light retains its last setting.
- **Light ON/OFF:** Turns the light on or off independently.
- **Fan ON/OFF:** Turns the fan on or off independently.
- **3 Color Temperature Switching:** Cycles through Warm White (3000K), Neutral White (4000K), and Cool White (6500K).
- **Brightness +/-:** Adjusts the light brightness from 10% to 100%.
- **Fan Speed (3 Levels):** Selects between 3 fan speeds:
 - **Level 1 (Soft Wind):** Suitable for sleep.
 - **Level 2 (Medium Wind):** Ideal for entertainment.
 - **Level 3 (Strong Wind):** For high cooling needs.
- **Timer (2h/4h):** Sets an automatic shut-off timer for 2 or 4 hours.
- **Night Light:** Activates a low-brightness light setting.



 
Choose from 3 fan speeds for different situations.



Customize your lighting with 3 color temperatures and dimmable brightness.

Quiet Operation

This ceiling fan operates at a low noise level, as low as 20 dB, ensuring a peaceful environment, especially suitable for bedrooms and nurseries.

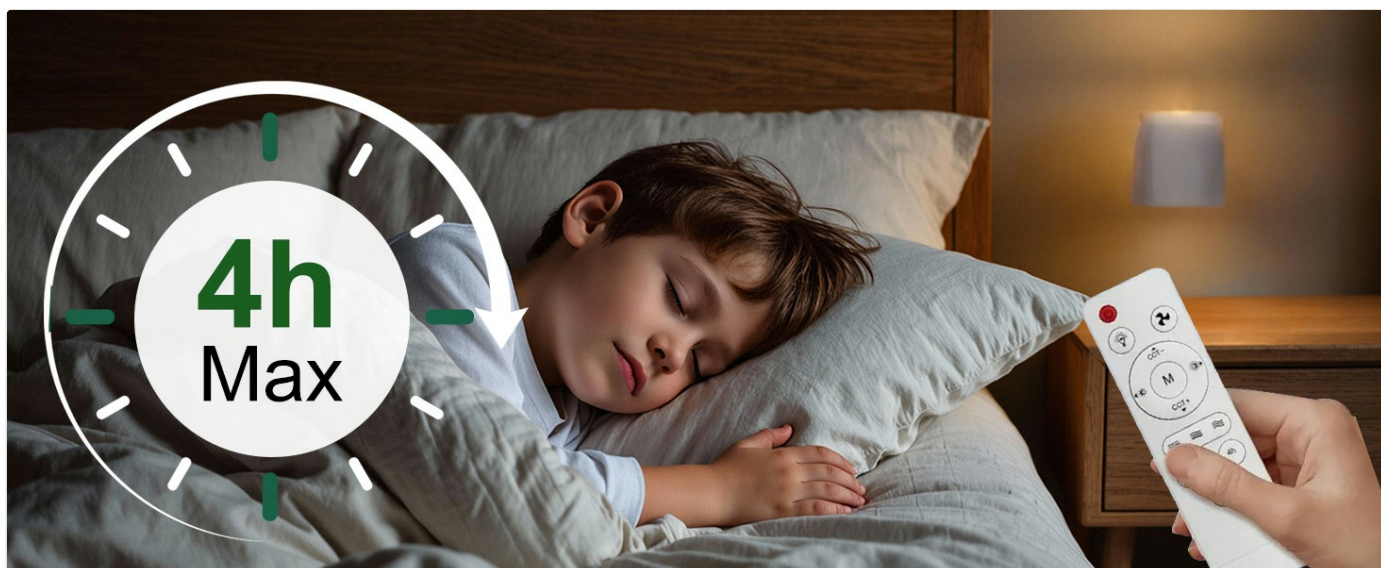

Enjoy a quiet experience with minimal noise during operation.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Before cleaning, ensure the power is turned off at the circuit breaker. Use a soft, damp cloth to wipe down the fan blades and light cover. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check that the fan blades are securely attached and free from damage.
- **Light Source:** The LED light source is integrated and not user-replaceable. If the light fails, please contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not operate.	No power supply; Remote control batteries are dead; Remote not paired.	Check circuit breaker; Replace remote batteries; Refer to remote pairing instructions (if applicable, not detailed in current data).
Light does not turn on.	No power supply; Light function off on remote.	Check circuit breaker; Press the light ON/OFF button on the remote.
Fan makes unusual noise.	Loose blades; Obstruction.	Ensure blades are securely fastened; Check for any objects interfering with blade rotation.
Remote control not responding.	Dead batteries; Out of range; Interference.	Replace batteries; Move closer to the fan; Remove potential sources of interference.

SPECIFICATIONS

Feature	Detail
Brand	FIBRAVE
Model Number	FS-HX-R520
Color	White
Material	Plastic
Product Dimensions (L x W x H)	52L x 52W x 18H centimeters (20.5 x 20.5 x 7.09 inches)
Wattage	30 Watts
Luminous Efficiency	1800 Lumens
Bulb Base	E27
Light Color Temperature	3000K (Warm White), 4000K (Neutral White), 6500K (Cool White)

Feature	Detail
Dimmable	Yes (10% - 100%)
Fan Speeds	3 levels
Control Method	Remote Control
Installation Type	Flush Mount (Ceiling)
Waterproof Level	Not waterproof (Suitable for covered outdoor use)
Motor Type	DC Motor



20 pouces correspondent au diamètre du ventilateur, pas à la taille des pales.

Dimension



40W

2500CFM

Moteur DC Haute Qualité

3 Vitesses (avec Mode Vent Naturel)

Encastré au Plafond

<10*10FT

Conseil : Vérifiez que les dimensions du produit correspondent à votre espace d'installation pour éviter tout retour dû à un mauvais ajustement.

Product dimensions and key technical specifications.

WARRANTY AND SUPPORT

FIBRAVE offers a 10-year warranty on the motor of this ceiling fan, reflecting our commitment to quality and durability. For any questions, technical assistance, or warranty claims, please contact FIBRAVE customer support through your purchase platform or the official FIBRAVE website.

Ventilateur Entier



10 Ans

Moteur



Moteur Cuivre Pur

Note



Si votre kit de lumière LED ou votre télécommande est endommagé ou perdu, veuillez nous contacter rapidement!

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What should I do if the blades of my FIBRAVE FS-HX-R520 screw-in ceiling fan broke off and detached during use?

This is a serious safety concern. While Manuals+ provides product documentation, we are not the manufacturer (FIBRAVE) and cannot issue recalls or provide official incident reports. However, based on the FIBRAVE FS-HX-R520 manual and...

[Read full answer](#)