

LK-027

LK-027 Mini Camera User Manual

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your LK-027 Mini Camera. Please read this manual thoroughly before using the product and retain it for future reference. The LK-027 is a compact and portable camera designed for daily recording, travel, and outdoor activities, featuring a 180-degree rotating lens and HD720P video capabilities.

2. PRODUCT OVERVIEW

The LK-027 Mini Camera is designed for ease of use and portability. It includes a 180-degree rotatable lens, a flip-up screen, and comes with a 64GB SD card for immediate use.



手のひらカメラ 美しさを切り取る

- 180° 回転自撮りスクリーン
- 多彩な美顔フィルター
- CMOS 手振れ補正撮影

MINIATURE CAMERA

Image: The LK-027 Mini Camera, highlighting its 180-degree rotating lens and beauty filter capabilities.

軽量セットアップ高画質撮影

この小型カメラは、美しい景色を高画質で捉えるのに役立ちます



Image: Two LK-027 Mini Cameras, one with its flip-up screen open, demonstrating its design.

2.1 Package Contents

- LK-027 Mini Camera
- 64GB SD Card
- USB Type-C Cable
- User Manual (English)

3. GETTING STARTED (SETUP)

3.1 Charging the Camera

1. Connect the included USB Type-C cable to the camera's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

Note: The camera does not include a built-in battery. It operates when connected to a power source or a portable power bank.

3.2 Inserting the SD Card

1. Locate the SD card slot on the side of the camera.
2. Insert the provided 64GB SD card into the slot with the metal contacts facing down until it clicks into place.
3. To remove, gently push the SD card until it pops out.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the power button for a few seconds until the screen illuminates.
- **Power Off:** Press and hold the power button again until the screen turns off.

4.2 Taking Photos

1. Ensure the camera is powered on and in photo mode (indicated on the screen).
2. Frame your shot using the LCD screen.
3. Press the shutter button to capture a photo.

4.3 Recording Videos

1. Ensure the camera is powered on and in video mode.
2. Press the record button to start recording. A red indicator or timer on the screen will confirm recording is active.
3. Press the record button again to stop recording.

ファッショナブルな Vlog 新ギア 高精細ファッション撮影

1080P 高精細撮影。旅の一瞬一瞬を、映画のようなクリップで残そう。



Image: A user demonstrating selfie and vlog recording with the LK-027 Mini Camera.

4.4 Using the 180° Rotating Lens and Flip Screen

The camera features a lens that can rotate 180 degrees and a flip-up screen, allowing for versatile shooting angles, including selfies and vlogging.

1. Gently rotate the lens to your desired angle.
2. Adjust the flip-up screen for optimal viewing, especially for self-portraits or vlogging.

180° 自撮り用フリップ画面 マルチアングル撮影



Image: A close-up view of the LK-027 Mini Camera's 180-degree flip screen, enabling multi-angle shooting.

4.5 Adjusting Settings

The camera offers basic settings adjustments. Navigate through the menu using the directional buttons and confirm selections with the OK button.

- **Photo/Video Mode Switch:** Use the mode button to switch between photo and video recording.
- **Resolution:** Set video resolution to HD720P (1280x720).
- **White Balance:** Automatic adjustment.
- **Exposure:** Automatic exposure control.
- **Beauty Filters:** Apply various beauty filters for enhanced photos.

ビューティーフィルター 多彩なスタイル



Image: A collage showcasing various beauty filter effects achievable with the LK-027 Mini Camera.

明るさだけでなく、柔らかみも実現

補助光を使えば、暗い場所でも瞬時に完璧なポートレートが撮れます。



フラッシュ不使用



フラッシュ使用

Image: The LK-027 Mini Camera, illustrating the difference in lighting with and without flash.

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove the SD card if storing for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	No power supply.	Connect the camera to a power source using the USB Type-C cable.

Problem	Possible Cause	Solution
Cannot take photos/videos.	SD card full or not inserted correctly.	Check SD card insertion. Delete unnecessary files or replace the SD card.
Poor image/video quality.	Insufficient lighting, dirty lens.	Ensure adequate lighting. Clean the lens with a soft cloth.
Camera freezes.	Temporary software issue.	Press and hold the power button to force a shutdown, then restart the camera.

7. SPECIFICATIONS

Feature	Detail
Model Name	LK-027
Brand	Generic
Special Feature	180° Rotating Lens
Video Capture Resolution	720p (1280x720)
Photo Sensor Technology	CMOS
Screen Size	2 inches
Optical Zoom	1X
Max Aperture	F2.8
Photo Sensor Resolution	8 MP
Compatible Mount	Clip
Aspect Ratio	16:9
File Format	MP4
Image Stabilization	None
Exposure Control	Auto
Form Factor	Compact Digital Camera
Image Sensor Size	1/3 inch
Flash Function	None
Waterproof	No
Frame Rate	24, 30, 60 fps
Self-Timer	No
ISO Range	100-3200
Connectivity	USB Type-C

Feature	Detail
Focus Function	Autofocus (AF-A)
Included Memory	64GB SD Card
Battery Included	No (Requires external power via USB-C)
Origin	China


mini
超ミニサイズ



**iPhone 17と
サイズ比較**



*mini
camera*

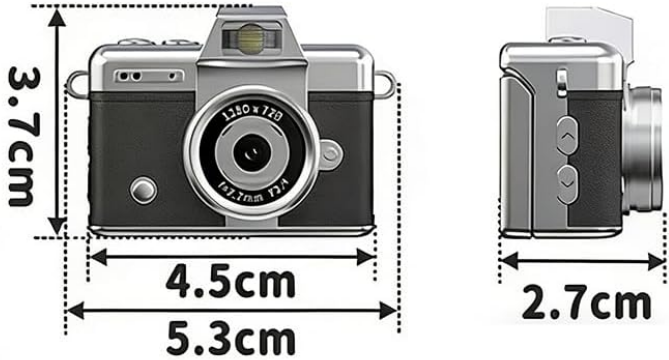

3.7cm
4.5cm
5.3cm
2.7cm

Image: A visual comparison of the LK-027 Mini Camera's compact size relative to a smartphone.



カメラ / ペンダント
軽量で持ち運びに便利

Image: The LK-027 Mini Camera shown being worn as a pendant and attached to a backpack, demonstrating its portability.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.