



[Manuals.plus](#) /

› [ECOPAD](#) /

› ECOPAD C5 Pro 11-inch Android 16 Tablet User Manual

ECOPAD C5 Pro

ECOPAD C5 Pro 11-inch Android 16 Tablet User Manual

Model: C5 Pro



1. INTRODUCTION

Thank you for choosing the ECOPAD C5 Pro 11-inch Android 16 Tablet. This device is designed for versatile use, offering a powerful computing experience with its advanced features and accessories. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your tablet to ensure optimal performance and longevity.



The ECOPAD C5 Pro tablet, shown with its full accessory set, including a Bluetooth keyboard, mouse, stylus, charger, and protective case.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- ECOPAD C5 Pro 11-inch Android 16 Tablet
- Bluetooth Keyboard
- Bluetooth Mouse
- Stylus Pen
- Tablet Protective Case
- Charger
- USB-C Cable
- User Manual (this document)


3. SETUP

3.1 Initial Power On and Configuration

1. **Charge the Tablet:** Before first use, fully charge the tablet using the provided charger and USB-C cable.
2. **Power On:** Press and hold the power button located on the side of the tablet until the ECOPAD logo appears.
3. **Follow On-Screen Prompts:** The tablet will guide you through the initial setup process, including language selection, Wi-Fi connection, Google account login, and security settings (e.g., face recognition, PIN).

3.2 Connecting the Bluetooth Keyboard

1. **Turn on Keyboard:** Flip the power switch on the keyboard to 'ON'.
2. **Enter Pairing Mode:** Press and hold the 'FN+C' keys on the keyboard. The Bluetooth indicator light will flash, indicating it is in pairing mode.
3. **Enable Tablet Bluetooth:** On your tablet, go to **Settings > Connected devices > Bluetooth** and turn Bluetooth on.
4. **Pair Device:** Select "Bluetooth Keyboard" from the list of available devices on your tablet to complete the pairing process.

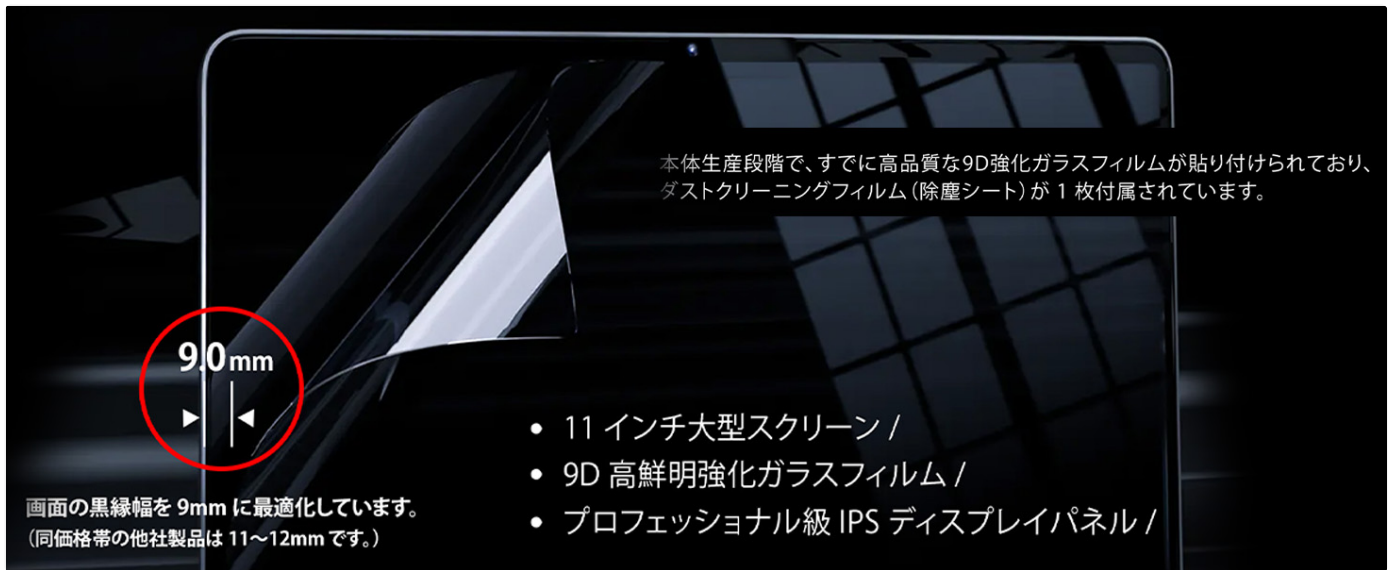

Visual guide for connecting the Bluetooth keyboard, highlighting the power switch and pairing button.

3.3 Connecting the Bluetooth Mouse

1. **Insert Batteries:** Open the battery cover on the back of the mouse and insert the batteries (not included in the set).
2. **Enable Tablet Bluetooth:** On your tablet, go to **Settings > Connected devices > Bluetooth** and turn Bluetooth on.
3. **Pair Device:** Select "BT5.2 Mouse" (or similar) from the list of available devices on your tablet to complete the pairing process.

Instructions for connecting the Bluetooth mouse, including battery insertion and pairing steps.

4. OPERATING INSTRUCTIONS

4.1 Android 16 with Gemini AI

The ECOPAD C5 Pro runs on the latest Android 16 operating system, featuring an intuitive user interface and enhanced security. Integrated Gemini AI optimizes system performance for various scenarios, providing real-time notifications, efficient multitasking, and smart operations. Gemini AI also assists with content recommendations, image processing, and semantic understanding.

2026最新発売

ECOPAD アンドロイド 16 タブレット

Android 16 | T7280 8コアCPU | ゲーム 薄型
| C5 Pro



システムAI、大幅強化アップグレード
Android 16

Unisoc T7280

成熟的な12nmプロセスで製造された
Unisoc T7280プロセッサは、
Antutuベンチマークで約7%高いスコアを達成し、
アプリの起動や切り替え、中高負荷なモバイル
ゲームまで驚くほど滑らかな応答性を実現します。
この性能向上は、CPUとGPUの両面での強化に裏付けられています。



Widevine L1



34GBメモリ: 実装6GB+仮想拡張28GB

先進的なメモリ仮想拡張技術により、
実装8GBの物理メモリを効果的に16GBまで拡張し、
合計24GBの滑らかなマルチタスク環境を実現。

Mali-G57 GPU



11インチ
大画面



USB Type-C



5mp
フロントカメラ



リアカメラ
8mp



16:10画面比率



8000mAh



デュアルバンド
(2.4GHz/5GHz)



Bluetooth 5.0



顔認識

Overview of the tablet's core features: Android 16, Unisoc T7280 processor, Widevine L1 support, 34GB memory, 8000mAh battery, and 11-inch display.

4.2 Performance and Storage

Equipped with a high-performance Unisoc T7280 Octa-core CPU, the tablet ensures smooth operation for multitasking and various applications. It features 6GB of physical RAM, expandable with 28GB of virtual RAM for a total of 34GB, enhancing app launch speeds and multitasking efficiency. The internal storage is 128GB, expandable up to 1TB with a microSD card, allowing ample space for digital content and applications.

もっと拡張し、もっと楽しむ

最大34GB*融合RAM、複数アプリ切り替え高速便利;
128GB高速ストレージ標準搭載、メモリーカードで容量拡張簡単。



最大34GB
6GB LPDDR4X



128GB
高速ストレージ



最大1TB
Memory Card拡張

The tablet's memory and storage capabilities, including 34GB RAM, 128GB internal storage, and 1TB expandable storage via microSD card.

4.3 Display and Multimedia

The 11-inch IPS display offers a resolution of 1280x800 pixels and a 90Hz refresh rate for smooth visuals. With Widevine L1 support, you can stream high-definition content (1080p and above) from services like Netflix and Amazon Prime Video without interruption.

映画級ビジュアルが広がる臨場感

11 インチ大画面と広色域、1280×800 高精細表示。

90Hz リフレッシュレートで滑らかな描画、Widevine L1 対応により、
動画コンテンツを最高画質で存分にお楽しみいただけます。



Widevine L3 はソフトウェアベースの暗号化復号を行う規格です。
対応する動画配信サービスでは解像度が制限され、
高精細な画質での視聴はできません。

Widevine L1 はハードウェアレベルでの暗号化復号に対応した最高クラスのセキュリティ規格です。
動画配信サービスを高精細な画質で視聴でき、
安定かつ安全な映像体験を実現します。



hulu

YouTube

prime video

HBOMAX

An illustration demonstrating the difference between Widevine L3 and L1, showing that L1 enables high-quality streaming on popular platforms.

4.4 Connectivity and Navigation

The tablet supports dual-band Wi-Fi (2.4GHz/5GHz) and Bluetooth 5.0 for fast and stable wireless connections. It also includes GPS for accurate positioning and navigation, making it suitable for various outdoor and travel uses.

4.5 Face Recognition

Unlock your device quickly and securely using face recognition. Simply look at the camera to unlock the tablet, eliminating the need for passwords or PINs and ensuring your privacy.



顔認証機能を搭載、さらにスマートに

カメラに顔を向けるだけでデバイスを解除
できます。パスワードやPINコードの入力
を省き、操作がスムーズです。同時に、高
度な技術により、他人からの不正アクセス
を防ぎ、ユーザーのプライバシーとセキュ
リティを確保します。

The tablet's face recognition feature provides quick and secure access to your device.

5. MAINTENANCE

5.1 Cleaning the Tablet

- Use a soft, lint-free cloth to gently wipe the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.
- Ensure no liquid enters ports or openings.

5.2 Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold), as this can degrade battery life.
- For optimal battery longevity, try to keep the charge level between 20% and 80%.
- If storing the tablet for an extended period, charge it to about 50% before turning it off.

5.3 Software Updates

Regularly check for and install system updates to ensure your tablet has the latest security patches and performance improvements. Go to **Settings > System > System update**.

6. TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on	Ensure the battery is charged. Connect the charger and try again. If it still doesn't power on, perform a forced restart by holding the power button for 10-15 seconds.
Wi-Fi connection issues	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
Bluetooth device not pairing	Ensure the Bluetooth device is in pairing mode and within range. Check if Bluetooth is enabled on the tablet. Restart both devices.
Slow performance	Close unnecessary background applications. Clear cache for frequently used apps. Ensure sufficient storage space is available. Restart the tablet.

Problem	Possible Solution
Screen unresponsive	Restart the tablet. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	ECOPAD
Model Name	C5 Pro
Operating System	Android 16
CPU	Unisoc T7280 Octa-core (2.2 GHz max speed)
GPU	Mali-G57
RAM	6GB Physical RAM + 28GB Virtual RAM (Total 34GB)
Internal Storage	128GB
Expandable Storage	microSD up to 2TB
Screen Size	11 inches
Display Type	IPS
Resolution	1280x800 pixels
Refresh Rate	90Hz
Aspect Ratio	16:9
Brightness	480 cd/m² (max)
Battery Capacity	8000mAh Lithium-ion (7200mAh voltage)
Average Battery Life	8 Hours
Rear Camera	8 MP
Front Camera	5 MP
Connectivity	Dual-band Wi-Fi (2.4GHz/5GHz), Bluetooth 5.0, 5G cellular technology (for data, not calls), GPS
Ports	USB-C, 3.5mm Headphone Jack
Special Features	Gemini AI, PC Mode support, USB OTG, Wireless Projection, Anti-reflection coating, Face Recognition, Widevine L1
Dimensions (L x W x H)	25.9 x 17.1 x 0.58 cm

Feature	Detail
Weight	535 grams
Certifications	PSE, CE, FCC, TELEC, GMS

8. WARRANTY AND SUPPORT

The ECOPAD C5 Pro tablet comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

For warranty claims, technical support, or any inquiries regarding your product, please contact ECOPAD customer service through the retailer where you purchased the device or visit the official ECOPAD support website.

9. GENERAL SAFETY INFORMATION

- Do not expose the tablet to water or excessive moisture.
- Avoid dropping or subjecting the tablet to severe impact.
- Use only ECOPAD-approved chargers and accessories.
- Do not attempt to disassemble, repair, or modify the tablet yourself. This will void the warranty and may cause damage or injury.
- Keep the tablet away from direct sunlight and heat sources.
- Dispose of the tablet and its battery responsibly according to local regulations.

