

Lifetime Air MELIEL6590/0033

Lifetime Air Telescopic Table Fan - Instruction Manual

Model: MELIEL6590/0033

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the fan and retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan in water or other liquids.
- Do not operate the fan with a damaged cord or plug.
- Keep fingers and other objects away from the fan blades during operation.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the provided USB-C cable for charging.
- Do not block air inlets or outlets.

2. PRODUCT OVERVIEW

The Lifetime Air Telescopic Table Fan is a versatile and portable cooling solution. It features a rechargeable battery, USB-C charging, four speed settings, and an adjustable height mechanism, allowing it to function as both a table fan and a floor fan.

Ventilateur table



4 vitesses
Réglables



Rechargeable
Connexion USB-C



Design réglable
Hauteur ajustable



Figure 2.1: The Lifetime Air Telescopic Table Fan in its compact table configuration, showcasing its clean white design and adjustable features.

Key Features:

- **4 Speed Settings:** Includes Low, Medium, High, and a Natural mode for varied airflow.
- **USB Rechargeable:** Built-in battery for cordless operation, charged via USB-C.
- **Telescopic Height Adjustment:** Adjustable from 13 cm to 55 cm.
- **Compact and Portable Design:** Easy to transport and store.
- **Quiet Operation:** Designed for minimal noise during use.

Fonctionnement silencieux

Une brise fraîche
sans bruit superflu



Design réglable

Le ventilateur est
réglable en
hauteur et peut
être utilisé de
manière flexible



Alimenté par USB-C

Facile à connecter à un
ordinateur portable,
une batterie externe ou
un adaptateur



Figure 2.2: Visual representation of the fan's silent operation, USB-C charging capability, and adjustable design for flexible use.

3. SETUP

3.1 Unpacking and Initial Charge

1. Carefully remove the fan and all accessories from the packaging.
2. Inspect the fan for any signs of damage. If damaged, do not use and contact customer support.
3. Before first use, fully charge the fan using the provided USB-C cable. Connect the USB-C end to the fan's charging port and the USB-A end to a compatible USB power adapter (not included) or a computer USB port. The charging indicator light will show charging status.

3.2 Height Adjustment

The fan features a telescopic pole for adjustable height, allowing it to be used as a compact table fan or extended for floor use.

1. To adjust the height, gently pull the fan head upwards from the base to extend the telescopic pole.
2. To lower the fan, gently push the fan head downwards until it reaches the desired height or is fully collapsed.
3. Ensure the pole is securely locked at your desired height before operation.



Figure 3.1: A user demonstrating the telescopic height adjustment feature, extending the fan from a compact table size to a taller standing position.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn the fan ON, press the power button located on the base.
- To turn the fan OFF, press and hold the power button for a few seconds until the fan stops.

4.2 Speed Settings

The fan offers four distinct speed settings, including a natural mode.

1. After turning the fan on, press the speed button repeatedly to cycle through the settings: Low (1), Medium (2), High (3), and Natural (4).
2. The Natural mode simulates a natural breeze by varying the fan speed.



Avec 4 vitesses

Choisissez le flux d'air souhaité

Figure 4.1: A detailed view of the fan's control panel, showing the power button and four speed indicators (Low, Med, High, Nature).

5. MAINTENANCE

5.1 Cleaning

- Always ensure the fan is turned off and unplugged before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- For dust accumulation on the fan blades, use a dry cloth or a soft brush. Do not use abrasive cleaners or solvents.
- Do not allow water to drip into the motor housing.

5.2 Storage

- When not in use for extended periods, collapse the fan to its most compact size.
- Store the fan in a cool, dry place, away from direct sunlight and extreme temperatures.
- It is recommended to store the fan in its original packaging to protect it from dust and damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the fan using the USB-C cable. Press and hold the power button firmly.
Fan stops unexpectedly.	Low battery.	Recharge the fan.
Weak airflow.	Fan blades are dirty. Incorrect speed setting.	Clean the fan blades (refer to Maintenance section). Increase the speed setting.
Fan makes unusual noise.	Obstruction near blades. Fan not on a stable surface.	Turn off and unplug the fan, then check for and remove any obstructions. Place the fan on a flat, stable surface.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Lifetime Air
Model Number	MELIEL6590/0033
Color	White
Fan Type	Telescopic Table Fan / Pedestal Fan
Power Source	USB Power (Rechargeable Battery)
Number of Speeds	4 (Low, Medium, High, Natural)
Adjustable Height	13 cm – 55 cm
Base Diameter	19 cm
Product Dimensions (D x W x H)	19.5P x 19l x 77H cm (fully extended)
Item Weight	782 Grams
Material	Plastic
Included Components	USB-C Cable



Figure 7.1: Visual representation of the fan's key dimensions, including its 19 cm base diameter and adjustable height range of 13 to 55 cm.

8. WARRANTY AND SUPPORT

Information regarding product warranty is typically provided at the point of purchase or within separate documentation included with the product. Please refer to your purchase receipt or the retailer's website for specific warranty details.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Lifetime Air customer service through the retailer where the product was purchased.

Please have your model number (MELIEL6590/0033) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question