

Decofy DC-BG13

Decofy Farmhouse Nightstand with Charging Station (Model DC-BG13)

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Decofy Farmhouse Nightstand with Charging Station. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture. Please read all instructions carefully before beginning assembly or use.

2. SAFETY INFORMATION

- Always assemble the nightstand on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight recommendation of 110 pounds (50 kg) for the top surface.
- Keep children and pets away from the assembly area. Small parts can be a choking hazard.
- For electrical safety, do not overload the charging station. Ensure the power cord is not pinched or damaged.
- Keep liquids away from the charging station to prevent electrical shock.
- This product is intended for indoor use only.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. Each part is labeled with a serial number for easy identification. A pack of spare parts is included.

- Wood Panels (various sizes for top, sides, back, drawers)
- Hardware Pack (screws, dowels, cam locks, drawer slides, handles)
- Charging Station Unit (with 1 Type-C port, 1 USB port, 2 AC outlets)
- Power Cord (4.9 feet)
- Assembly Guide

- Installation Tool (screwdriver)

4. ASSEMBLY INSTRUCTIONS (SETUP)

Assembly is designed to be straightforward with clear, user-friendly instructions provided in the included Assembly Guide. We recommend having a screwdriver ready for assembly.

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a soft, clean surface. Match each part to the corresponding serial number in the Assembly Guide.
2. **Assemble Frame:** Follow the step-by-step diagrams in the Assembly Guide to construct the main frame of the nightstand. Ensure all connections are snug.
3. **Install Drawer Slides:** Attach the drawer slides to the nightstand frame and drawer sides as indicated in the instructions.
4. **Assemble Drawers:** Construct the three drawers, ensuring the bottoms are properly seated and handles are attached.
5. **Integrate Charging Station:** Install the charging station unit into the designated slot on the top panel. Secure it according to the instructions.
6. **Final Checks:** Once assembled, gently move the nightstand to its desired location. Verify stability and ensure all drawers open and close smoothly.

Product Dimension



Figure 4.1: Product Dimensions. The nightstand measures 15.74 inches deep, 18.11 inches wide, and 24.01 inches high. Each drawer measures 13.77 inches wide, 11.81 inches deep, and 4.33 inches high internally, with a 6.69 inch front panel height.

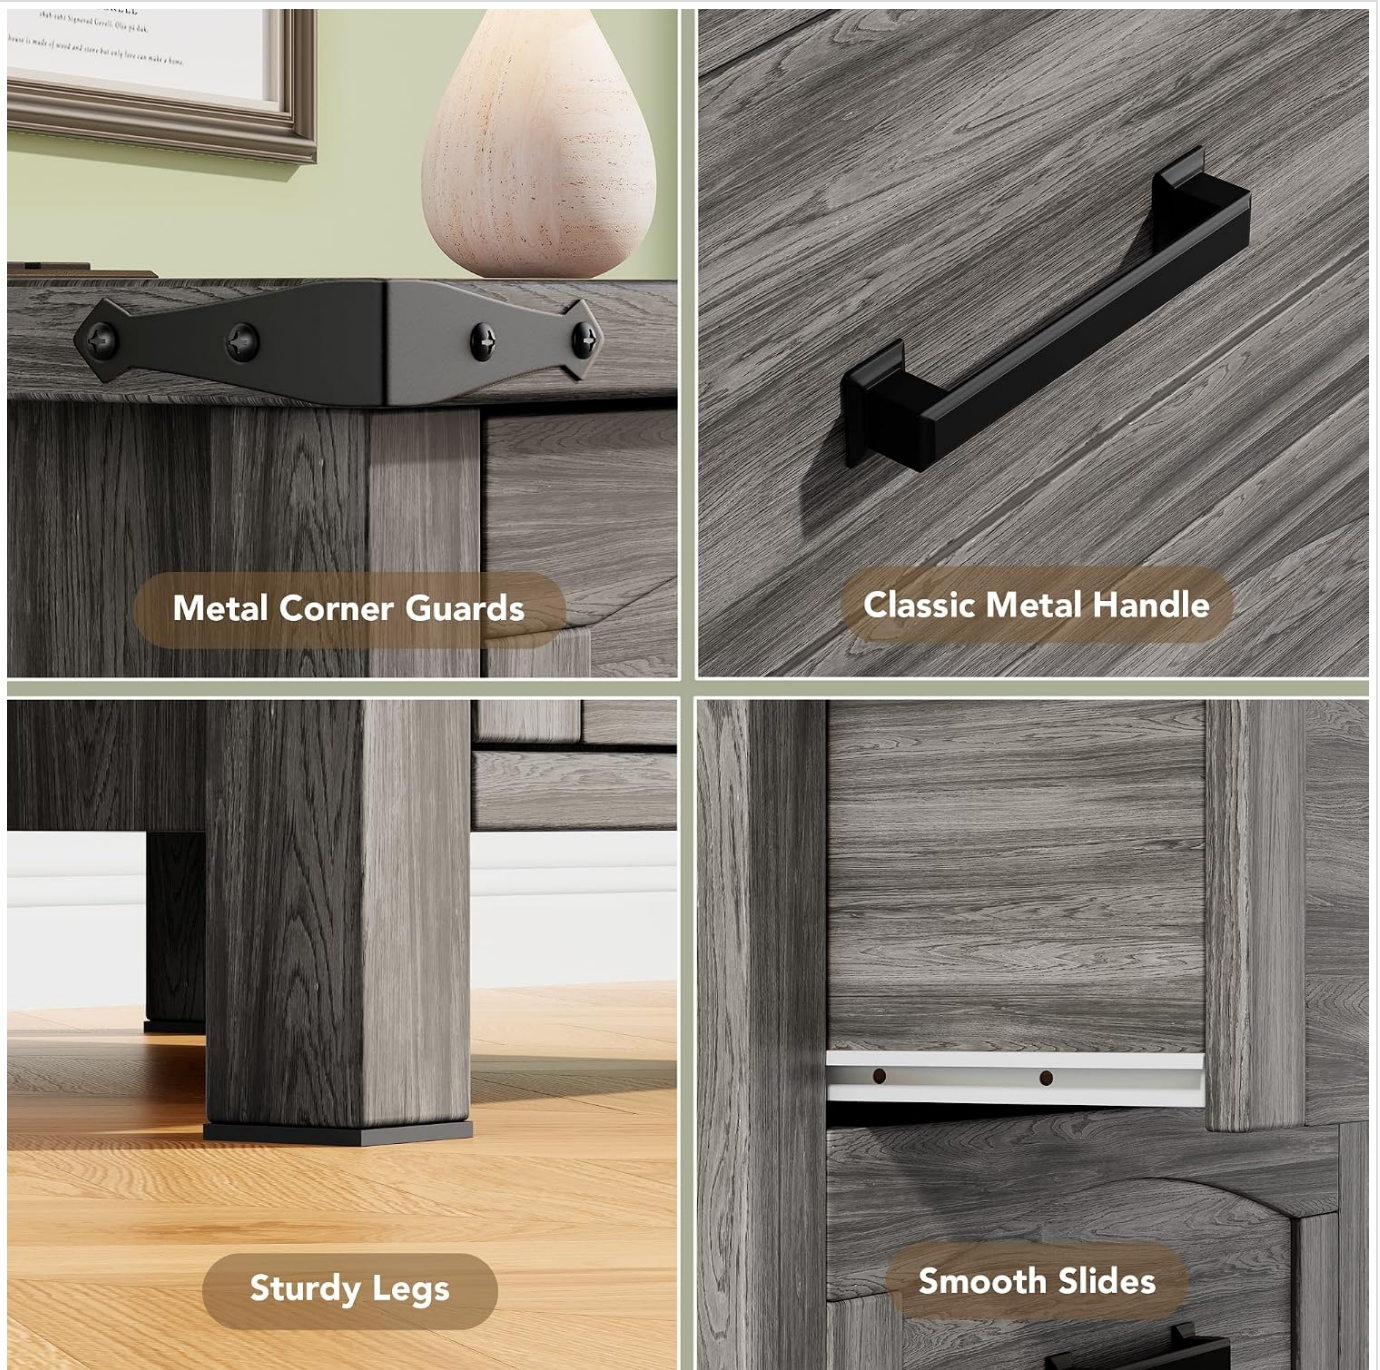


Figure 4.2: Construction Details. This image highlights the metal corner guards for durability, classic metal handles for easy access, sturdy legs for stability, and smooth drawer slides for effortless operation.

5. OPERATING INSTRUCTIONS (CHARGING STATION)

The integrated charging station provides convenient power access for your devices.

- **Power Connection:** Plug the nightstand's power cord (4.9 feet long) into a standard 125V AC wall outlet.
- **AC Outlets:** Two 125V-12A AC power outlets are available for larger electronics like lamps or laptops.
- **USB Ports:** One 5V-2A USB-A port and one 5V-2A Type-C port are available for charging smartphones, tablets, and other USB-powered devices.
- **Usage:** Simply plug your device's charging cable into the appropriate port on the charging station.

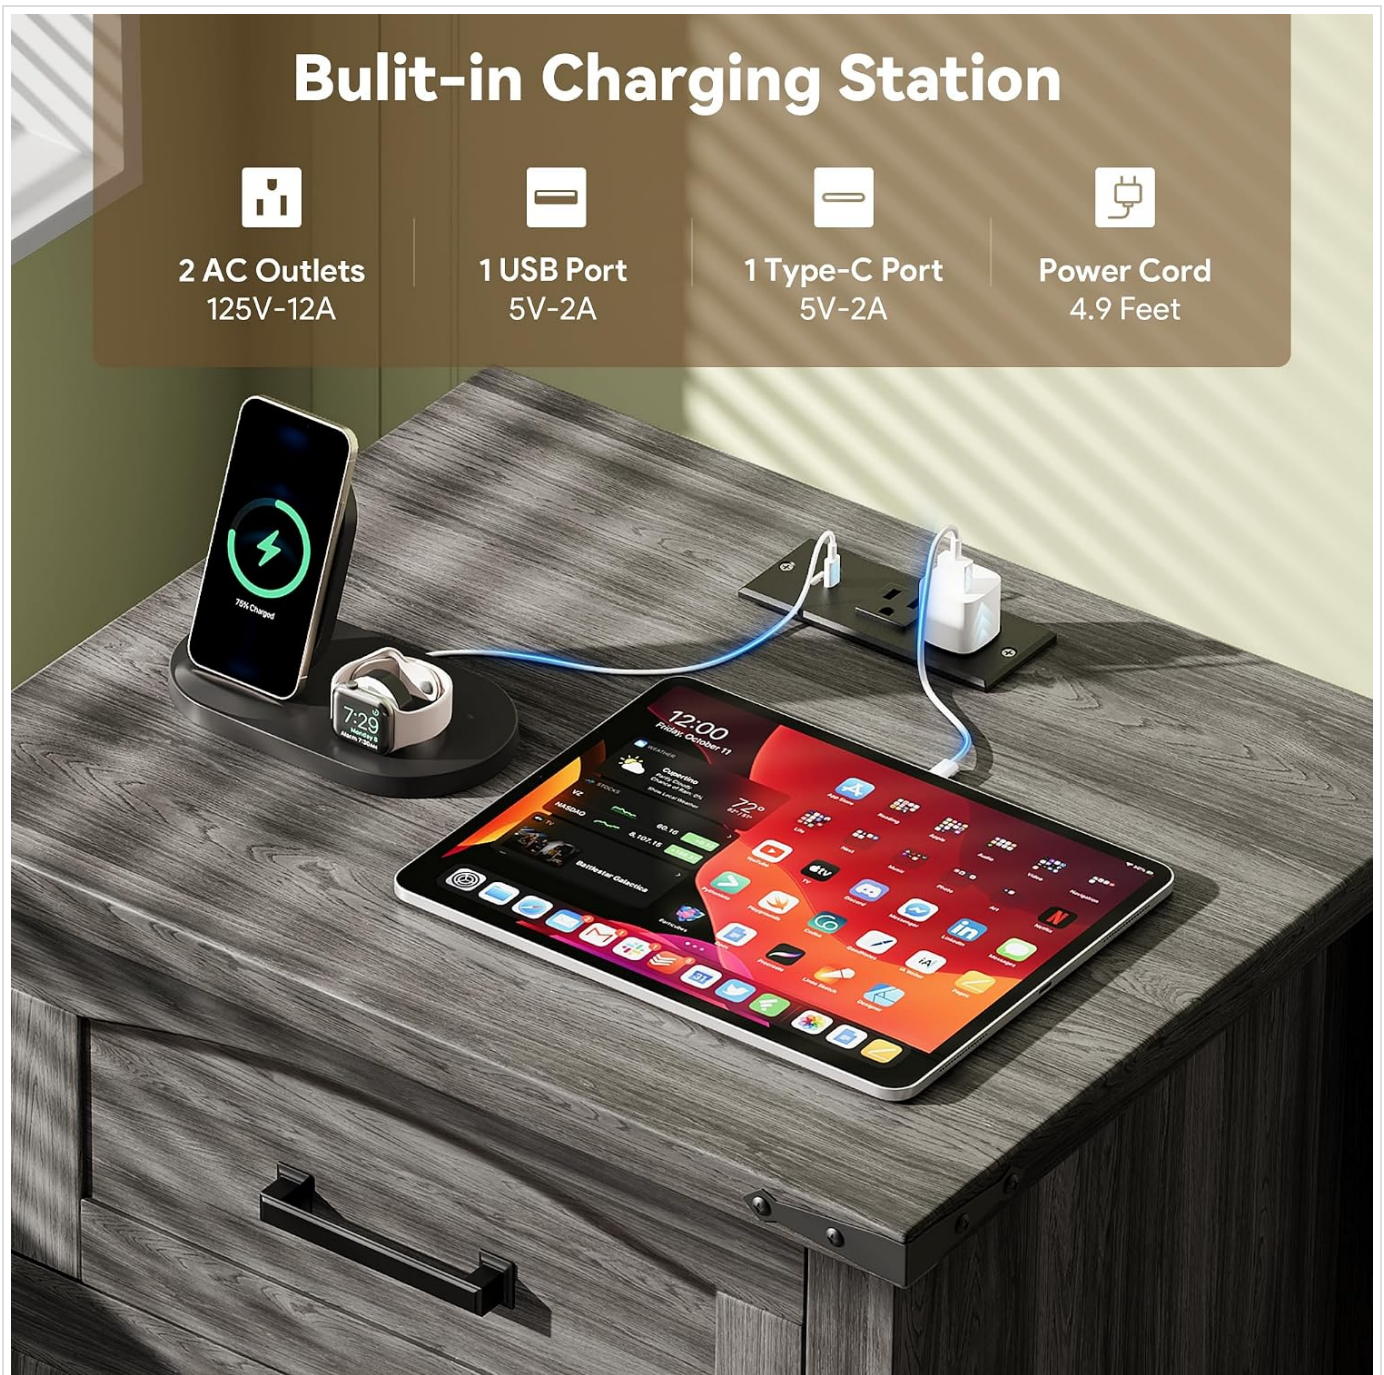


Figure 5.1: Built-in Charging Station. The nightstand features two AC outlets (125V-12A), one USB port (5V-2A), and one Type-C port (5V-2A) for convenient device charging.

6. MAINTENANCE

To maintain the appearance and longevity of your Decofy nightstand, follow these care guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Electrical:** Periodically inspect the power cord and charging station for any signs of wear or damage. Disconnect from power if any issues are observed.

7. TROUBLESHOOTING

If you encounter any issues with your nightstand, refer to the following common solutions:

Problem	Possible Cause	Solution
Nightstand is wobbly	Loose fasteners or uneven floor.	Check and tighten all screws. Adjust furniture levelers if present, or place shims under legs on uneven surfaces.
Drawers do not slide smoothly	Drawer slides misaligned or debris in tracks.	Ensure drawer slides are correctly installed and aligned. Clear any obstructions from the tracks.
Charging station not working	Not plugged in, power outage, or faulty device/cable.	Verify the nightstand's power cord is securely plugged into a live outlet. Test with a different device or charging cable. Check household circuit breaker.
Missing or damaged parts	Packaging error or transit damage.	Refer to the 'Warranty and Support' section to contact customer service for replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	Decofy
Model Name	DC-BG13
Product Dimensions (D x W x H)	15.74" x 18.11" x 24.01"
Item Weight	59.3 pounds
Maximum Weight Recommendation	110 pounds
Frame Material	Engineered Wood
Color	Grey Oak
Number of Drawers	3
Charging Station	1 Type-C port (5V-2A), 1 USB port (5V-2A), 2 AC power outlets (125V-12A)
Power Cord Length	4.9 feet
Tools Recommended For Assembly	Screwdriver
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

Decofy is committed to providing quality products. While specific warranty details are not provided in this manual, we ensure that each product includes a pack of spare parts for convenience during assembly. For any questions, missing parts, or concerns regarding your Decofy Farmhouse Nightstand, please contact our customer support. Our team is ready to assist you with any issues you may encounter.

Please retain your purchase receipt for any warranty claims or support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question