

## Havells GHICRWK160

# Havells Cook Pro PB 16 Induction Cooktop Instruction Manual

Model: GHICRWK160

[Introduction](#)   [Safety Instructions](#)   [Product Overview](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Havells Cook Pro PB 16 Induction Cooktop. Please read these instructions thoroughly before using the appliance and retain them for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the cooktop is placed on a stable, flat, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children away from the appliance during operation.
- Do not operate the cooktop if the power cord or plug is damaged.
- Use only induction-compatible cookware. Non-compatible cookware will not heat.
- Do not place metallic objects such as knives, forks, spoons, or lids on the induction cooktop surface as they can become hot.
- Unplug the cooktop from the outlet when not in use and before cleaning.
- The ceramic plate may remain hot after use. Avoid touching it immediately.
- This appliance features **6kV Surge Protection** to safeguard against sudden voltage fluctuations.

## 6 Pre-Set Functions

One-touch modes designed for effortless and versatile cooking



Image: The Havells Cook Pro PB 16 Induction Cooktop highlighting its 6kV Surge Protection feature, which protects the appliance from voltage spikes.

### 3. PRODUCT OVERVIEW

The Havells Cook Pro PB 16 Induction Cooktop is designed for efficient and convenient cooking. It features a sleek design with an intuitive control panel.

#### Control Panel and Display

The cooktop is equipped with a digital display for time and power settings, along with touch controls for various functions.

# Cook Pro PB 16 Induction

With 1600W performance, efficient heating and reliable for cooking every day



Image: The control panel of the Havells Cook Pro PB 16 Induction Cooktop, showing buttons for various preset cooking modes like Curry, Milk/Tea, Dosa, Idli, Fry, and Manual.

## Key Features:

- **Digital Display:** Shows time and power levels.
- **6 Cooking Modes:** Pre-set functions for common dishes (Curry, Milk/Tea, Dosa, Idli, Fry, Manual).
- **8 Power Level Settings:** Allows precise control over cooking intensity.
- **Auto Pan Detection:** Automatically detects compatible cookware.
- **IP67 Waterproof Protection:** Designed to withstand spills and splashes.
- **6kV Surge Protection:** Protects against voltage fluctuations.

## 4. SETUP

---

### Unpacking

1. Carefully remove the induction cooktop from its packaging.
2. Inspect the appliance for any signs of damage. Do not use if damaged.
3. Remove all packaging materials, stickers, and labels.

### Placement

- Place the cooktop on a dry, stable, and heat-resistant surface.
- Ensure there is adequate ventilation around the appliance (at least 10 cm clearance from walls or other objects).
- Do not place the cooktop near heat sources or on metallic surfaces.

### Power Connection

- Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (refer to specifications).

## 5. OPERATING INSTRUCTIONS

---

### Compatible Cookware

The Havells Cook Pro PB 16 Induction Cooktop requires cookware made of ferromagnetic materials. This includes cast iron, enameled iron, stainless steel with a magnetic base, or induction-specific cookware. To check compatibility, place a magnet on the bottom of your pot or pan; if it sticks, the cookware is compatible.



Image: The Havells Cook Pro PB 16 Induction Cooktop demonstrating its Auto Pan Detection feature with a pot of food on the cooking surface.

### Basic Operation

1. Place compatible cookware with food on the center of the ceramic plate.
2. Press the **ON/OFF** button to turn on the cooktop. The digital display will illuminate.
3. Select a cooking mode or adjust power manually:
  - **Preset Modes:** Press the desired preset button (e.g., Curry, Milk/Tea, Dosa, Idli, Fry). The cooktop will automatically adjust power and time settings.
  - **Manual Mode:** Press the "Manual" button, then use the **+** and **-** buttons to adjust the power level (1 to 8 settings).
4. **Timer Function:** Press the "Timer" button, then use **+** and **-** to set the desired cooking time. The cooktop will automatically turn off when the timer expires.
5. To stop cooking, press the **ON/OFF** button. The cooktop will enter standby mode.

## 6. MAINTENANCE AND CARE

---

### Cleaning

- Always unplug the cooktop and allow it to cool completely before cleaning.
- Wipe the ceramic surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive

cleaner specifically designed for ceramic cooktops.

- The Havells Cook Pro PB 16 features **IP67 Waterproof Protection**, allowing it to withstand splashes and spills, making cleaning easier. However, avoid submerging the unit.
- Clean the control panel with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the internal components.



Image: The Havells Cook Pro PB 16 Induction Cooktop with water boiling in a pot, illustrating its IP67 Waterproof Protection against spills and splashes.

## Storage

- Store the cooktop in a cool, dry place when not in use.
- Do not place heavy objects on top of the cooktop during storage.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; power cord not plugged in; fuse blown.	Check power outlet; ensure cord is securely plugged in; check household fuse/circuit breaker.
Cookware is not heating.	Cookware is not induction-compatible; cookware is too small or too large for the heating zone; no cookware detected.	Use induction-compatible cookware; ensure cookware base covers the heating zone; place cookware centrally.
Cooktop makes a humming noise.	Normal operation with certain types of cookware or at high power settings.	This is normal and not a fault. The noise may vary with different cookware.

Problem	Possible Cause	Solution
Error code displayed.	Specific internal fault or sensor issue.	Refer to the full user manual for specific error codes or contact customer support.

If the problem persists after attempting these solutions, please contact Havells customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Havells
Model Number	GHCICRWK160
Generic Name	Induction Cooktop
Heating Elements	1
Color	Black
Power Source	Corded Electric
Fuel Type	Electric
Item Weight	2 kg 270 g
Item Dimensions (LxWxH)	37 x 28 x 4.5 Centimeters
Included Components	1 N Induction Cooktop
Special Features	6 Cooking Modes, Digital Display, 8 Power Levels, 6kV Surge Protection, IP67 Waterproof Protection

## 9. WARRANTY AND SUPPORT

### Warranty Information

For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Havells website. Keep your purchase receipt as proof of purchase for warranty claims.

### Customer Support

If you have any questions, require technical assistance, or need to report a fault, please contact Havells customer support. Contact details can typically be found on the Havells website or in the product packaging.

Manufacturer: Havells, 904, Surya Kiran Building, K.G. Marg, New Delhi – 110001. (India)

