

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 2-4 Person SUV Compatible Camping Tent Instruction Manual, Model A20-548V00DB

Outsunny A20-548V00DB

Outsunny 2-4 Person SUV Compatible Camping Tent Instruction Manual

MODEL: A20-548V00DB

Introduction

This manual provides comprehensive instructions for the safe and efficient use of your Outsunny 2-4 Person SUV Compatible Camping Tent. Please read this manual thoroughly before assembly and use, and retain it for future reference. Proper setup and maintenance will ensure the longevity and performance of your tent.

Safety Instructions

- Do not set up the tent near open flames or heat sources.
- Ensure proper ventilation to prevent suffocation.
- Secure the tent properly with all stakes and guy ropes to prevent collapse in windy conditions.
- Avoid using sharp objects inside the tent to prevent damage to the fabric.
- Keep children and pets supervised around the tent.
- Do not use the tent during severe weather conditions such as heavy storms or lightning.
- Always check the ground for sharp objects before pitching the tent.

Package Contents

Verify that all components listed below are present before beginning assembly:

- Tent Body
- Rainfly
- Tent Poles (9.5 mm)
- Guy Ropes (8 pieces)
- Tent Stakes

- Carry Bag
- Instruction Manual (this document)



Image: Illustration of the tent package, showing the tent body, poles, stakes, and carry bag.

Setup Instructions

The Outsunny camping tent can be set up as a freestanding tent or attached to an SUV. Assembly typically takes 5-15 minutes.

1. Prepare the Area

Choose a flat, clear area free from sharp objects. Lay out the tent body on the ground.

2. Assemble the Poles

Connect the tent pole sections. Insert the poles into the sleeves on the tent body.

3. Raise the Tent

Arch the poles and secure them into the corner pins or grommets. This will raise the tent structure.



Installation en
5 à 15 minutes

RAPIDE INSTALLATION BIEN ORGANISÉE

Système d'assemblage simple avec
solutions de rangement intérieur
pratiques



Image: A person assembling the tent, showing the poles being inserted and the tent taking shape.

4. Attach the Rainfly

Drape the rainfly over the tent body, ensuring the doors and windows align. Secure the rainfly to the tent poles or base using the attached buckles or hooks.

5. Secure the Tent

Stake down all corners of the tent. Attach the guy ropes to the designated loops on the tent and rainfly, then stake them firmly into the ground. Adjust tension as needed.

CONCEPTION AÉRÉE À TROIS PORTES

Il comporte plusieurs entrées et des fenêtres à moustiquaire pour une ventilation transversale optimale



Image: A fully set up tent, showing the rainfly in place and guy ropes extended and staked.

6. SUV Attachment (Optional)

If attaching to an SUV, position the tent's rear opening against the vehicle's rear. Use the nylon straps and buckles to secure the tent to the SUV's roof rack or other suitable attachment points, ensuring a snug fit to prevent gaps.



Image: The Outsunny tent shown attached to the rear of an SUV, demonstrating its versatile design.

Operating Instructions

Ventilation

The tent features three double doors and a rear mesh window for optimal airflow. Open the outer fabric layers of the doors and window to expose the mesh for ventilation while keeping insects out. Close the outer layers for privacy and weather protection.

SALLE DE TENUE SPACIEUSE

Profitez d'une grande liberté de mouvement grâce à une hauteur sous plafond importante et d'un espace généreux pour votre famille et vos meubles



**200 cm
Hauteur
centrale**



Image: Interior view of the tent, highlighting the spacious design and open doors for ventilation.

Storage Pockets and Hook

Utilize the interior storage pockets (40L x 18H cm) to keep small items organized and accessible. A 1 kg capacity hook is provided for hanging a lantern or other lightweight gear.

DES DÉTAILS SOIGNÉS

Gardez les articles de camping
essentiels organisés et à portée de main



**Crochet d'une
capacité de 1 kg**



Poche de rangement

Image: Close-up of the tent's interior, showing a storage pocket with items and a hanging hook with a lantern.

Maintenance

Cleaning

Clean the tent with a soft sponge and mild soap. Do not use harsh detergents or bleach. Rinse thoroughly with water and allow the tent to air dry completely before packing. Do not machine wash or tumble dry.

Storage

Ensure the tent is completely dry before folding and storing it in the carry bag. Store in a cool, dry place away from direct sunlight and extreme temperatures. This prevents mildew growth and fabric degradation.

Inspection

Regularly inspect poles for damage, fabric for tears, and zippers for proper function. Repair any damage promptly to extend the tent's lifespan.

Troubleshooting

Tent Not Standing Firmly

- **Issue:** Tent feels unstable or sways excessively.
- **Solution:** Ensure all poles are fully assembled and correctly inserted into grommets/sleeves. Verify all stakes are firmly driven into the ground and guy ropes are properly tensioned.

Water Leakage

- **Issue:** Water is entering the tent during rain.
- **Solution:** Check that the rainfly is correctly positioned and fully secured over the tent body. Ensure all zippers are fully closed. Inspect the fabric for any tears or punctures and repair as necessary.

Condensation Inside Tent

- **Issue:** Moisture buildup on the interior walls.
- **Solution:** Increase ventilation by opening mesh windows and doors. Condensation is natural in certain conditions; proper airflow helps minimize it.

Specifications

Feature	Detail
Model Number	A20-548V00DB
Dimensions (L x W x H)	250 cm x 250 cm x 200 cm
Weight	8.6 kg
Capacity	2-4 Persons
Water Resistance Rating	3000 mm (Oxford 210D fabric)
Wind Resistance Level	Level 4
Assembly Time	5-15 minutes
Included Components	Tent Body, Rainfly, Tent Poles, Guy Ropes, Tent Stakes, Carry Bag
Color	Dark Blue



Image: Diagram illustrating the dimensions of the tent and its packed size.

Warranty and Support

For warranty information or technical support, please refer to the retailer's policy or contact Outsunny customer service. Keep your purchase receipt as proof of purchase.