

[Manuals.plus](#) /

› [SakerPlus](#) /

› Sakerplus Multifunctional Vegetable Peeler CP101825 User Manual

SakerPlus CP101825

Sakerplus Multifunctional Vegetable Peeler

MODEL: CP101825

User Manual

Introduction

The Sakerplus Multifunctional Vegetable Peeler is designed for efficient kitchen preparation and outdoor use. Featuring an ergonomic wooden handle and a 2-in-1 stainless steel blade, this tool offers both peeling capabilities and an integrated bottle opener. Its unique "Contour-Flow" blade is engineered to glide smoothly, reducing food waste and preparation time.

KITCHEN MASTER

Multi-Tool Peeler & Opener



PEEL & OPEN



Image: The Sakerplus Multifunctional Peeler, showcasing its wooden handle, stainless steel blade, and integrated bottle opener.

Product Features

- **"Contour-Flow" Blade Technology:** Uniquely curved stainless steel blade designed to follow the natural shape of fruits and vegetables for efficient peeling and reduced waste.
- **Reduced Food Waste:** Engineered to create ultra-thin, consistent peels, preserving more of the produce.
- **Ergonomic Wooden Handle:** Provides a comfortable, secure, and non-slip grip, even when wet, minimizing hand fatigue.
- **Durable Construction:** High-quality stainless steel blade resists rust and maintains sharpness, paired with a sturdy wooden handle for longevity.
- **Integrated Bottle Opener:** A convenient feature built into the handle, making it suitable for kitchen use, camping, picnics, and outdoor cooking.

PEELER PERFORMANCE

Precision vs. Waste



Image: A visual comparison demonstrating the Sakerplus peeler's precision in removing only thin layers of skin from a potato, contrasted with a generic peeler that removes more flesh.

Setup

1. **Unpack:** Carefully remove the peeler from its packaging.
2. **Initial Cleaning:** Before first use, wash the peeler thoroughly with warm, soapy water. Rinse completely and dry immediately to prevent water spots on the stainless steel blade and to protect the wooden handle.
3. **Inspection:** Inspect the blade for any manufacturing imperfections. If the blade feels rough, gently smooth it with a fine-grit sharpening stone or very fine sandpaper, then wash again.

Operating Instructions

Peeling Fruits and Vegetables

1. **Grip:** Hold the peeler firmly by its wooden handle. The ergonomic design ensures a comfortable and secure grip.

2. **Position:** Place the blade against the surface of the fruit or vegetable you wish to peel. The "Contour-Flow" blade is designed to adapt to various shapes.
3. **Peel:** Apply gentle, consistent pressure and draw the peeler along the surface. The sharp stainless steel blade will remove a thin layer of skin.
4. **Direction:** You can peel in either a forward or backward motion, depending on your preference and the item being peeled.
5. **Suitable for:** Apples, potatoes, carrots, cucumbers, zucchini, pumpkins, papayas, and many other fruits and vegetables.



Image: A person demonstrating the peeling action on a zucchini, highlighting the thin peels achieved by the "Contour-Flow" blade.

Using the Integrated Bottle Opener

1. **Locate:** Identify the bottle opener notch integrated into the stainless steel part of the peeler, near the handle.
2. **Position:** Place the notch under the cap of a bottle.
3. **Open:** Apply upward pressure to the handle while holding the bottle steady to lift and remove the cap.

4. **Ideal for:** Opening capped bottles during outdoor activities like camping, picnics, or barbecues.



DOUBLES AS A BOTTLE OPENER

(Perfect for Outdoor
Cooking)

Image: The Sakerplus peeler demonstrating its secondary function as a bottle opener, removing a cap from a glass bottle.

Maintenance

- **Hand Wash Only:** To preserve the wooden handle and the sharpness of the blade, hand wash the peeler with warm, soapy water immediately after each use.
- **Rinse and Dry:** Rinse thoroughly and dry the peeler completely with a soft cloth. Do not leave it to air dry, especially the wooden handle, as this can lead to warping or cracking over time.
- **Storage:** Store the peeler in a dry place, away from excessive moisture. Consider using a knife block or drawer organizer to protect the blade and prevent accidental cuts.
- **Blade Care:** The stainless steel blade is designed to retain its sharpness. If it becomes dull over extended use, it can be carefully sharpened with a fine-grit sharpening stone.

Troubleshooting

Problem	Possible Cause	Solution
Peeler not removing skin effectively.	Blade is dull or has a rough edge.	Carefully sharpen the blade with a fine-grit sharpening stone. If a rough edge is present from manufacturing, gently smooth it with fine sandpaper or a sharpening stone before first use.
Wooden handle appears dry or faded.	Lack of proper care or exposure to excessive moisture/dryness.	Periodically apply a food-safe mineral oil or wood conditioner to the handle to maintain its appearance and prevent cracking.
Rust spots on the stainless steel blade.	Prolonged exposure to moisture, especially acidic foods, or improper drying.	Clean immediately after use and dry thoroughly. For existing spots, use a stainless steel cleaner or a paste of baking soda and water, then rinse and dry.

Specifications

Feature	Detail
Brand	SakerPlus
Model Name	CP101825
UPC	703079394949
Blade Material	Stainless Steel
Handle Material	Wood
Operation Mode	Manual
Number of Blades	2 (dual-edge design)
Special Feature	Rustproof, Integrated Bottle Opener
Recommended Uses	Fruit, Vegetable Peeling, Bottle Opening

Warranty

SakerPlus products are manufactured to high-quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for any warranty claims. For specific warranty details and duration, refer to the packaging or contact SakerPlus customer support.

Support

For any questions, assistance, or to report an issue with your Sakerplus Multifunctional Vegetable Peeler, please contact SakerPlus customer support. You can typically find contact information on the product packaging or by visiting the official

SakerPlus website. When contacting support, please have your product model number (CP101825) and proof of purchase available.

Note: Always exercise caution when handling sharp objects. Keep out of reach of children.

© 2026 SakerPlus. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question