

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [V-Guard](#) /

› V-Guard VIC 06 V1 1600W Induction Cooktop User Manual

V-Guard Vic 06 v1

V-Guard VIC 06 V1 1600W Induction Cooktop User Manual

Model: VIC 06 V1

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your V-Guard VIC 06 V1 1600W Induction Cooktop. Please read this manual thoroughly before using the appliance and retain it for future reference.



**ENERGY
EFFICIENT**



**MULTIPLE
COOKING MODES**



**Up to 3kV
SURGE PROTECTION**



**3 YEAR WARRANTY
for Induction Coil**



**PRODUCT
WARRANTY**



**MADE IN
INDIA**



**MADE
IN INDIA**

Image 1: The V-Guard VIC 06 V1 Induction Cooktop, showcasing its sleek black design, crystalline glass worktop, digital display, and soft-touch control buttons. Below the cooktop, icons highlight key features such as energy efficiency, multiple cooking modes, 3kV surge protection, 3-year warranty on the induction coil, 1-year product warranty, and its "Made in India" origin.

SAFETY PRECAUTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage rating matches your local power supply.
- Keep the appliance away from children and pets.
- Do not operate the appliance if the cord or plug is damaged.
- Use only induction-compatible cookware.
- Do not place metallic objects (knives, forks, spoons, lids) on the cooktop surface as they can become hot.
- Ensure proper ventilation around the appliance during use.

SETUP

1. Unpacking

Carefully remove the induction cooktop from its packaging. Inspect the appliance for any damage. Retain the packaging materials for future transport or storage.

2. Placement

- Place the cooktop on a flat, stable, heat-resistant surface.
- Ensure there is adequate space around the appliance for ventilation (at least 10 cm from walls or other objects).
- Do not place the cooktop near heat sources or on metallic surfaces.

3. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the voltage requirements of the appliance (230 Volts).

4. Compatible Cookware

The V-Guard VIC 06 V1 requires induction-compatible cookware. Look for cookware with a flat bottom and a symbol indicating suitability for induction hobs (often a coil symbol). Materials like cast iron, enameled iron, and stainless steel with a magnetic base are suitable. Aluminum, copper, glass, and ceramic cookware are generally not compatible unless specifically designed for induction.

OPERATING INSTRUCTIONS

1. Controls Overview

The cooktop features a 4-digit LED display and soft-switch push buttons for easy operation.

- **Power Button:** To turn the appliance on or off.
- **+/- Buttons:** To adjust power levels or temperature settings.
- **Function Buttons:** For selecting pre-set cooking modes.
- **LED Display:** Shows power level, temperature, or timer settings.

2. Power On/Off

1. Place suitable cookware with food on the center of the cooktop.
2. Press the **Power** button to turn on the appliance. The LED display will illuminate.
3. To turn off, press the **Power** button again.

3. Adjusting Power and Temperature

After turning on the cooktop, you can adjust the power or temperature:

- Use the +/- buttons to select from 8 power levels or temperature settings, ranging from 80°C to 240°C.
- The LED display will show the selected power level or temperature.

4. Pre-set Cooking Functions

The cooktop includes pre-set functions optimized for common Indian dishes:

- **Dosa/Roti:** Optimized for flatbreads.
- **Idli:** Suitable for steaming idlis.
- **Milk:** Gentle heating for milk.
- **Boiling:** High power for rapid boiling.
- **Frying:** Consistent heat for frying.

To use a pre-set function, press the corresponding function button. The cooktop will automatically adjust to the optimal power and temperature for that mode.

5. Safety Features

- **Automatic High/Low Voltage Cut-off:** Protects the appliance from power fluctuations.
- **Automatic Power Cut-off:** The cooktop will automatically shut off if no compatible cookware is detected or after a period of inactivity.
- **3kV Surge Protection:** Provides enhanced protection against electrical surges.

MAINTENANCE

1. Cleaning

Always unplug the cooktop and allow it to cool completely before cleaning.

- **Crystalline Glass Worktop:** Wipe with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops. Dry thoroughly.
- **ABS Top Frame and PP Bottom:** Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the cooktop in water or spray water directly onto it.

2. Storage

When not in use for extended periods, clean the cooktop and store it in a dry, cool place, away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter issues with your induction cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Power cord not properly plugged in; Main switch off.	Check power outlet; Ensure cord is securely plugged in; Turn on main switch.
Cooktop turns off automatically.	No compatible cookware detected; Overheating; Automatic power cut-off activated.	Use induction-compatible cookware; Allow cooktop to cool down; Ensure proper ventilation.
Food not heating.	Incorrect cookware; Cookware not centered; Low power setting.	Use induction-compatible cookware; Center cookware on the heating zone; Increase power setting.
Display shows an error code.	Specific internal fault or condition.	Refer to the specific error code in the full manual (if available) or contact customer support. Try resetting by unplugging for 5 minutes.

If the problem persists after attempting these solutions, please contact V-Guard customer support.

SPECIFICATIONS

Feature	Detail
Model Number	Vic 06 v1
Brand	V-Guard
Wattage	1600 Watts
Voltage	230 Volts
Heating Elements	1
Control Type	Soft-switch push buttons
Display	4-digit LED display
Temperature Range	80°C to 240°C (8 levels)
Material	ABS Top Frame, PP Bottom, Crystalline Glass Worktop
Item Dimensions (D x W x H)	28D x 36W x 6H Centimeters
Item Weight	3 Kilograms
Special Features	Digital Display, Automatic High/Low Voltage Cut-off, Automatic Power Cut-off, 3kV Surge Protection, Pre-set Cooking Functions
Included Components	1 Induction Cooktop

WARRANTY AND SUPPORT

1. Warranty Information

- **Product Warranty:** 1 year from the date of purchase.
- **Induction Coil Warranty:** 3 years from the date of purchase.

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use conditions. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

2. Customer Support

For any queries, service requests, or technical assistance, please contact V-Guard customer support.

- **Manufacturer:** V-GUARD
- Refer to your warranty card or V-Guard's official website for the latest contact information.

© 2023 V-Guard. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GSH79ZTN>

More documents and user manuals: <https://manuals.plus/>