

OutIn Mino with Fino

OutIn Mino with Fino Portable Electric Espresso Machine and Coffee Grinder User Manual

Model: Mino with Fino

INTRODUCTION

Thank you for choosing the OutIn Mino Portable Electric Espresso Machine and the OutIn Fino Portable Electric Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your devices. Please read it thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

- Always ensure the device is fully charged before use to prevent interruptions during operation.
- Do not immerse the main body of the espresso machine or grinder in water. Clean with a damp cloth.
- Keep out of reach of children.
- Use only clean, potable water for the espresso machine.
- Do not operate the grinder without coffee beans or with foreign objects inside.
- Avoid disassembling the devices beyond what is described in this manual. Contact customer support for repairs.
- Ensure all parts are correctly assembled before operation to prevent leaks or malfunction.

PACKAGE CONTENTS

Please check the package for the following items:



Image: OutIn Mino Espresso Machine Components. This image displays the OutIn Mino portable espresso machine along with its accessories. Labeled components include: a. OutIn Mino (main unit), b. Foldable Spoon (12g), c. Ground Coffee Filter, d. Basket Removal Tool, e. Dosing Funnel, f. Capsule Adapter.



Image: OutIn Fino Coffee Grinder Components. This image shows the OutIn Fino portable coffee grinder and its accessories. Labeled components include: a. Fino Portable Bag, b. Hex Key, c. Ground Coffee Cup Lid with Dosing Funnel, d. USB-C Charging Cable, e. OutIn Fino (main unit), f. Cleaning Brush Air Blower, g. Inner Burr.

PRODUCT OVERVIEW

OutIn Mino Portable Electric Espresso Machine

The OutIn Mino is a compact, portable electric espresso machine designed for on-the-go use. It features a durable construction and is capable of brewing espresso from both ground coffee and capsules.

World's Smallest, Unbeatable Power

Smaller but Stronger
Fits Anywhere, Brews Everywhere.



Image: OutIn Mino Size Comparison. This image illustrates the compact size of the OutIn Mino, held in a hand, with dimensions of 67mm (2.64in) diameter and 195mm (7.67in) height, highlighting its portability.

Adventure-Ready, Built to Last



IP67

All-Weather Shield

Splash, Water & Dust
Resistance



-15°C to 45°C

Extreme Range

Performance Guaranteed
in Extreme Cold & Heat

*-15°C=5°F, 45°C=113°F



5,000 m

High-Altitude Proof

Smart Chip for Stable
Extraction

Image: OutIn Mino Durability Features. This image highlights the robust design of the OutIn Mino, featuring IP67 All-Weather Shield for splash, water, and dust resistance, an extreme operating temperature range of -15°C to 45°C (5°F to 113°F), and 5,000m high-altitude proof for stable extraction.

OutIn Fino Portable Electric Coffee Grinder

The OutIn Fino is a portable electric coffee grinder designed to complement the Mino, offering precise grind settings for various coffee brewing methods.



Image: OutIn Fino Grind Adjustment Dial. This image shows the top portion of the OutIn Fino grinder, highlighting its precision dial with 28 settings for micro-adjustment of grind size, from fine to coarse.



Image: OutIn Fino Bean Loading. This image demonstrates the bean loading process for the OutIn Fino grinder, showing coffee beans being poured into the top chamber, emphasizing its ease of use.

SETUP

OutIn Mino Espresso Machine Initial Setup

1. **Charge the Device:** Before first use, fully charge the OutIn Mino using the provided USB-C cable. The indicator light will show charging status.
2. **First Clean:** Disassemble the water tank and filter basket. Wash all removable parts with warm soapy water, rinse thoroughly, and dry.
3. **Run a Cleaning Cycle:** Fill the water tank with clean water (without coffee) and run a brewing cycle to flush the internal system.

OutIn Fino Coffee Grinder Initial Setup

1. **Charge the Device:** Fully charge the OutIn Fino using the provided USB-C cable.
2. **First Clean:** Use the cleaning brush air blower to remove any manufacturing dust from the burrs.
3. **Adjust Grind Setting:** Turn the grind adjustment dial to your desired setting. Refer to the 'Operating the Fino Grinder' section for guidance.

OPERATING INSTRUCTIONS

Operating the OutIn Mino Espresso Machine (Ground Coffee)

1. **Prepare Coffee:** Grind fresh coffee beans to a fine espresso grind using the OutIn Fino grinder. Use the foldable spoon to measure approximately 12g of ground coffee.
2. **Fill Filter Basket:** Place the ground coffee filter into the portafilter. Use the dosing funnel to add the ground coffee into the filter basket. Tamp lightly if desired.
3. **Assemble:** Attach the portafilter with the filled basket to the main unit.
4. **Add Water:** Unscrew the water tank and fill it with hot or cold water, depending on your preference. Do not exceed the MAX fill line.
5. **Brew Espresso:** Screw the water tank back onto the main unit. Press and hold the power button for 2 seconds to turn on. Press the power button once to start brewing. The machine will automatically stop when the espresso is extracted.
6. **Enjoy:** Carefully remove the portafilter and enjoy your fresh espresso.

Operating the OutIn Mino Espresso Machine (Capsule)

1. **Insert Capsule:** Place a compatible coffee capsule into the capsule adapter.
2. **Assemble:** Attach the capsule adapter with the capsule to the main unit.
3. **Add Water:** Unscrew the water tank and fill it with hot or cold water. Do not exceed the MAX fill line.
4. **Brew Espresso:** Screw the water tank back onto the main unit. Press and hold the power button for 2 seconds to turn on. Press the power button once to start brewing. The machine will automatically stop when the espresso is extracted.
5. **Enjoy:** Carefully remove the capsule adapter and enjoy your fresh espresso.



Image: OutIn Mino Brewing Espresso. This image shows the OutIn Mino espresso machine with its components for both ground coffee and capsule use, alongside a freshly brewed shot of espresso in a glass.

Operating the OutIn Fino Coffee Grinder

1. **Adjust Grind Setting:** Rotate the grind adjustment dial at the bottom of the grinder to select your desired fineness. The dial has 28 positions, with lower numbers typically indicating finer grinds (e.g., espresso) and higher numbers for coarser grinds (e.g., French press).
2. **Load Beans:** Open the top lid and pour whole coffee beans into the bean hopper. Do not overfill.
3. **Start Grinding:** Close the lid securely. Press the power button to start grinding. The grinder will operate until the beans are fully ground or the battery is low.
4. **Collect Grounds:** Once grinding is complete, unscrew the bottom collection cup to retrieve your fresh coffee grounds.

MAINTENANCE

OutIn Mino Espresso Machine Cleaning

1. **After Each Use:** Discard used coffee grounds or capsules. Rinse the portafilter, filter basket, and water tank under running water.
2. **Wipe Down:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners.
3. **Deep Clean (Weekly/Bi-weekly):** Disassemble all removable parts. Wash with warm soapy water, rinse thoroughly, and allow to air dry completely before reassembling.
4. **Descaling:** If you notice reduced flow or mineral buildup, perform a descaling cycle using a descaling solution suitable for coffee machines (follow descaling solution instructions).

OutIn Fino Coffee Grinder Cleaning

1. **After Each Use:** Empty the ground coffee collection cup. Use the cleaning brush air blower to remove any residual coffee grounds from the burrs and hopper.
2. **Deep Clean (Monthly):** For a more thorough clean, you may carefully remove the inner burr (refer to the Fino components image for the hex key) and brush away any accumulated coffee oils or fine particles. Reassemble carefully.
3. **Wipe Down:** Wipe the exterior with a damp cloth. Do not immerse in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mino not brewing / no water flow	Low battery; insufficient water; clogged filter; airlock.	Charge device; refill water tank; clean filter basket; run a cycle without coffee to clear air.
Mino espresso tastes weak	Too coarse grind; too little coffee; water not hot enough (if using cold water setting).	Use finer grind; increase coffee dose; use hot water for stronger extraction.
Fino grinder not starting	Low battery; bean hopper empty; jammed burrs.	Charge device; add coffee beans; clear any obstructions from burrs.

Problem	Possible Cause	Solution
Fino grinder producing inconsistent grind	Burrs need cleaning; burrs not properly seated.	Clean burrs thoroughly; ensure inner burr is correctly reassembled.
Leaking from Mino	Parts not securely tightened; damaged O-rings.	Ensure all components (water tank, portafilter) are tightly screwed on. Inspect O-rings for damage.

SPECIFICATIONS

Feature	OutIn Mino Espresso Machine	OutIn Fino Coffee Grinder
Dimensions (approx.)	67mm (2.64in) diameter x 195mm (7.67in) height	Not specified, but designed for portability
Weight (approx.)	685g	Not specified, but designed for portability
Material	Stainless steel portafilter, BPA-free Tritan cup	Food-safe materials
Water Resistance	IP67 (Splash, Water & Dust Resistant)	Not specified
Operating Temperature	-15°C to 45°C (5°F to 113°F)	Not specified
Altitude Proof	Up to 5,000m	Not specified
Grind Settings	N/A	28-position precision dial
Charging Port	USB-C	USB-C

WARRANTY AND SUPPORT

OutIn products are designed for quality and durability. For specific warranty information, please refer to the warranty card included with your purchase or visit the official OutIn website. If you encounter any issues not covered in this manual, or require further assistance, please contact OutIn customer support through their official channels.

You can find more information and support at the [OutIn Store on Amazon](#).

