

Caroma D2

Caroma Peak 800W Electric Scooter User Manual

Brand: Caroma | **Model:** D2

INTRODUCTION

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your Caroma Peak 800W Electric Scooter. Please read this manual thoroughly before first use and retain it for future reference. The Caroma Peak 800W Electric Scooter is designed for adult use, featuring a powerful 800W motor, 16x3 inch fat tires for all-terrain capability, and a comfortable seat with a storage basket.

1. SETUP AND ASSEMBLY

Your Caroma Peak Electric Scooter arrives approximately 85% pre-assembled. Final assembly primarily involves attaching the front wheel, handlebars, pedals, and the storage basket. Follow the steps below for proper assembly.

1.1 Unpacking and Initial Inspection

- Carefully remove all components from the packaging.
- Inspect all parts for any signs of damage during transit. Contact customer support immediately if any damage is found.
- Ensure all listed components are present: 1 Scooter, assembly tools (if included).

1.2 Front Wheel Installation

Before installing the front wheel, remove any protective packaging from the front fork. Untighten the flange nut and safety hook from the front wheel axle.

SUPERIOR RIDING SYSTEM



Image: Detailed view of the scooter's rear wheel and motor, showing key performance indicators.

Align the front wheel with the fork, ensuring the brake disc is correctly positioned within the caliper. Secure the wheel using the provided nuts and safety hooks.

1.3 Handlebar and Pedal Attachment

- Attach the handlebars to the stem, ensuring they are centered and tightened securely.
- Screw the pedals into the crank arms. Note that pedals are typically marked 'L' for left and 'R' for right, and the left pedal often has a reverse thread.

1.4 Basket Installation

Mount the storage basket to the designated attachment points on the scooter frame, typically at the front or below the seat, using the provided hardware.



Image: The Caroma Peak Electric Scooter fully assembled, ready for use.

1.5 Assembly Video Guide

For a visual guide on the assembly process, please refer to the official installation video:

Your browser does not support the video tag.

Video: Official installation guide for Caroma D1/D2/D3 Electric Scooters, demonstrating step-by-step assembly.

2. OPERATING INSTRUCTIONS

Familiarize yourself with the scooter's controls and features before your first ride.

2.1 Powering On/Off and Display

To power on the scooter, insert the key into the ignition and turn it. The upgraded LED display will activate, showing real-time speed, battery level, mileage, and the current riding mode.

LED Daylight-Viewable



Real-Time
Speed



Battery
Status



Speed
Modes



Image: The scooter's LED display, indicating speed, battery, and riding modes.

2.2 Riding Modes

The scooter offers multiple riding modes to suit different preferences and terrains:

- **ECO Mode:** For extended range and energy efficiency.
- **TOUR Mode:** A balanced mode for general riding.
- **SPORT Mode:** Provides maximum power and speed (up to 20 MPH) for dynamic riding.

Switch between modes using the controls on the handlebars as indicated on the LED display.

2.3 Battery and Charging

The Caroma Peak D2 is equipped with a 48V 7.8AH rechargeable battery, offering a range of up to 25 miles on a single charge. Always ensure the battery is fully charged before long rides. The battery level is indicated on the LED display.

MEET YOUR STORAGE NEEDS



Image: Visual representation of the scooter's battery and estimated range.

2.4 All-Terrain Capability

The 16x3 inch fat tires provide enhanced stability and grip, making the scooter suitable for various terrains, including uneven roads, off-road paths, and beaches. These tires also help absorb vibrations for a smoother ride.

2.5 Storage Basket

The integrated front storage basket is designed for carrying small items such as bags, groceries, or small pets. Ensure items are securely placed to prevent shifting during operation.

ENLARGED COMFORT SADDLE



Image: The scooter's storage basket, shown with a pet inside.

2.6 Riding Experience Videos

Observe the scooter in action and its riding characteristics:

Your browser does not support the video tag.

Video: A short clip showcasing the comfortable riding experience of the Caroma D1-D3 scooters.

Your browser does not support the video tag.

Video: A detailed overview of the Caroma Motorcycle Style Electric Scooter, highlighting its seat and basket features.

3. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric scooter.

3.1 General Cleaning

- Wipe down the scooter with a damp cloth after each use to remove dirt and dust.
- Avoid using high-pressure water jets directly on electrical components.

3.2 Tire Care

- Regularly check tire pressure and inflate to the recommended PSI (usually found on the tire sidewall).
- Inspect tires for wear, punctures, or damage before each ride.

3.3 Battery Care

- Charge the battery fully after each ride, especially if storing for an extended period.
- Avoid completely draining the battery, as this can reduce its lifespan.
- Store the scooter and battery in a cool, dry place away from direct sunlight and extreme temperatures.

3.4 Brake System

- Regularly check the brake levers and cables for proper tension and function.
- Ensure brake pads are not excessively worn. Replace them as needed.
- Note that disc brakes are designed for effective slowing and stopping, but may require adjustment if squeaking occurs.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your Caroma Peak Electric Scooter.

4.1 Scooter Does Not Power On

- Ensure the key is fully inserted and turned to the 'ON' position.
- Check the battery level on the display. If low, charge the battery.
- Verify all cable connections are secure and not damaged.

4.2 Reduced Range or Power

- The battery may not be fully charged. Ensure a complete charge cycle.
- Battery degradation can occur over time. If the issue persists, consider battery replacement.
- Check tire pressure; underinflated tires can increase resistance and reduce range.
- Riding conditions (e.g., steep inclines, heavy loads, cold weather) can affect range and power.

4.3 Brakes Squeak or Feel Ineffective

- Squeaking brakes can often be resolved by cleaning the brake discs and pads.
- Check for proper alignment of the brake caliper and disc.
- If brakes feel weak, the cables may need adjustment or the pads may be worn and require replacement.

4.4 Throttle Issues

- Inspect the throttle mechanism and its cable connections for any visible damage or dislodgement.
- Ensure the throttle returns smoothly to its original position.

If you encounter problems that cannot be resolved using these troubleshooting steps, please contact Caroma customer support.

5. SPECIFICATIONS

Feature	Specification
---------	---------------

Brand	Caroma
Model Name	D2
Motor Power	Peak 800W Brushless Hub Motor
Battery	48V 7.8AH Rechargeable Battery
Maximum Speed	20 MPH
Maximum Range	25 miles (varies by usage)
Wheel Size	16 inches
Tire Type	16x3 inch Fat Tires (Pneumatic, Rubber)
Brake Style	Front Braking (Disc Brakes)
Weight Limit	300 pounds
Age Range	Adult
Special Features	Digital Display, Storage Basket
Manufacturer	Shenzhen DYU Intelligent Mobility Technology Co.,Ltd
UPC	850082172788
Included Components	1 Scooter

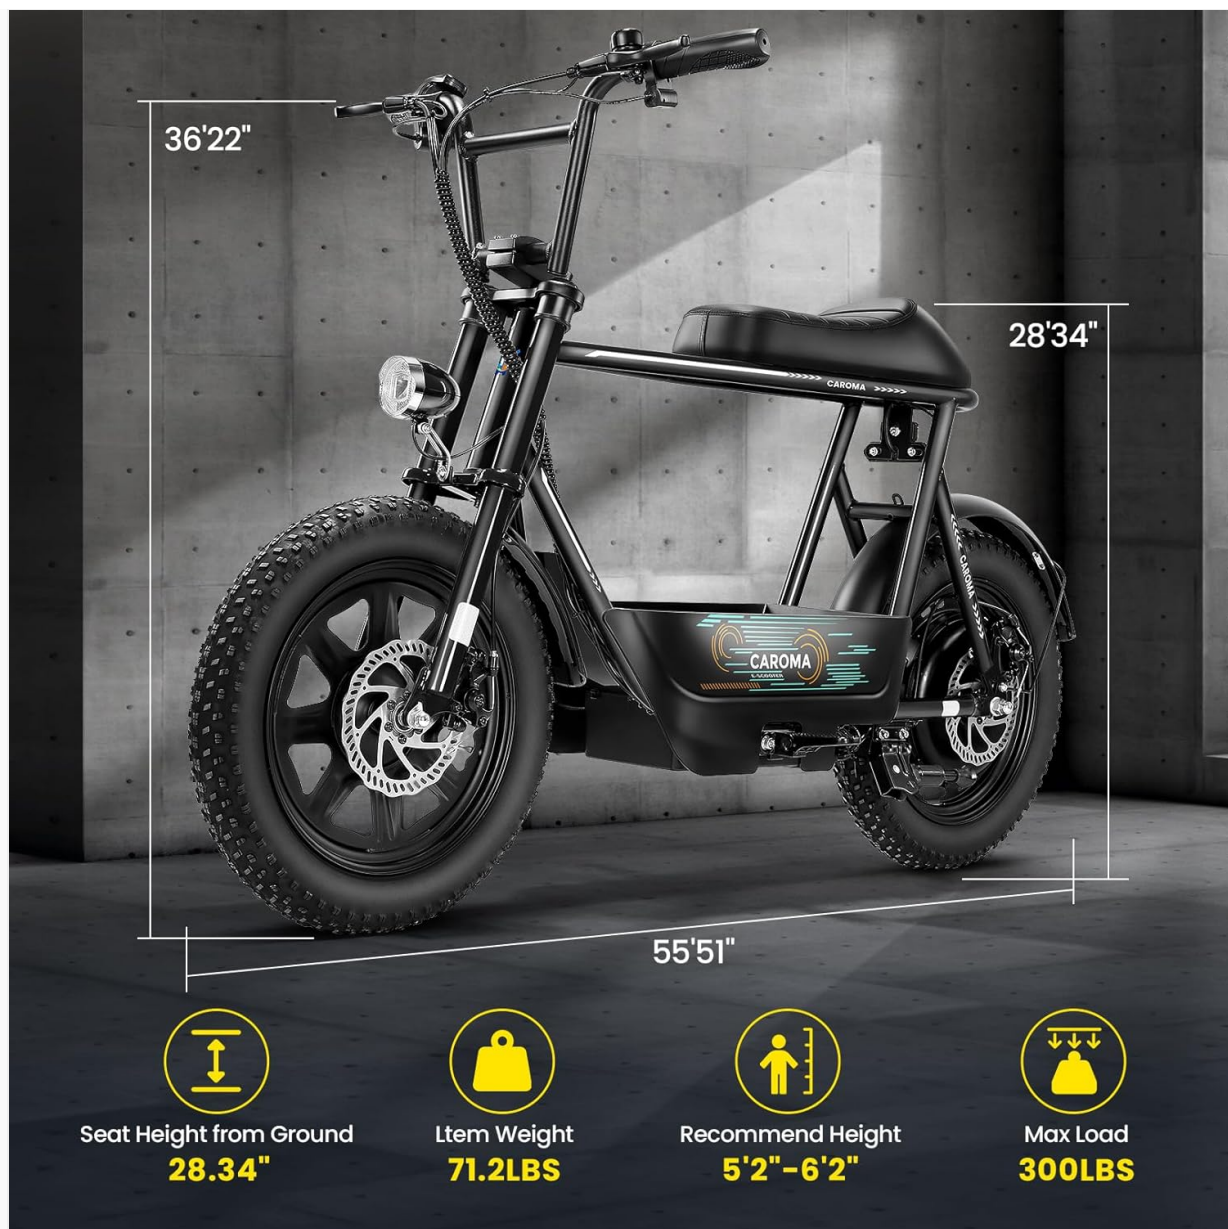


Image: Scooter dimensions and weight specifications.

6. WARRANTY INFORMATION

The Caroma Peak Electric Scooter comes with a **12-month limited warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims.

The scooter is UL 2272 certified, ensuring compliance with electrical safety standards.

7. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, operation, or encounter any issues not covered in the troubleshooting section, please contact Caroma customer support. We aim to respond to all inquiries within 24 hours.

For the most up-to-date support contact information, please refer to the official Caroma website or your purchase documentation.

