

[Manuals.plus](#) /

› [ZMISHIBO](#) /

› ZMISHIBO 106cm Ceiling Fan with Light User Manual

ZMISHIBO ZMCF

ZMISHIBO 106cm Ceiling Fan with Light User Manual

Model: ZMCF

INTRODUCTION

Thank you for choosing the ZMISHIBO 106cm Ceiling Fan with Light. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions thoroughly before installation and keep them for future reference.

SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or injury to persons, always follow these basic safety precautions:

- Read all instructions before installing the fan.
- Ensure the power is turned off at the main circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- The fan must be mounted to a ceiling outlet box marked "Acceptable for Fan Support of 15.9 kg (35 lbs) or less" and use the mounting screws provided with the outlet box.
- Do not operate the fan with damaged wiring or if it has been dropped or damaged in any way.
- Avoid placing objects in the path of the blades.
- This fan is designed for indoor use only.

PACKAGE CONTENTS

Carefully unpack your fan and check that all contents are included. If any parts are missing or damaged, contact customer support.

- Ceiling Fan Motor Assembly
- Fan Blades (3x Walnut color)

- LED Light Kit
- Remote Control
- Receiver for Remote Control
- Downrods (12.7 cm and 20.3 cm)
- Mounting Bracket and Hardware
- User Manual

SPECIFICATIONS

Feature	Description
Model Number	ZMCF
Diameter	106 cm (42 inches)
Blade Material	ABS (Walnut Finish)
Motor Type	DC Motor
Fan Speeds	6 Speeds
Light Type	Integrated LED
Light Color Temperatures	3 (Warm 3000K, Neutral 4500K, Cold 6000K)
Dimmable Light	Yes (10%-100%)
Control Method	Remote Control & Mobile Application
Special Features	Reversible Rotation, Timer (2h/4h), Memory Function, Quiet Operation (<35dB), Sloped Ceiling Compatible (up to 15°)
Power Source	Electric Cable
Usage	Indoor

SETUP AND INSTALLATION

1. Pre-Installation

- Ensure all components are present and undamaged.
- Turn off power at the circuit breaker.
- Prepare the ceiling outlet box for fan support.

2. Mounting the Fan

Attach the mounting bracket to the ceiling outlet box. Assemble the downrod (choose between 12.7 cm or 20.3 cm) to the motor assembly. Carefully lift the fan assembly and hang it on the mounting bracket. Secure all connections as per the detailed diagrams in the included paper manual.

Dimensions

Ventilateur de plafond 106 cm



Surface de pièce

10×10 pi à 15×15 pi



Plafond plat



Plafond incliné



Image: Fan dimensions (106cm diameter, 15cm height from ceiling to light, 12.7cm/20.3cm downrods) and compatibility with flat or 15-degree sloped ceilings.

3. Wiring

Connect the fan's electrical wires to the household wiring according to the color codes (typically black to black, white to white, and green/bare copper to ground). Insert the remote control receiver into the canopy. Ensure all connections are secure and insulated.

OPERATING INSTRUCTIONS

1. Remote Control Operation

The fan comes with a remote control for convenient operation. Install 2 AAA batteries (not included) into the remote. Point the remote towards the fan receiver to operate.



Image: Remote control layout with buttons for light on/off, fan forward/reverse, natural wind, 6 speeds, 2h/4h timer, and an 'All Off'

button. Also shows a mobile app interface.

- **Light On/Off:** Press the light button to turn the light on or off.
- **Fan On/Off:** Press the fan button to turn the fan on or off.
- **Speed Control:** Use the speed buttons (1-6) to adjust fan speed.
- **Reversible Rotation:** Press the 'Forward' or 'Reverse' button to change blade direction.
- **Timer:** Set the fan to turn off automatically after 2 or 4 hours.
- **Natural Wind:** Activates a mode that simulates natural breeze by varying fan speed.
- **All Off:** Turns off both the fan and the light.

2. Mobile Application Control

For enhanced control, download the ZMISHIBO smart home application on your smartphone. Scan the QR code below or visit the provided link to download the app.



Image: Remote control and mobile phone displaying the app interface with a QR code for app download. The app allows control of fan and light functions.

Download the app here: <https://wosk.top/zd.html>

- Follow the in-app instructions to pair your fan with your device.
- The app allows full control over fan speeds, light brightness, color temperature, timer settings, and reversible rotation.


3. Fan Functions

Your ZMISHIBO ceiling fan offers versatile airflow options:

- **6 Adjustable Speeds:** Choose from 6 fan speeds to suit your comfort level. Speeds 1-2 for a gentle breeze (e.g., sleeping), 3-4 for moderate wind (e.g., working), and 5-6 for a strong airflow (e.g., exercise).

6 Vitesses Réglables

Choisissez l'intensité du vent selon vos besoins

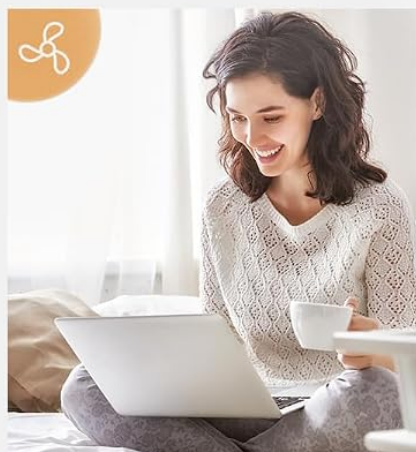

Vit. 1-2:
Brise Douce



Vit. 3-4:
Vent Naturel



Vit. 5-6:
Souffle Rafraîchissant

Image: Illustration of 6 adjustable fan speeds, showing different scenarios for gentle breeze (1-2), natural wind (3-4), and refreshing airflow (5-6).


- **Reversible DC Motor:** The fan features a reversible motor for year-round comfort.
 - **Summer Mode (Downward Airflow):** Blades rotate counter-clockwise, pushing cool air down for a refreshing effect.
 - **Winter Mode (Upward Airflow):** Blades rotate clockwise, drawing cool air up and pushing warm air down from

the ceiling, helping to homogenize room temperature.



Moteur DC Réversible

Fraîcheur en été, Chaleur en hiver

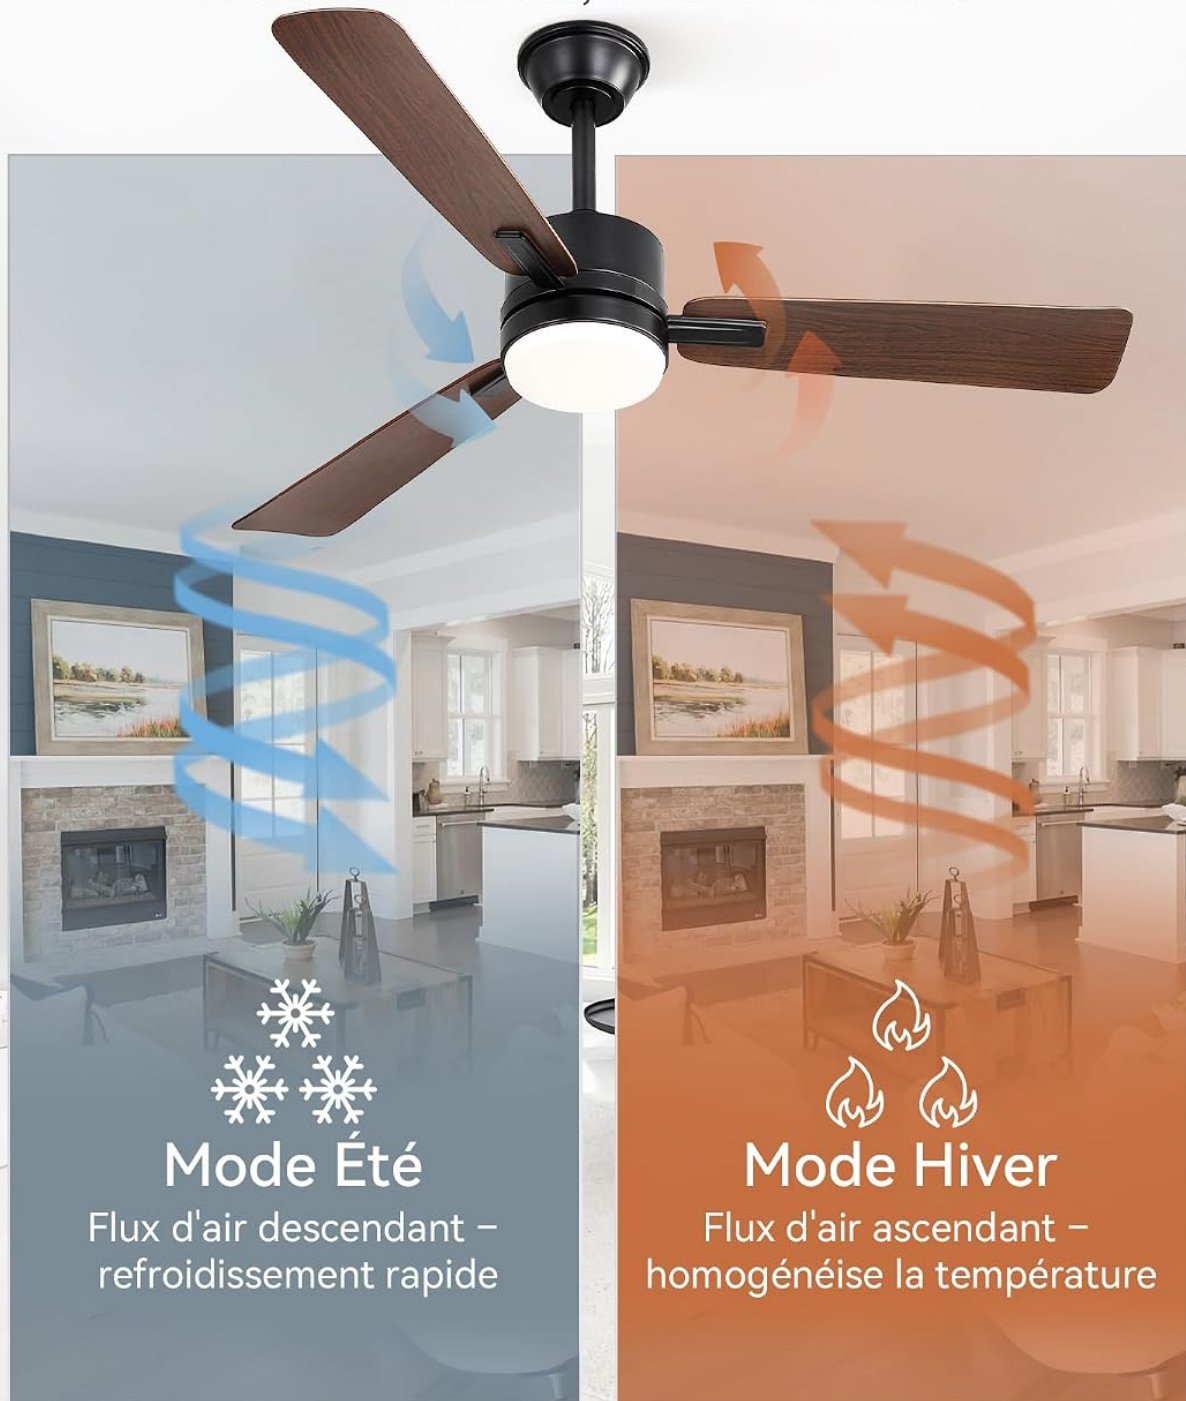

Mode Été

Flux d'air descendant –
refroidissement rapide

Mode Hiver

Flux d'air ascendant –
homogénéise la température

Image: Depiction of summer mode (downward airflow for cooling) and winter mode (upward airflow for heat distribution) with blue and orange arrows indicating air movement.

- **Timer Function:** Set the fan to automatically turn off after 2 or 4 hours. This is ideal for use during sleep.

Trois Températures de Couleur

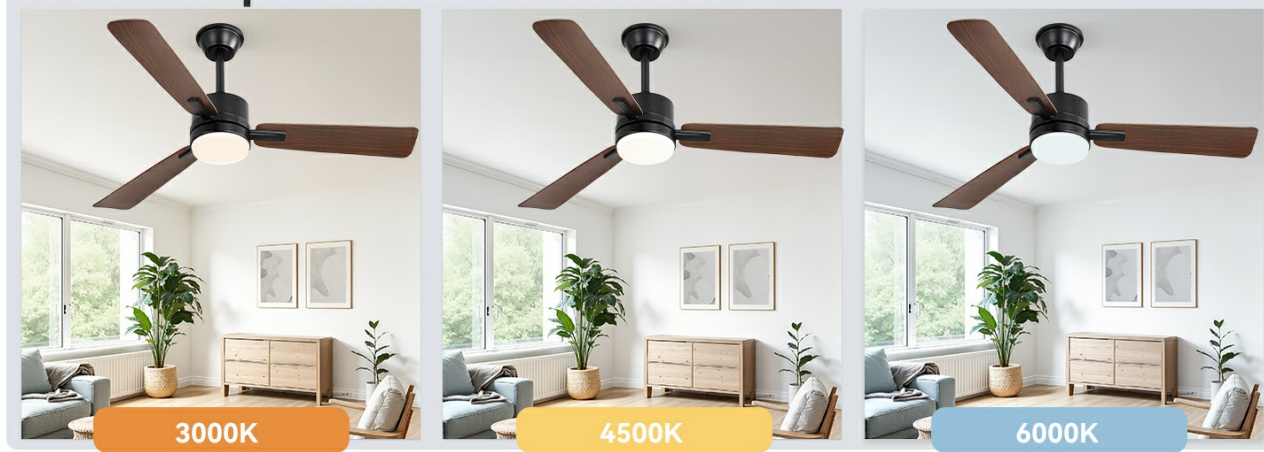 


Image: Graphic illustrating the 2-hour and 4-hour smart timer function for the ceiling fan.

4. Light Functions

The integrated LED light offers customizable illumination:

- **3 Color Temperatures:** Switch between Warm White (3000K), Neutral White (4500K), and Cool White (6000K) to match your mood or activity.
- **Dimmable (10%-100%):** Adjust the light intensity from 10% to 100% to create the perfect ambiance.
- **Memory Function:** The light will remember your last brightness and color temperature setting for 10 seconds after being turned off.

3 Températures de Couleur Réglables

Répond aux besoins de différents scénarios

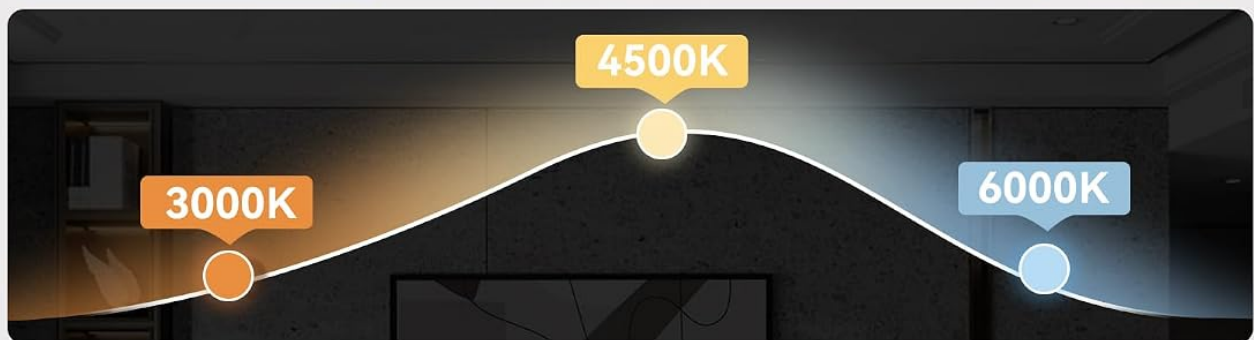 


Image: Visual representation of the three adjustable color temperatures: 3000K (warm light), 4500K (natural light), and 6000K (cold white light), suitable for different scenarios.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is

off before cleaning.

- **Blade Inspection:** Periodically check the fan blades for any signs of damage or imbalance.
- **Tighten Screws:** Over time, screws may loosen. Check and tighten all screws at least once a year.

TROUBLESHOOTING

If you experience issues with your fan, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Fan does not start	No power; Loose wiring; Remote control battery dead; Receiver not paired.	Check circuit breaker; Verify wiring connections; Replace remote batteries; Re-pair remote/app with receiver.
Light does not work	Loose wiring; LED module failure; Remote control battery dead.	Check wiring to light kit; Contact customer support for LED replacement; Replace remote batteries.
Fan wobbles	Loose blades; Uneven blade installation; Loose mounting bracket.	Ensure all blade screws are tight; Check blade alignment; Tighten mounting bracket screws.
Noisy operation	Loose screws; Motor issue; Blades hitting an obstruction.	Tighten all screws; Ensure no obstructions are near blades; If noise persists, contact support.
Remote control not responding	Dead batteries; Remote not paired; Obstruction between remote and receiver.	Replace batteries; Re-pair remote; Ensure clear line of sight.

WARRANTY AND SUPPORT

Your ZMISHIBO ceiling fan is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any questions not covered in this manual, please contact ZMISHIBO customer service through the retailer where you purchased the product or visit the official ZMISHIBO website.