

[Manuals.plus](#) /

› [Antomin](#) /

› Antomin Handheld Sewing Machine B0GSQP2GVB-0702 User Manual

Antomin B0GSQP2GVB-0702

Antomin Handheld Sewing Machine User Manual

Model: B0GSQP2GVB-0702

1. INTRODUCTION

Thank you for choosing the Antomin Handheld Sewing Machine. This compact and portable device is designed for quick repairs, DIY projects, and on-the-go sewing needs. Please read this manual thoroughly before operating the machine to ensure safe and efficient use. Keep this manual for future reference.

Operating Keys Guide



Image 2.1: Operating Keys Guide. This diagram labels key components including the Slow Speed button, Fast Speed button, ON/OFF switch, Battery Compartment, Working Platform, Thread Cutter, Thread Hole, Elasticity Adjustment, Thread Reel, Needle Raising Knob, and USB Interface.

Key Components:

- **ON/OFF Switch:** Powers the machine on or off.
- **Slow Speed Button:** Activates slower stitching for precision work.
- **Fast Speed Button:** Activates faster stitching for straight lines.
- **Battery Compartment:** Holds 4 AA batteries for portable use.
- **USB Interface:** For connecting to a USB power source.
- **Thread Reel:** Holds the thread spool.
- **Needle Raising Knob:** Manually raises and lowers the needle.
- **Thread Cutter:** For easily cutting thread after sewing.
- **Elasticity Adjustment:** Adjusts thread tension.

3. SETUP

3.1 Power Supply

Your sewing machine offers two power options:

- **Battery Power:** Insert 4 AA batteries (not included) into the battery compartment. Ensure correct polarity. This option provides portability for on-the-go use.
- **USB Power:** Connect the machine to a USB power source (e.g., power bank, wall adapter) using a USB cable. This option is suitable for home use and offers an eco-friendly alternative.



Image 3.1: Dual Power Mode. This image illustrates the two power options: using 4 AA batteries and connecting via USB-C.

3.2 Threading the Machine

Proper threading is crucial for smooth operation. Follow these steps carefully:

1. Place a thread spool onto the thread reel.
2. Guide the thread through the first thread guide (usually a small metal loop).
3. Pass the thread through the tension adjustment mechanism.
4. Thread the needle from front to back. Use the included needle threader if necessary.
5. Pull a few inches of thread through the needle eye.

How To Thread

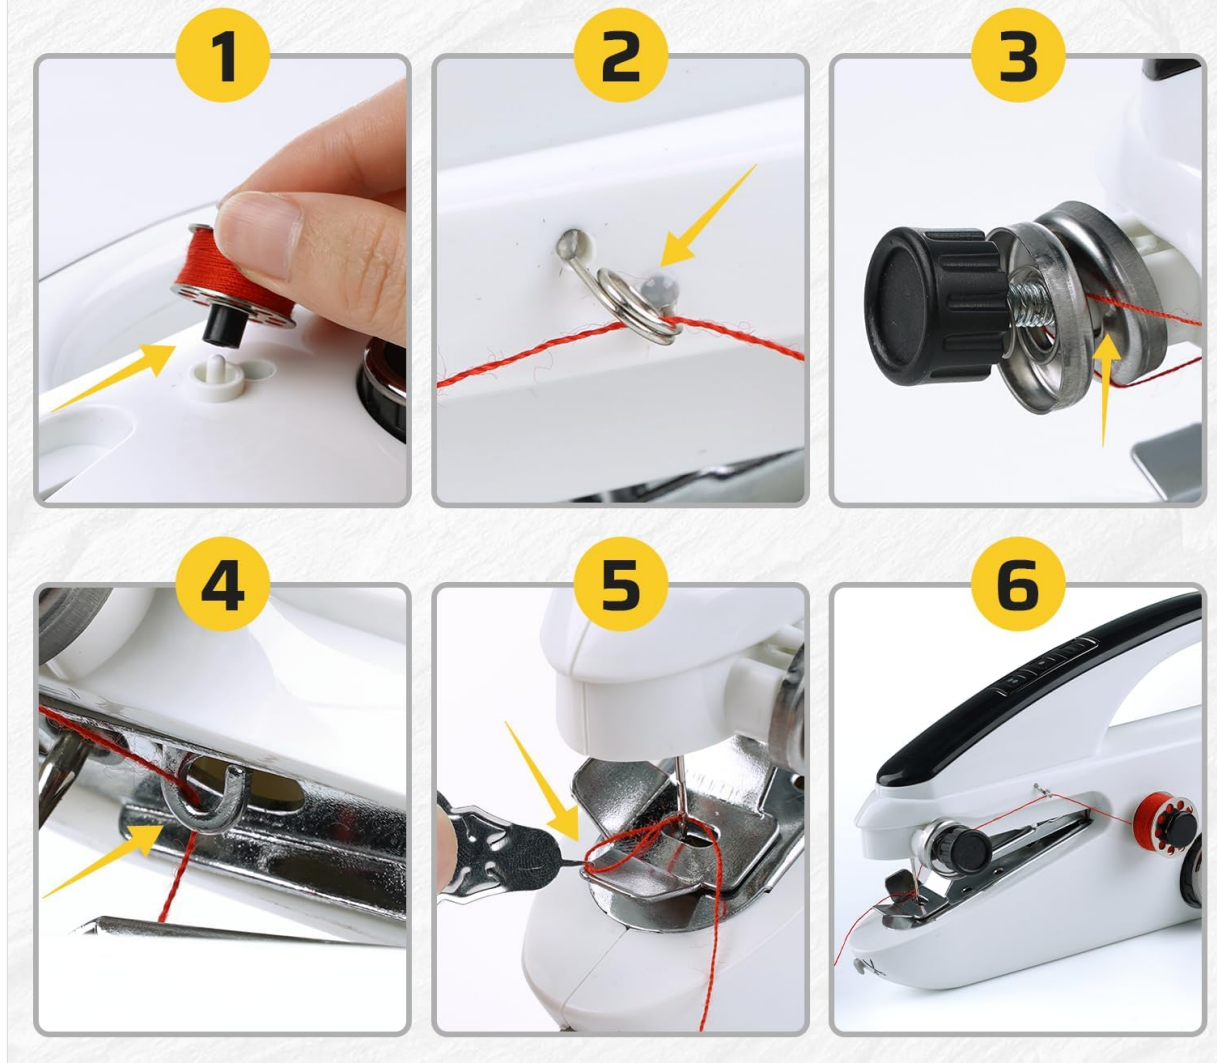


Image 3.2: How To Thread. This visual guide shows six steps for correctly threading the sewing machine, from placing the bobbin to guiding the thread through the needle.

4. OPERATING INSTRUCTIONS

4.1 Preparing to Sew

- Ensure the machine is properly threaded and powered.
- Lift the presser foot.
- Place the fabric under the presser foot, aligning the edge with the needle.
- Lower the presser foot onto the fabric.

4.2 Starting and Stopping

- Press the **ON/OFF** switch to start sewing.
- Guide the fabric gently as the machine stitches. Do not pull or push the fabric forcefully.
- To stop, press the **ON/OFF** switch again.

4.3 Speed Selection

The machine offers two speed settings:

- **Slow Speed:** Press the 'Slow Speed' button for precise stitching, ideal for corners or intricate details.
- **Fast Speed:** Press the 'Fast Speed' button for quicker, straight-line stitching, suitable for longer seams.



Image 4.1: High Gear and Low Gear. This image visually explains the two speed modes: 'SLOW' for accurate sewing in fabric corners and 'FAST' for quick, straight stitching.

4.4 Finishing a Seam

- Once the seam is complete, raise the needle to its highest position using the Needle Raising Knob.
- Lift the presser foot and gently pull the fabric away from the machine.
- Use the built-in thread cutter or scissors to cut the thread, leaving a short tail.

4.5 Fabric Compatibility

This machine is compatible with a wide range of fabrics up to 1.5 mm thick, including silk, denim, wool, and curtains. It is suitable for various projects such as clothing, pillows, and bags.



Image 4.2: Versatile Fabric Compatibility. This image shows the sewing machine in use on fabric, with examples of compatible materials like Cotton, Denim Fabric, Corduroy, Modal, and Oxford.

5. MAINTENANCE

- **Cleaning:** Regularly clean lint and dust from the needle area and feed dogs using a small brush.
- **Needle Replacement:** Replace bent or dull needles immediately to prevent skipped stitches or fabric damage.
- **Storage:** Store the machine in a dry place, away from direct sunlight and extreme temperatures.
- **Battery Removal:** If not using the machine for an extended period, remove the AA batteries to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine not stitching	Incorrect threading, dull needle, no power.	Re-thread the machine, replace needle, check power source (batteries or USB).
Skipped stitches	Bent or incorrect needle, improper threading, fabric too thick.	Replace needle, re-thread, ensure fabric thickness is within 1.5mm limit.
Thread breaking	High thread tension, poor quality thread, burr on needle/machine part.	Adjust tension, use good quality thread, inspect for rough spots.
Machine runs slowly	Low battery power, lint buildup.	Replace batteries or use USB power, clean the machine.

7. SPECIFICATIONS

Feature	Detail
Brand	Antomin
Model Number	B0GSQP2GVB-0702
Color	White
Material	Plastic
Product Dimensions	4"D x 8"W x 2"H
Power Source	4 AA Batteries (not included) or USB
Speed Settings	Dual Speed (Slow for precision, Fast for straight lines)
Max Fabric Thickness	1.5 mm
Included Accessories	Threading needles, bobbins, spindle, test cloth

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Antomin Handheld Sewing Machine comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact customer support through your Amazon account:

1. Log into your Amazon account.
2. Navigate to "Your Orders".
3. Locate the order ID for your Antomin Handheld Sewing Machine.
4. Click on "Contact Seller" to reach our support team.