

ELYKEN HBS061

ELYKEN Triple Wide Bookshelf (Model HBS061) Instruction Manual

Your guide to assembly, operation, and care.

1. INTRODUCTION

Thank you for choosing the ELYKEN Triple Wide Bookshelf, Model HBS061. This large 6-tier bookcase features 17 open shelves, designed to provide extensive and flexible storage for your home or office. Constructed from high-quality particleboard, it offers a sturdy and durable solution for organizing books, decor, and other essentials. Please read this manual carefully before assembly and use to ensure proper installation and longevity of your product.

2. SAFETY INFORMATION

Your safety is paramount. Please adhere to the following guidelines:

- **Anti-Tip Device:** Always install the included anti-tip device to prevent the bookshelf from toppling, especially in households with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 35 pounds per shelf. Overloading can compromise stability and cause damage.
- **Stable Surface:** Place the bookshelf on a flat, level, and stable surface to ensure proper balance.
- **Assembly:** Ensure all connections are tight before use. Periodically check and retighten hardware as needed.

Metal anti-tip device for enhanced stability and safety.



Figure 1: Installation of the metal anti-tip device for enhanced stability and safety.

3. SETUP AND ASSEMBLY

Assembly of your ELYKEN Triple Wide Bookshelf requires careful attention to detail. Please follow these steps:

1. **Unpack Components:** Carefully unpack all parts and hardware. Verify that all components are present according to the packing list (not provided in this manual, refer to your product packaging).
2. **Attach Legs:** Attach the legs to the base of the bookshelf using the provided screws. Tighten securely with the included tool.
3. **Insert Support Brackets:** Insert the support brackets into the pre-drilled holes on the side panels.
4. **Secure Shelf Boards:** Secure the horizontal shelf boards onto the brackets using the provided hardware. Ensure all connections are firm.
5. **Install Anti-Tip Device:** Attach the anti-tip device to the top rear of the bookshelf and secure it to a wall stud or appropriate anchor point.

6. **Final Check:** Double-check all screws and connections to ensure they are tight and the bookshelf is stable before placing any items on it.

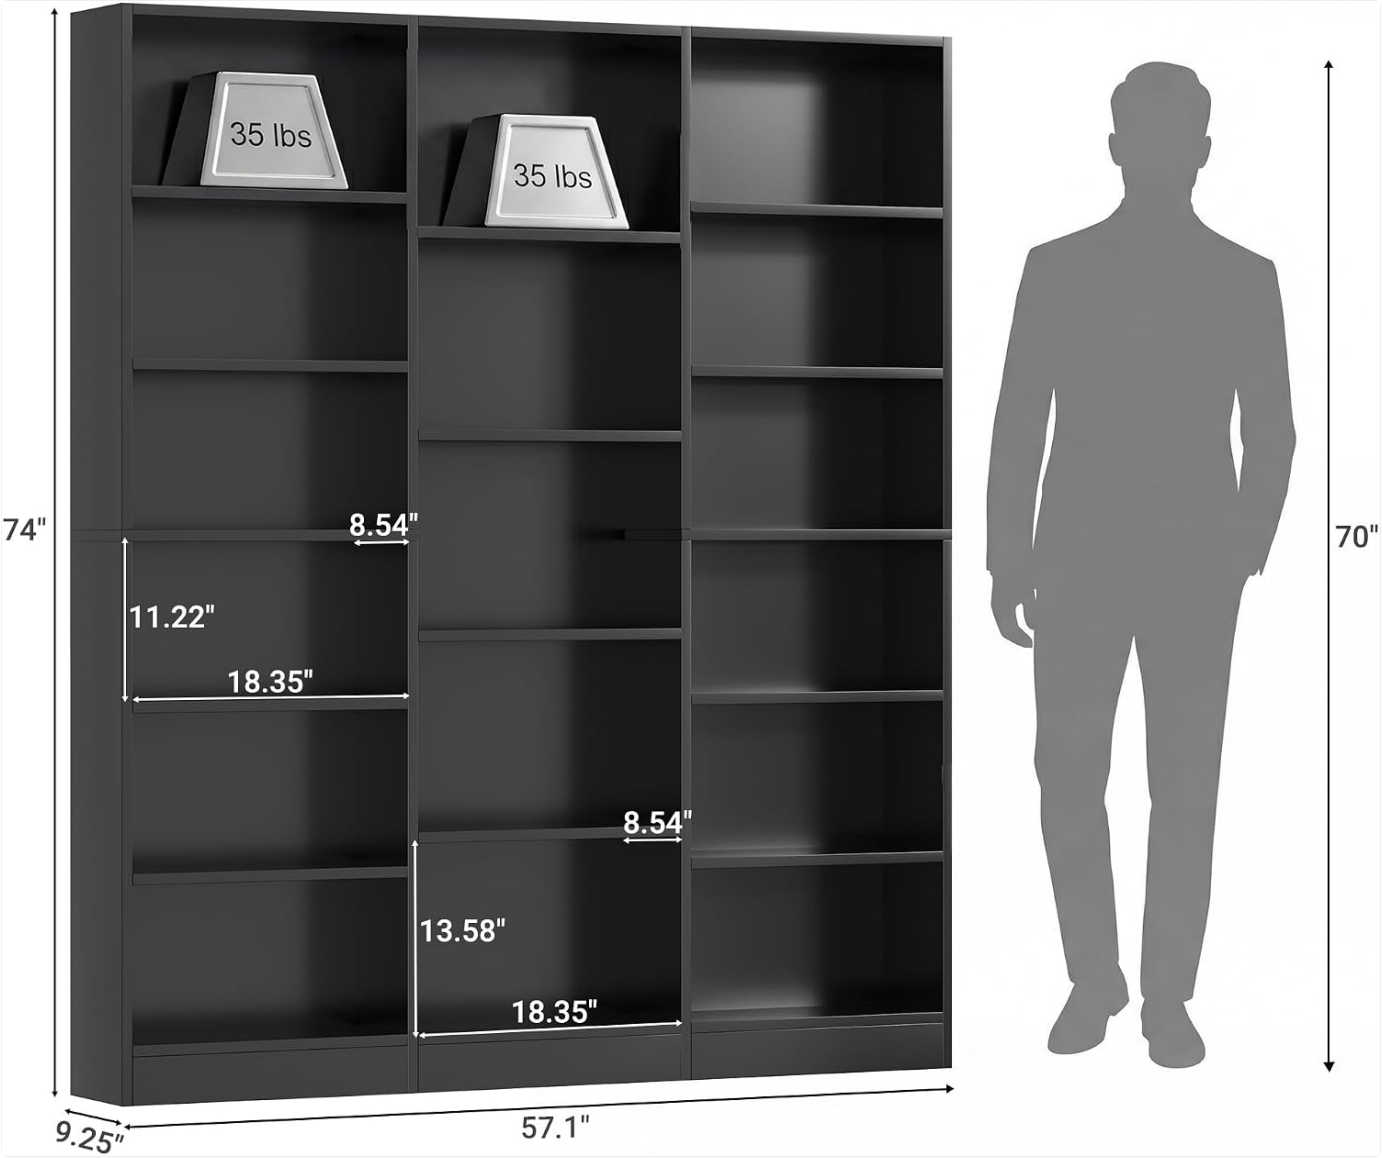


Figure 2: Bookshelf dimensions and individual shelf weight capacity (35 lbs).

4. OPERATING INSTRUCTIONS

The ELYKEN Triple Wide Bookshelf is designed for versatile storage and display. Utilize its features effectively:

- **Storage Capacity:** With 17 open shelves across three columns and six tiers, this bookshelf offers ample space for books, decorative items, storage bins, and collectibles.
- **Flexible Organization:** The multi-sized compartments allow for flexible arrangement of items. Taller compartments are suitable for larger books or display pieces, while shorter ones can hold smaller items or stacks of books.
- **Top Shelf Utilization:** The top surface of the bookshelf can also be used for additional storage or display of lightweight items such as small plants, baskets, or decorative vases.



Figure 3: Bookshelf in use, showcasing its storage capabilities.



Two sizes of storage compartments can flexibly meet more storage needs.

A Compartments Size:
18.35"W * 13.58"H * 8.54"D

B Compartments Size:
18.35"W * 11.22"H * 8.54"D

Figure 4: Multi-sized compartments for flexible organization.

Top shelf provides additional storage space for placing items.



Figure 5: Utilizing the top shelf for additional storage.

5. MAINTENANCE

Proper maintenance will help preserve the appearance and structural integrity of your bookshelf:

- **Cleaning:** Wipe surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with mild soap, then dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the shelves and surfaces to prevent buildup.
- **Avoid Moisture:** Protect the bookshelf from excessive moisture and direct sunlight, which can cause warping or discoloration.
- **Hardware Check:** Periodically inspect all screws and fittings to ensure they remain tight. Retighten as necessary to maintain stability.

6. TROUBLESHOOTING

If you encounter any issues with your bookshelf, consider the following:

- **Wobbling:** If the bookshelf feels unstable, ensure it is placed on a level surface. Check all assembly screws and tighten them. Verify the anti-tip device is securely installed.
- **Damaged Parts:** If any part arrives damaged or breaks during assembly, do not proceed with assembly. Contact customer support for replacement parts.
- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure all parts are oriented correctly. Do not force components together.

7. SPECIFICATIONS

Feature	Detail
Brand	ELYKEN
Model Name	Triple Wide Bookcase
Model Number	HBS061
Color	Black
Material	Wood (Particleboard)
Mounting Type	Freestanding, Floor-Standing
Number of Shelves	17
Product Dimensions (D x W x H)	9.25"D x 60.63"W x 74"H
Item Weight	35 pounds
Weight Capacity (per shelf)	Up to 35 pounds
Special Feature	Triple Wide Bookshelf, Anti-tip device

8. WARRANTY

ELYKEN products are manufactured to high-quality standards. For information regarding the manufacturer's warranty, please refer to the documentation included with your purchase or contact ELYKEN customer support directly. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, questions, or to report missing/damaged parts, please contact ELYKEN customer support. You can also visit the official ELYKEN store for more product information and support resources:
[Visit the ELYKEN Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question