

Vexilar W8

Vexilar W8 Robot Vacuum Cleaner and Floor Washer

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Vexilar W8 Robot Vacuum Cleaner and Floor Washer. This device is designed to provide efficient and comprehensive cleaning for your home, combining powerful vacuuming, sweeping, and mopping functions. It features intelligent navigation, automatic carpet detection, and multiple control options for a convenient cleaning experience.

Please read this manual carefully before using the product to ensure proper operation and maintenance. Keep this manual for future reference.

2. PRODUCT OVERVIEW

2.1 Key Features

 
- **8000Pa Powerful Suction:** Three adjustable suction levels for deep cleaning of dust, pet hair, crumbs, and dirt from hard floors and carpets.
- **3-in-1 Cleaning:** Combines vacuuming, sweeping, and mopping for complete home cleaning. Supports three cleaning modes: vacuum only, mop only, or simultaneous vacuum and mop.
- **Intelligent Gyroscope Navigation:** Plans orderly and efficient cleaning paths, reducing missed areas and repeated cleaning.
- **Automatic Carpet Detection:** Automatically increases suction power on carpets for deeper cleaning. Overcomes obstacles up to 15mm.
- **Up to 150 Minutes Runtime & Auto-Recharge:** High-capacity battery provides extended cleaning time. Automatically returns to the charging base when the battery is low.
- **Ultra-Slim Design & Quiet Operation:** Slim 30.6 cm body easily cleans under furniture. Operates quietly at up to 60dB.
- **Smart Control:** Control via APP, remote control, on-device buttons, and voice commands (Alexa, Google Home, Siri).
- **Anti-Tangle System:** Special anti-tangle nozzle effectively reduces hair and pet fur accumulation, preventing blockages. Dual side brushes enhance corner and edge cleaning.

2.2 Package Contents


The Vexilar W8 package includes the following components:

4 Modalità di Pulizia Intelligente

Si adatta in modo flessibile a diversi ambienti



Pulizia Automatica

 

Pulizia Bordi



Pulizia Spot



Modalità Lavaggio

Image: Vexilar W8 Robot Vacuum Cleaner and its accessories, including the robot, charging base, power adapter, remote control, HEPA filters, side brushes, mop cloth, cleaning tool, quick guide, and user manual.

Contenuto della Scatola



Image: Diagram illustrating the contents of the box, including the W8 robot vacuum, 2-in-1 dust and water tank, charging base, power adapter, remote control, 2 HEPA filters, 4 side brushes, 2 mop cloths, cleaning tool, quick guide, and instruction manual.

- Vexilar W8 Robot Vacuum Cleaner
- 2-in-1 Dust and Water Tank
- Charging Base
- Power Adapter
- Remote Control
- HEPA Filter (x2)
- Side Brush (x4)
- Mop Cloth (x2)
- Cleaning Tool
- Quick Guide
- Instruction Manual

3. SETUP

3.1 Charging Base Placement

Place the charging base against a wall in an open area. Ensure there is approximately 1 meter of clear space on both sides of the base and 2 meters of clear space in front of it, free from any obstacles. This allows the robot to easily dock for charging.

3.2 Initial Charging

Before first use, fully charge the robot. Connect the power adapter to the charging base and plug it into a power outlet. Place the robot on the charging base, ensuring the charging contacts align. The indicator lights will show the charging status.

3.3 App Connection Method

To utilize smart control features, connect your Vexilar W8 to the mobile application:

1. Ensure your Wi-Fi network is set to **2.4 GHz**, not 5 GHz.
2. Download the Vexilar app from your device's App Store.
3. Open the app and click on "Add device." Activate Bluetooth on your smartphone.
4. Ensure the robot is powered on. Press and hold both buttons on the robot for 5 seconds to enter pairing mode.
5. The app will automatically detect the W8 robot and open the connection page.
6. Confirm connection to your 2.4 GHz Wi-Fi network.
7. Wait for the robot to pair successfully with the app.

4. OPERATING INSTRUCTIONS

4.1 Cleaning Modes

The Vexilar W8 offers multiple cleaning modes to suit different needs:



Image: The robot vacuum demonstrating four intelligent cleaning modes: Automatic Cleaning (zig-zag pattern), Edge Cleaning (along walls), Spot Cleaning (spiral pattern), and Mopping Mode (wet cleaning).



Image: Illustration of the three cleaning modes: Vacuum only, Mop only, and Vacuum and Mop together, highlighting the combined dustbin and water tank design.

- **Automatic Cleaning:** The robot cleans the entire area using an intelligent zig-zag path, ensuring systematic coverage.
- **Edge Cleaning:** The robot follows the edges of walls and furniture to clean corners and baseboards thoroughly.
- **Spot Cleaning:** For concentrated cleaning of a specific dirty area, the robot cleans in a spiral pattern.
- **Mopping Mode:** The robot mops the floor using the water tank, suitable for light wet cleaning.

4.2 Intelligent Navigation

The Vexilar W8 uses an advanced gyroscope navigation system to plan precise and efficient cleaning routes. This systematic approach minimizes missed spots and avoids repetitive cleaning, unlike random navigation systems.



Image: A comparison showing the Vexilar W8's organized, zig-zag cleaning path versus the disorganized, random path of other robot vacuums.



Image: A floor plan diagram demonstrating the Vexilar W8's intelligent gyroscope navigation, showing systematic path planning, full home coverage, reduced repeated cleaning, and minimal missed areas.

4.3 Carpet Detection

The robot automatically detects carpets and increases its suction power to ensure deep cleaning, effectively removing embedded dust and pet hair.

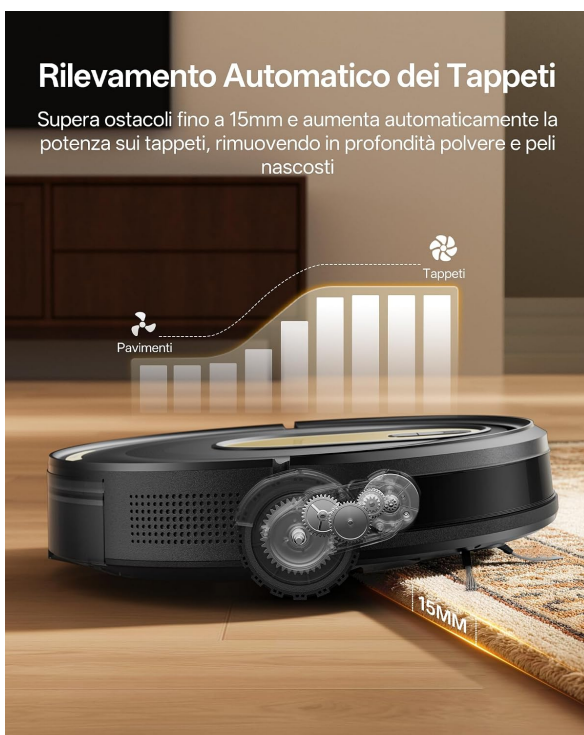 


Image: The Vexilar W8 robot vacuum transitioning from a hard floor to a carpet, with an illustration showing increased suction power on the carpet.

Rilevamento Automatico dei Tappeti Pulizia Profonda e Funzionamento Silenzioso

Quando rileva un tappeto, W8 aumenta automaticamente la potenza di aspirazione per rimuovere in profondità polvere e peli nascosti, mantenendo al tempo stesso un

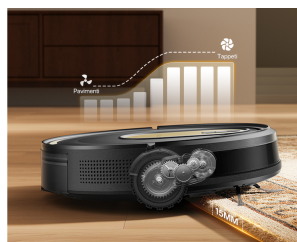 
 


Image: The Vexilar W8 robot vacuum on a carpet, illustrating automatic power increase for deep cleaning and a graph showing noise levels for Silent, Standard, and Max modes (up to 65dB).

4.4 Smart Control Options

Control your Vexilar W8 using various convenient methods:

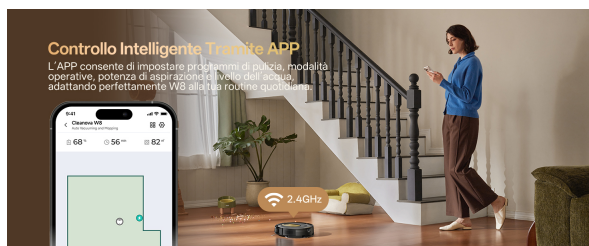 


Image: A person using a smartphone with the Vexilar W8 app open, showing the robot's cleaning map and control options. The app allows setting cleaning programs, operating modes, suction power, and water level.



Image: A Vexilar W8 robot vacuum cleaning a living room, with icons for Amazon Alexa, Google Home, and Siri, indicating voice control compatibility. A speech bubble says "Alexa, start W8".

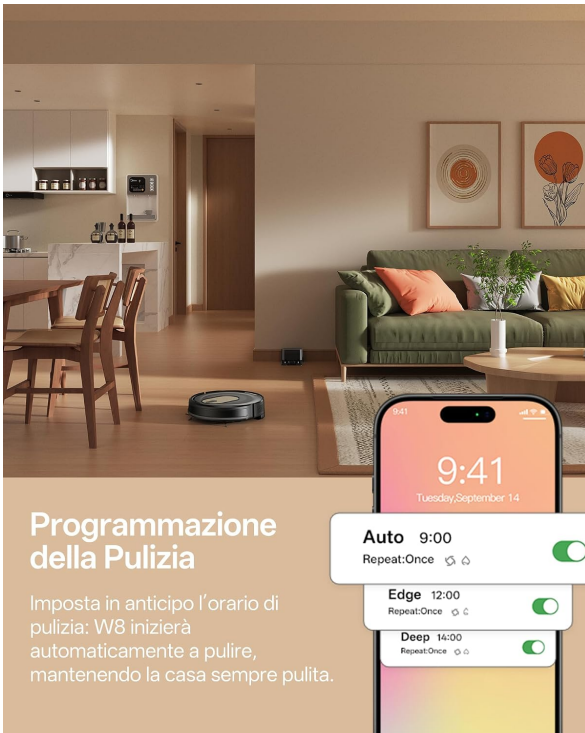 


Image: A remote control for the Vexilar W8, with labels pointing to functions such as Wi-Fi settings, directional control, recharge, start/pause, edge cleaning, spot cleaning, water volume, and suction.

- **APP Control:** Use the dedicated app to schedule cleaning, select modes, adjust suction power, and water level.
- **Voice Control:** Compatible with Amazon Alexa, Google Home, and Siri for hands-free operation.
- **Remote Control:** A convenient remote is included for direct control of direction, cleaning modes, and suction.
- **On-Device Buttons:** Basic controls are available directly on the robot.

4.5 Scheduling Cleaning

You can program cleaning schedules in advance using the app. The W8 will automatically start cleaning at the set times, ensuring your home remains consistently clean.



Programmazione della Pulizia

Imposta in anticipo l'orario di pulizia: W8 inizierà automaticamente a pulire, mantenendo la casa sempre pulita.

Image: A smartphone screen displaying the Vexilar W8 app with cleaning schedule options for 'Auto', 'Edge', and 'Deep' cleaning modes, set for specific times.



Programmazione Personalizzata della Pulizia

Imposta l'orario di pulizia tramite APP: anche quando sei fuori casa, W8 pulirà automaticamente mantenendo l'ambiente sempre pulito.

Image: A living room scene with the robot vacuum cleaning, and a smartphone overlay showing the app's customized cleaning schedule interface, allowing users to set specific times for different cleaning modes.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Vexilar W8.

5.1 Dustbin and Water Tank

Empty the dustbin after each cleaning cycle. Refill the water tank as needed for mopping. The 2-in-1 design simplifies this process.

Diverse Modalità di Controllo Intelligente

Adattandosi facilmente alle diverse abitudini familiari.

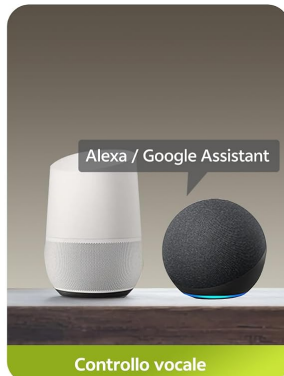
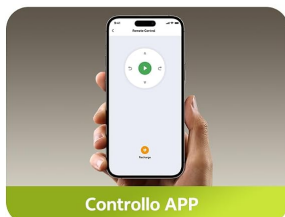 


Image: The Vexilar W8 robot vacuum on a dirty floor, with its dustbin and water tank detached, illustrating the 3-in-1 cleaning capability.

Spazza, Aspira e Lava 3 in 1

Pulizia Completa della Casa in Una Sola Volta

3 modalità di pulizia:
Aspira e lava | Solo aspirazione | Solo lavaggio
Supporta la regolazione della potenza di aspirazione e del flusso d'acqua, adattandosi a diversi tipi di pavimento

 

Image: Two Vexilar W8 robot vacuums on a wooden floor, with text highlighting the 3-in-1 cleaning features: 3 suction levels, 4 water levels, 300ml dust container, and 300ml water tank.

5.2 Brushes and Filters

Regularly clean the main brush and side brushes to remove tangled hair and debris. The anti-tangle design helps reduce blockages, especially in homes with pets. Clean or replace HEPA filters as recommended in the quick guide to maintain suction efficiency.

Contenuto della Scatola



Robot aspirapolvere W8



Serbatoio 2 in 1 per polvere e acqua



Base di ricarica



Adattatore di alimentazione



Telecomando



Filtro HEPA*2



Spazzola Laterale*4



Panno per mocio *2



Utensile di Pulizia



Guida Rapida



Manuale d'Istruzioni

Image: The underside of the Vexilar W8 robot vacuum, highlighting its anti-tangle brush system, anti-fall sensors, anti-collision sensors, and dual side brushes.

Peli di animali? Nessun problema!

W8 utilizza una speciale bocchetta anti-groviglio che riduce efficacemente i blocchi causati dai peli, ideale per le famiglie con animali domestici.



Image: A comparison showing the Vexilar W8's anti-tangle nozzle (left) versus a standard brush (right) heavily tangled with pet hair, demonstrating the W8's effectiveness in preventing hair blockages.

5.3 Sensors

Wipe the anti-drop and anti-collision sensors regularly with a dry cloth to ensure they function correctly and prevent the robot from falling down stairs or bumping into furniture.

6. TROUBLESHOOTING

If you encounter issues with your Vexilar W8, refer to the following common solutions:

- **Robot not charging:** Ensure the charging base is properly plugged in and has 1m clear space on sides and 2m in front. Check that the robot's charging contacts align with the base.
- **Robot getting stuck frequently:** Clear small obstacles from the cleaning path. The robot can overcome obstacles up to 15mm. Ensure furniture is not too low for the 7.8cm height of the robot.

- **App connection issues:** Verify your Wi-Fi is 2.4 GHz. Ensure Bluetooth is enabled on your phone. Try resetting the robot's Wi-Fi by holding both buttons for 5 seconds.
- **Poor cleaning performance:** Empty the dustbin, clean the main and side brushes, and check/replace HEPA filters. Ensure the water tank is filled for mopping.
- **Unusual noise:** Check for any foreign objects tangled in the brushes or wheels. Clean the brushes thoroughly.

For further assistance, please contact Vexilar customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Vexilar
Model Name	W8
Suction Power	8000Pa (3 adjustable levels)
Battery Life	Up to 150 Minutes
Battery Type	Lithium-ion
Noise Level	Up to 60dB (Silent mode: 55dB)
Dimensions (LxWxH)	30L x 30l x 7H cm
Weight	3 Kilograms
Control Type	App, Buttons, Remote, Voice (Alexa, Google Home, Siri)
Water Tank Capacity	300 ml
Dustbin Capacity	300 ml
Obstacle Climbing Ability	Up to 15mm
Recommended Surfaces	Various types of floors and carpets

8. WARRANTY AND SUPPORT

8.1 Warranty

Vexilar offers a **2-year warranty** for the W8 Robot Vacuum Cleaner and Floor Washer, ensuring peace of mind with your purchase.

8.2 Customer Support

Vexilar provides 24/7 professional customer assistance. Service and repair centers are available across Europe. For any questions, issues, or support needs, please contact Vexilar customer service through their official channels or refer to the contact information provided in the quick guide.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I set the Vexilar W8 robot vacuum to 'Vacuum Only' mode?

To set your Vexilar W8 (also referred to as Cleanova W8) to Vacuum Only mode, you can use the following methods: Using the Mobile App: Open the Vexilar app on your smartphone. Within the device...

[Read full answer](#)