

## EUHOMY 0020070317

# EUHOMY 0020070317 Ice Maker User Manual

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using the appliance.

- Do not touch the evaporator or ice blades when the ice maker is in operation.
- Do not immerse the cord, plug, or any part of the appliance in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Unplug the appliance from the outlet when not in use, before cleaning, and before servicing.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only potable water for ice production.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your EUHOMY 0020070317 Ice Maker before operation.



This image displays the EUHOMY 0020070317 Ice Maker, highlighting its compact design and primary components such as the control panel and ice outlet.

- **Control Panel:** Buttons and indicator lights for operation.
- **Water Reservoir:** Area for filling water.
- **Ice Basket:** Removable container for collecting ice.
- **Ice Scoop:** For convenient ice retrieval.
- **Air Vents:** Located on the sides or back for heat dissipation.

## SETUP

---

Proper setup ensures optimal performance and longevity of your ice maker.

1. **Unpacking:** Carefully remove all packaging materials and inspect the ice maker for any damage. Retain packaging for future storage or transport.
2. **Placement:** Place the ice maker on a flat, stable surface away from direct sunlight and heat sources (e.g., stoves, furnaces, radiators). Ensure at least 4 inches (10 cm) of space around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Wash the ice basket and ice scoop with warm water and a mild detergent. Wipe the interior with a soft cloth dampened with a mild solution of water and vinegar, then rinse thoroughly with clean water.
4. **Power Connection:** Plug the ice maker into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.

## OPERATING INSTRUCTIONS

---

Follow these steps to produce ice with your EUHOMY 0020070317 Ice Maker.

1. **Fill Water Reservoir:** Open the lid and pour potable water into the water reservoir up to the maximum fill line. Do not overfill.
2. **Select Ice Size (if applicable):** If your model offers different ice sizes, press the 'SELECT' or 'SIZE' button to choose your desired ice cube size (e.g., small, large).
3. **Start Ice Production:** Press the 'ON/OFF' or 'START' button. The 'ICE' indicator light will illuminate, and the ice maker will begin its cycle.
4. **Monitor Ice Production:** The ice maker will automatically produce ice and drop it into the ice basket. When the ice basket is full, the 'ICE FULL' indicator will light up, and the unit will pause production.
5. **Add Water:** If the water level is low, the 'ADD WATER' or 'WATER SHORTAGE' indicator will light up, and the unit will stop production. Refill the water reservoir to resume.
6. **Stop Operation:** To stop ice production at any time, press the 'ON/OFF' or 'STOP' button.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance are essential for hygienic ice production and extending the life of your appliance.

1. **Daily Cleaning:** After each use, empty any remaining water from the reservoir and wipe the interior with a clean, soft cloth.
2. **Weekly Cleaning:** Remove the ice basket and wash it with warm water and a mild detergent. Clean the interior of the water reservoir and ice collection area with a solution of water and white vinegar (1:1 ratio). Rinse thoroughly with clean water.
3. **Descaling (Monthly/Bi-monthly):** To prevent mineral buildup, perform a descaling cycle. Fill the reservoir with a descaling solution (e.g., citric acid solution or commercial descaler) according to product instructions. Run the ice maker for a few cycles without producing ice, then drain and rinse thoroughly.
4. **Exterior Cleaning:** Wipe the exterior of the ice maker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
5. **Storage:** If storing the ice maker for an extended period, drain all water, clean the unit thoroughly, and allow it to air dry completely before storing in a cool, dry place.

## TROUBLESHOOTING

---

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Ice maker not producing ice.	No water in reservoir; 'ADD WATER' light on.	Fill the water reservoir with potable water.
Ice cubes are too small or cloudy.	Water temperature too high; mineral buildup.	Use colder water; perform a descaling cycle.
'ICE FULL' light is on, but basket is not full.	Ice sensor is blocked or dirty.	Clean the ice sensor with a soft cloth.
Water leakage.	Drain plug not properly sealed; unit not level.	Ensure drain plug is secure; place unit on a level surface.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

---

Technical details for the EUHOMY 0020070317 Ice Maker.

- **Model:** 0020070317
- **Brand:** EUHOMY
- **ASIN:** B0GSWPS193
- **Power Supply:** (Typically 110-120V/60Hz for US models, check product label for exact details)
- **Ice Production Capacity:** (Refer to product packaging or label for specific daily production rate)
- **Water Reservoir Capacity:** (Refer to product packaging or label for specific volume)
- **Refrigerant:** (Refer to product label for type and quantity)

*Note: Specific power supply, capacity, and refrigerant details can be found on the product's rating label, usually located on the back or bottom of the unit.*

## WARRANTY AND SUPPORT

---

Your EUHOMY 0020070317 Ice Maker comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and limitations.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact EUHOMY customer support. Contact information can typically be found on the EUHOMY official website or on the warranty card.