

[Manuals.plus](#) /

› [CANDY](#) /

› Candy CI32CBB Domino Induction Hob User Manual

CANDY CI32CBB

Candy CI32CBB Domino Induction Hob User Manual

Model: CI32CBB

1. INTRODUCTION

The Candy CI32CBB Domino Induction Hob is an ideal solution for modern kitchens with limited space or as a perfect complement to your existing cooking area. With its compact 30 cm width and built-in design, this hob brings an elegant and contemporary finish to any kitchen.

Equipped with 2 cooking zones of 180 mm and 160 mm, it offers a total power of 3500 W, ensuring fast and efficient heating. The booster function in both zones accelerates the process for immediate results. Its 9 power levels and intuitive central control allow precise temperature adjustment for every recipe.

Safety is a priority with features such as child lock, residual heat indicator, spill alert, and overheat protection. It includes practical functions like a timer, pause function, automatic shut-off, and a digital display. The black glass surface is easy to clean and maintain. With dimensions of 5.8 x 29 x 52 cm and a weight of 3.7 kg, this induction hob combines functionality, safety, and design in a compact format perfect for small spaces.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is correctly earthed and connected to a suitable power supply. Do not use adapters or extension cords.
- **Hot Surfaces:** The hob surface will become hot during and after use. Avoid touching hot surfaces. Use oven mitts.
- **Child Safety:** This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Keep children away from the hob during operation and when it is cooling down. Activate the child lock feature.
- **Overheat Protection:** The hob is equipped with an overheat protection system. If the temperature becomes too high, the hob will automatically switch off.
- **Spill Alert:** In case of liquid spills, the hob may automatically shut off to prevent damage. Clean spills immediately.

- **Suitable Cookware:** Only use induction-compatible cookware with a flat base. Non-compatible cookware will not heat up.
- **Flammable Materials:** Do not store flammable materials on or near the hob.
- **Cleaning:** Always disconnect the appliance from the power supply before cleaning.

3. PRODUCT OVERVIEW

The Candy CI32CBB Domino Induction Hob features a sleek black glass surface with two cooking zones and intuitive central touch controls.

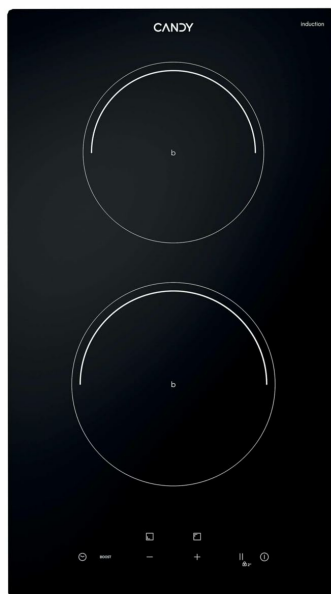


Figure 1: Top view of the Candy CI32CBB Domino Induction Hob, showing the two cooking zones and central touch controls.



Figure 2: Close-up view of the hob's central touch controls and digital display, with a pot on one of the cooking zones.

Control Panel Features:

- **Power On/Off Button:** Activates or deactivates the hob.
- **Zone Selection:** Selects the desired cooking zone.
- **Power Level Adjustment (+/-):** Increases or decreases the heating power (9 levels).
- **Booster Function:** Provides maximum power for rapid heating.
- **Timer Function:** Sets a cooking duration.
- **Pause Function:** Temporarily pauses cooking.

- **Child Lock:** Locks the control panel to prevent accidental changes.
- **Digital Display:** Shows power levels, timer settings, and error codes.

4. INSTALLATION

The Candy CI32CBB is a built-in induction hob designed for drop-in installation. Professional installation by a qualified technician is recommended to ensure safety and proper functioning.

4.1. Dimensions and Cutout

Ensure your countertop cutout meets the specified dimensions for a secure fit.

- **Product Dimensions (D x W x H):** 52 cm x 29 cm x 5.8 cm
- **Cutout Dimensions:** Refer to the installation diagram for precise measurements.

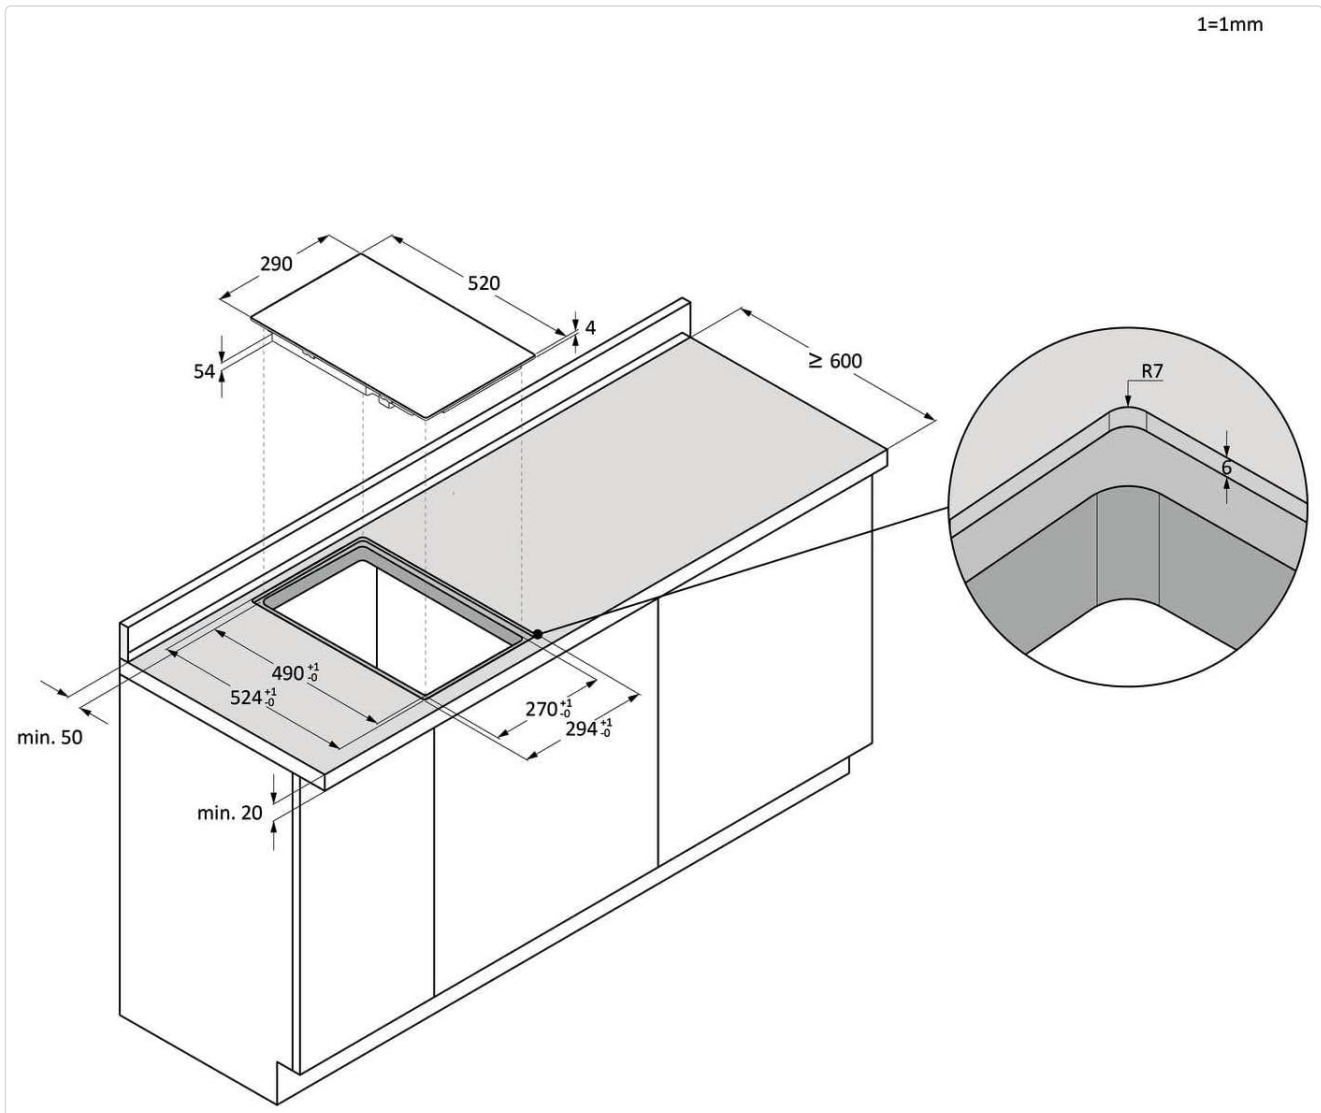


Figure 3: Detailed installation diagram showing product and cutout dimensions for the Candy CI32CBB Induction Hob.

4.2. Electrical Connection

- **Voltage:** 220 Volts
- **Wattage:** 3500 Watts
- The appliance must be connected to the mains supply by a qualified electrician, following local wiring regulations.

- Ensure the power cable is not trapped or damaged during installation.

5. OPERATING INSTRUCTIONS

5.1. Before First Use

- Remove all packaging materials and protective films from the hob surface.
- Clean the hob surface with a damp cloth and mild detergent, then dry thoroughly.

5.2. Powering On/Off

1. Touch the Power On/Off button (I/O symbol) to switch on the hob. The digital displays will light up.
2. To switch off, touch the Power On/Off button again.

5.3. Selecting a Cooking Zone and Adjusting Power

1. Place an induction-compatible pan on the desired cooking zone.
2. Touch the corresponding zone selection button.
3. Use the '+' or '-' buttons to adjust the power level from 1 to 9.

5.4. Booster Function

- To activate the booster function for a selected zone, press the 'Boost' button. The display will show 'P'. This provides maximum power for rapid heating.
- The booster function will automatically deactivate after a set period or can be manually reduced.

5.5. Timer Function

1. Select the cooking zone you wish to set a timer for.
2. Touch the Timer button.
3. Use the '+' or '-' buttons to set the desired cooking time.
4. The timer will count down and switch off the selected zone automatically when finished.

5.6. Child Lock

- To activate the child lock, press and hold the Child Lock button (key symbol) for a few seconds. An indicator will light up.
- To deactivate, press and hold the Child Lock button again until the indicator turns off.



Figure 4: The Candy CI32CBB Induction Hob actively cooking with a pot, demonstrating its use in a kitchen setting.

6. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

- **Daily Cleaning:** After each use, wipe the hob surface with a damp cloth and a small amount of mild dish soap. Rinse and dry thoroughly with a soft cloth.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic hob cleaner and a scraper designed for glass surfaces. Follow the product instructions carefully.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Spills:** Clean up sugar or plastic spills immediately while the hob is still warm (but not hot) to prevent permanent damage.
- **Ventilation:** Ensure the ventilation openings underneath the hob are not blocked to allow proper airflow.

7. TROUBLESHOOTING

If you encounter any issues with your Candy CI32CBB Induction Hob, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Hob does not switch on.	No power supply; child lock activated.	Check power connection; deactivate child lock.

Problem	Possible Cause	Solution
Cooking zone not heating.	Non-induction compatible cookware; pan not centered; small pan size.	Use induction-compatible cookware; center the pan; ensure pan base covers at least 70% of the zone.
Hob switches off automatically.	Overheat protection activated; liquid spill; automatic shut-off timer.	Allow hob to cool; clean spills; check timer settings.
Display shows an error code (e.g., 'E' followed by numbers).	Internal fault; sensor issue.	Switch off the hob, wait a few minutes, then switch back on. If the error persists, contact customer service.
Unusual noises during operation.	Normal induction operation (humming, clicking); pan resonance.	These are usually normal. If noises are excessively loud or unusual, ensure cookware is suitable.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	CANDY
Model Number	CI32CBB
Heating Elements	2
Color	Black
Power Source	Electric with cable
Fuel Type	Electricity
Special Features	Digital display, Automatic shut-off, Booster function, Power-on indicator, Timer
Heating Surface Material	Glass Ceramic
Product Dimensions (D x W x H)	52 cm x 29 cm x 5.8 cm
Burner Type	Induction
Number of Hobs	2
Control Type	Central touch controls
Installation Type	Drop-in
Voltage	220 Volts
Wattage	3500 Watts

Feature	Specification
Weight	3.7 Kilograms
Size	30 cm
Energy Star Certified Product	CE, RoHS
Country of Origin	China

9. WARRANTY AND SUPPORT

Your Candy CI32CBB Domino Induction Hob comes with a manufacturer's warranty.

- **Manufacturer's Warranty:** 3 years (as per product description).
- **Spare Parts Availability:** 10 years.

For warranty claims, technical support, or to order spare parts, please contact Candy customer service. Refer to the contact information provided in your product packaging or on the official Candy website.

Manufacturer: Candy Hoover Group S.r.l.

© 2026 Candy Hoover Group S.r.l. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GT1MZPPQ>

More documents and user manuals: <https://manuals.plus/>