

[Manuals.plus](#) /

› [LEMEGA](#) /

› LEMEGA M6P CD Player HiFi System User Manual

LEMEGA M6P

LEMEGA M6P CD Player HiFi System User Manual

Model: M6P

INTRODUCTION

Thank you for purchasing the LEMEGA M6P CD Player HiFi System. This manual provides essential information for setting up, operating, and maintaining your device. Please read these instructions carefully before use and retain them for future reference.



The LEMEGA M6P CD Player HiFi System, featuring its multi-mode audio capabilities including CD, FM, and Bluetooth.

SETUP

Unpacking and Placement

1. Carefully remove all components from the packaging.
2. Place the M6P unit on a stable, flat surface away from direct sunlight, heat sources, and moisture. Ensure adequate ventilation around the unit.
3. Extend the FM antenna for optimal radio reception.

Connecting Power

Connect the provided power cable to the DC IN port on the rear of the M6P unit, then plug the other end into a standard wall outlet.

Initial Power On

Press the **Power** button on the unit or the remote control to turn on the system. The display will illuminate.



The LEMEGA M6P system, designed for home audio integration.

OPERATING INSTRUCTIONS

Source Selection

Press the **Source** button on the unit or remote control to cycle through available modes: CD, FM, Bluetooth, AUX, and USB.




Performance Engineered Full Wood Cabinet Solid Metal Panel & Grill

The M6P's control panel and remote for easy navigation.

CD Playback

1. Select **CD** mode.
2. Insert a CD into the slot-loading CD player with the label side facing up. The disc will be automatically drawn in.
3. Playback will begin automatically. Use the **Play/Pause**, **Skip Forward**, and **Skip Backward** buttons to control playback.

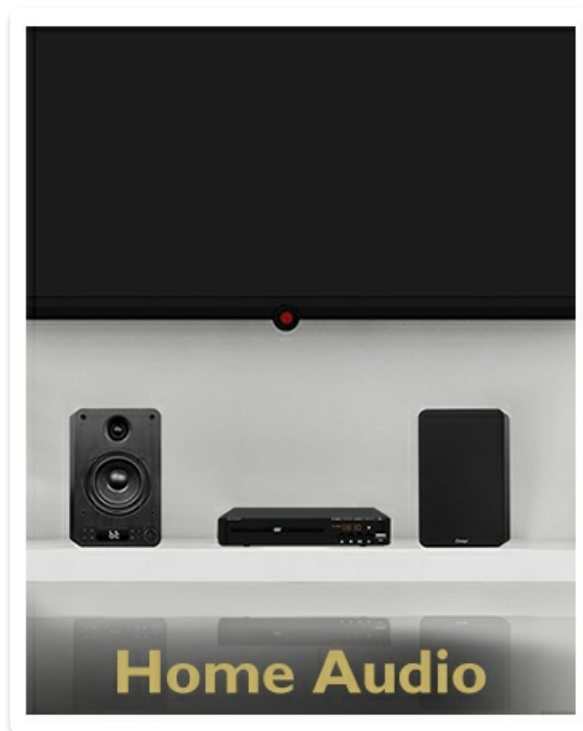

The slot-loading CD player for convenient disc insertion.

FM Radio

1. Select **FM** mode.
2. Use the tuning knob or **Tune +/-** buttons on the remote to find a station.
3. To save a preset, press and hold the **Preset** button, then use the tuning knob to select a preset number and press to confirm.
4. To recall a preset, press the **Preset** button briefly, then use the tuning knob to select the desired preset.

Bluetooth Streaming

1. Select **Bluetooth** mode. The display will show "Pairing".
2. On your smartphone, tablet, or computer, enable Bluetooth and search for available devices.
3. Select "LEMEGA M6P" from the list to pair. Once connected, the display will show "Connected".
4. You can now stream audio from your device to the M6P.



BT

High Quality 320kps Bluetooth Streaming

The M6P seamlessly streams audio via Bluetooth from your mobile devices.

AUX and USB Playback

- **AUX-in:** Connect an external audio device (e.g., MP3 player) to the AUX IN port on the rear of the unit using a 3.5mm audio cable. Select **AUX** mode.
- **USB:** Insert a USB drive containing audio files into the USB port on the rear. Select **USB** mode. The system will automatically detect and play compatible audio files.

Display and Navigation

The 2.8-inch color display shows current mode, track information, station details, and menu options. Use the main control knob to navigate menus and adjust settings. Press the knob to confirm selections.

Alarm and Sleep Timer

- **Alarm:** Access the alarm settings through the system menu to set dual alarms. You can choose to wake up to FM radio or a buzzer.

- **Sleep Timer:** Set a sleep timer through the menu to automatically power down the unit after a specified duration.



The M6P functions as a bedside companion with its dual alarm and sleep timer features.

Equalizer Settings

The M6P includes various equalizer (EQ) modes to customize your audio experience. Navigate to the EQ settings in the menu to select from predefined modes or adjust bass and treble manually.



Customize your sound with the M6P's equalizer settings.

Headphone Use

Connect headphones to the headphone jack on the front of the unit for private listening. The main speakers will mute automatically.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the unit's exterior. Do not use abrasive cleaners or solvents.
- **CD Player Care:** Handle CDs by their edges to avoid fingerprints and scratches. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Ventilation:** Ensure the ventilation openings are not blocked to prevent overheating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on	Power cable not connected securely or no power from outlet.	Check power cable connection and try a different outlet.
No sound	Volume too low, incorrect source selected, or headphones connected.	Increase volume, select correct source, or disconnect headphones.
CD not playing or skipping	CD is dirty, scratched, or inserted incorrectly. System requires reset.	Clean or replace CD. Ensure CD is inserted label-side up. Try powering the unit off, waiting a few seconds, then powering it back on.
Poor FM reception	Antenna not extended or poor signal area.	Fully extend the FM antenna and try repositioning the unit.
Bluetooth pairing issues	Device not in pairing mode, or M6P already connected to another device.	Ensure M6P is in Bluetooth pairing mode. Disconnect M6P from any previously paired devices.
Time/Alarm settings change randomly	Possible internal clock issue.	Perform a factory reset (refer to the full user manual for instructions) or contact support if the issue persists.

SPECIFICATIONS

Feature	Detail
Brand	LEMEGA
Model Number	M6P
Connectivity Technology	Bluetooth
Color	White Oak
Speaker Type	Stereo
Item Dimensions (L x W x H)	13.92 x 5.51 x 8.92 inches
Power Source	Corded Electric
Supported Standards	CD
Number of Speakers	3 (2 x 2.5" drivers + 1 x 5.25" internal subwoofer)
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.1
Display	2.8-inch color display
Included Accessories	Power Cable, Remote Control, User Manual

150W



2.1CH



**2 x 2.5" Drivers +
5.25" Subwoofer
for Amazing Audio**

Internal speaker configuration of the LEMEGA M6P, highlighting the 2.1 channel audio system.

WARRANTY INFORMATION

The LEMEGA M6P comes with a Limited Warranty. Please refer to the warranty card included in your product packaging or visit the official LEMEGA website for detailed terms and conditions regarding warranty coverage and claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your LEMEGA M6P, please contact LEMEGA customer service. Contact details can typically be found on the official LEMEGA website or in the product packaging.

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Official video showcasing the features and design of the LEMEGA M6P Premium Music System.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question