

[Manuals.plus](#) /

› [SICOTAS](#) /

› SICOTAS Rattan Buffet Cabinet with Storage - Model SC156 Instruction Manual

SICOTAS SC156

SICOTAS Rattan Buffet Cabinet with Storage - Model SC156 Instruction Manual

Brand: SICOTAS | Model: SC156

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your SICOTAS Rattan Buffet Cabinet with Storage, Model SC156. Please read this guide thoroughly before beginning assembly or use to ensure safe and proper handling of the product.

Product Overview

The SICOTAS Rattan Buffet Cabinet is designed to offer versatile storage and enhance your living space with its natural aesthetics. It features warm rattan panels, sleek metal handles, and adjustable shelves, making it a functional and elegant addition to dining rooms, entryways, or living areas.



Image 1.1: The SICOTAS Rattan Buffet Cabinet in a living room setting, showcasing its design.

2. SAFETY GUIDELINES

Adherence to these safety guidelines is crucial for preventing injury and damage to the product.

- Always assemble the cabinet strictly according to the provided instructions.
- Exercise caution when handling tools during assembly.
- Ensure the cabinet is placed on a level surface and is stable to prevent tipping. Use the adjustable leveling feet as needed.
- Keep the area around the cabinet clear of obstacles to prevent accidental bumps or falls.
- Do not overload shelves beyond their stated weight capacity.

3. SETUP AND ASSEMBLY

This cabinet requires assembly. Please ensure all components are present and undamaged before beginning.

3.1 Unpacking

- Carefully unpack all components from the packaging.
- Verify all parts against the included parts list in your separate assembly manual.
- Retain all packaging materials until assembly is complete to avoid misplacing small parts.

3.2 Assembly Instructions

Follow the step-by-step instructions provided in the separate assembly manual included with your product. It is recommended to assemble the cabinet on a soft, clean surface to prevent scratches.



Image 3.1: Diagram illustrating the dimensions of the SICOTAS Rattan Buffet Cabinet (14"D x 87"W x 33.9"H).

Your browser does not support the video tag. This video demonstrates the SICOTAS Rattan Sideboard Buffet Cabinet in use, showcasing its design and functionality after assembly.

Video 3.1: Demonstration of the SICOTAS Rattan Sideboard Buffet Cabinet in use.

3.3 Placement

Place the assembled cabinet on a flat, stable surface. Use the adjustable leveling feet located at the bottom of the cabinet to ensure it is balanced and stable, especially on uneven floors. This helps prevent wobbling and ensures proper door alignment.

4. OPERATION

4.1 Using the Doors

The cabinet features 6 doors with sleek metal handles. To open, gently pull the handles. To close, push the doors until they are fully shut. The doors are designed for smooth operation.

4.2 Adjustable Shelves

The cabinet includes 6 adjustable shelves, allowing for flexible storage configurations. To adjust a shelf:

1. Remove all items from the shelf you wish to adjust.
2. Carefully lift the shelf and remove the four shelf supports from their current positions.
3. Insert the shelf supports into the desired holes at the new height. Ensure all four supports are securely seated and level.
4. Place the shelf back onto the supports, ensuring it rests evenly.
5. Before placing items back, gently press on the shelf to confirm stability.

Unique Rattan Design

Brings a Natural and Boho Beauty

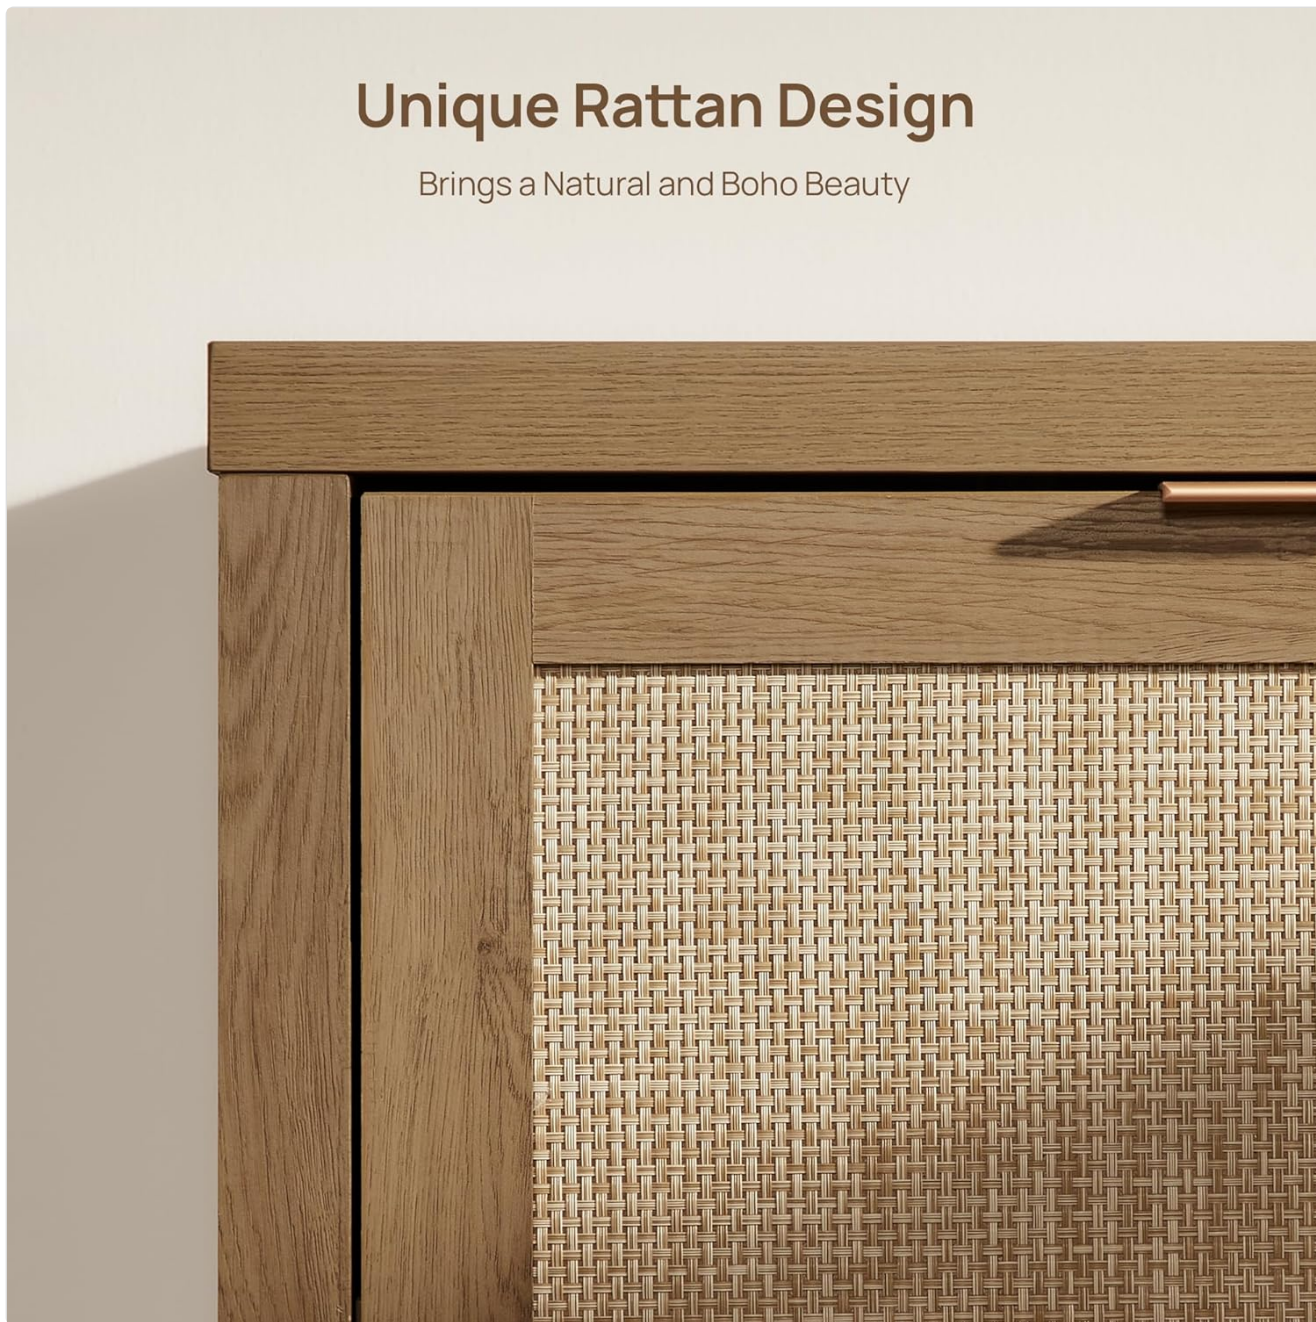


Image 4.1: Interior view showing the adjustable shelves of the SICOTAS Rattan Buffet Cabinet.



Image 4.2: Detailed view of the cabinet's features, including adjustable shelves and footpads.

5. CARE AND MAINTENANCE

Proper care and maintenance will extend the life and appearance of your cabinet.

5.1 Cleaning

- Wipe all surfaces with a soft, slightly damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or polishes that contain silicone, as these can damage the finish and rattan.
- For the rattan panels, gently dust with a soft brush or a dry cloth to remove accumulated dust.

5.2 General Care

- Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood and rattan.
- Do not place hot items directly on the cabinet surface. Always use coasters or protective pads.
- Periodically check all assembly fasteners (screws, bolts) and tighten them if necessary to maintain the

cabinet's structural integrity and stability.

- Protect the cabinet from excessive moisture and extreme temperature changes.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your cabinet.

Issue	Possible Cause	Solution
Cabinet is wobbly or unstable	Uneven floor surface or loose assembly connections.	Adjust the leveling feet at the bottom of the cabinet until it is stable. Check and tighten all assembly screws and bolts.
Doors do not close properly or are misaligned	Hinges are misaligned or loose. Cabinet is not level.	Adjust the door hinges according to the instructions in the assembly manual. Ensure the cabinet is placed on a level surface using the adjustable feet.
Rattan panels appear discolored or faded	Prolonged exposure to direct sunlight.	Relocate the cabinet away from direct sunlight or use window coverings to reduce exposure.
Missing parts during assembly	Packaging error or parts misplaced during unpacking.	Carefully re-check all packaging materials. If parts are still missing, contact SICOTAS customer support immediately.

7. PRODUCT SPECIFICATIONS

- **Brand:** SICOTAS
- **Model Number:** SC156
- **Product Dimensions (D x W x H):** 14" x 87" x 33.9"
- **Material:** Engineered Wood, Rattan
- **Color:** Reclaimed Caramel Oak
- **Number of Doors:** 6
- **Number of Shelves:** 6 (Adjustable)
- **Item Weight:** 132.4 Pounds
- **Assembly Required:** Yes
- **Additional Features:** Adjustable Shelf, Anti-Tipping mechanism, Rattan Door design
- **Recommended Uses:** Books, Bottles, Clothes, Cosmetics, Decorative items, Dish, Linens, Magazines, Shoes, Towels, Wine
- **Room Type:** Dining Room, Entryway, Living Room

8. WARRANTY INFORMATION

For detailed information regarding the warranty coverage and terms for your SICOTAS Rattan Buffet Cabinet, please refer to the warranty card included with your product packaging. This document outlines the manufacturer's guarantee against defects in materials and workmanship.

If you have specific questions about your warranty or need to make a claim, please contact SICOTAS customer support directly.

9. CUSTOMER SUPPORT

For assistance with assembly, missing parts, product inquiries, or any other support needs, please contact SICOTAS customer support.

You can find more information and contact details by visiting the official SICOTAS store:

[SICOTAS Official Store](#)