

Aoxun 40x20ft Party Tent Canopy

Aoxun 40x20 Heavy-Duty Party Tent Canopy Instruction Manual

Model: 40x20ft Party Tent Canopy

INTRODUCTION

Thank you for choosing the Aoxun 40x20 Heavy-Duty Party Tent Canopy. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your tent. Please read all instructions carefully before setup and retain this manual for future reference.

SAFETY INFORMATION

Important Safety Precautions:

- Always ensure the tent is properly anchored using the provided wind ropes, ground stakes, and expansion bolts, especially in windy conditions.
- Do not use the tent in high winds, heavy rain, snow, or severe weather conditions. Disassemble the tent if adverse weather is expected.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Ensure adequate ventilation if using heating appliances inside the tent.
- Do not hang heavy objects from the tent frame.
- Regularly inspect all components for wear or damage. Replace damaged parts immediately.

COMPONENTS LIST

Before assembly, verify that all parts are present and undamaged. Refer to the packing list for specific quantities.

Component	Description
Steel Frame	Heavy-duty, rust-resistant steel poles and connectors.
Top Cover	180g PE fabric, 100% waterproof and UV50+ rated.
Sidewalls	170g PE fabric, removable, with clear PVC windows.
Roll-up Door	One door panel with dual zippers for easy access.
Wind Ropes	4 heavy-duty wind ropes for stability.

Component	Description
Ground Stakes	4 reinforced ground stakes and 28 standard stakes.
Expansion Bolts	28 expansion bolts for secure anchoring.
Gloves	2 pairs of gloves for assembly.
Carry Bag	Durable bag for transport and storage.

Note: The tent is shipped in 3 boxes.

SETUP INSTRUCTIONS

Assembly typically requires 3-4 persons and takes approximately 40-60 minutes. Follow these general steps for setup:

- Site Selection:** Choose a flat, level area free from overhead obstructions and sharp objects. Ensure adequate space for the tent's dimensions (40ft x 20ft).
- Unpack Components:** Carefully unpack all parts and lay them out, verifying against the components list.
- Assemble Frame:** Connect the steel poles according to the diagram provided in your specific assembly guide (not included in this general manual). Ensure all connections are secure.
- Attach Top Cover:** Drape the 180g PE top cover over the assembled frame. Secure it to the frame using the integrated fasteners.
- Install Sidewalls:** Attach the 170g PE sidewalls to the frame. These can be fully attached for an enclosed space or removed for an open-air canopy. The roll-up door should be installed at the desired entry point.
- Secure Anchoring:** Use the 4 heavy-duty wind ropes, 4 reinforced ground stakes, 28 standard stakes, and 28 expansion bolts to firmly anchor the tent to the ground. This step is crucial for stability.

RAINFORCEDS STRUCTURE WITH REMOVABLE SIDEWALLS

Can be disassembled and assembled as required

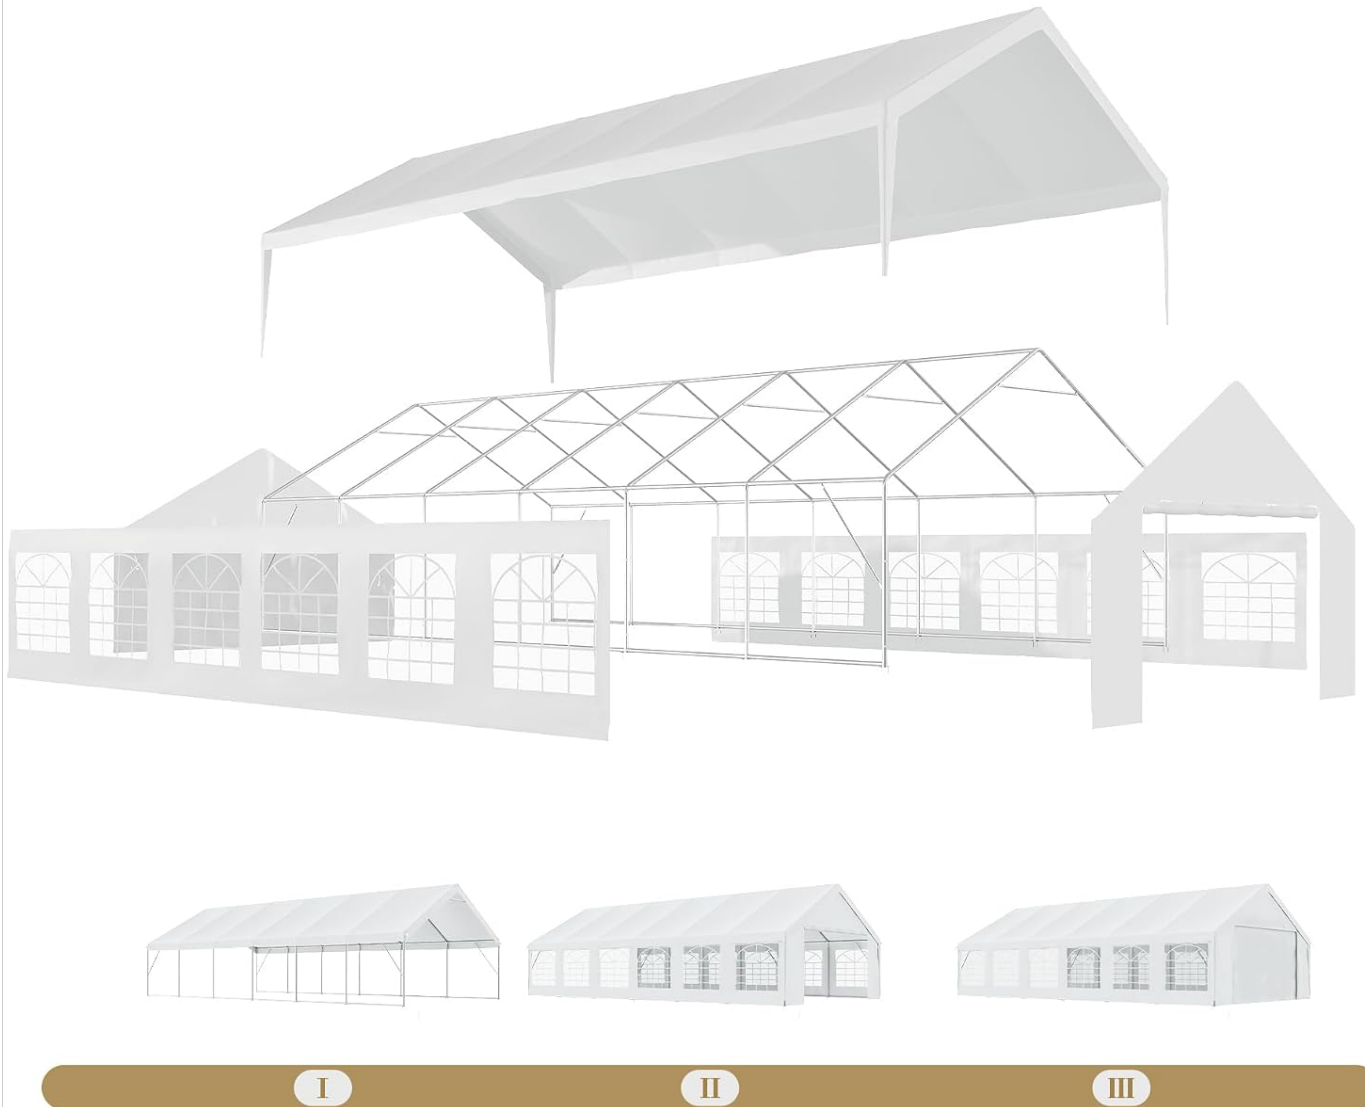


Image: Diagram illustrating the reinforced structure and how sidewalls can be disassembled and assembled as required.

PRODUKTDDETAILS 40FTx20FT

Party Tent



2 Pairs of Gloves



Shipped in 3 boxes



installation by 3-4
persons 40-60mins



total weight
282 LBS

Image: Product details showing the 40ft x 20ft dimensions, superior ventilation with roll-up windows and zippered doors, bright lighting from large windows, and convenient design for easy access.

OPERATING INSTRUCTIONS

The Aoxun Party Tent Canopy is designed for versatile use in various outdoor settings.

- **Sidewall Configuration:** The PE sidewalls can be easily attached or removed to adapt to weather conditions and event needs. Keep them attached for privacy and wind protection, or remove them for an open-air gazebo feel.
- **Roll-Up Door:** Utilize the dual-zippered roll-up door for convenient entry and exit.
- **Ventilation:** The clear PVC windows on the sidewalls allow natural light and can be opened for airflow if the sidewalls are designed with roll-up window features.

REMOVABLE SIDEWALLS & ROLL-UP DOOR



- Removable Sidewalls for open-air freedom.



- Roll-Up Door for easy walk-in access.



Image: The tent showcasing its removable sidewalls for open-air freedom and a roll-up door for easy walk-in access.

SEE-THROUGH WINDOWS

Bring in the light. Enjoy the view. Stay protected



Image: Interior view highlighting the see-through windows that bring in natural light and offer views while providing protection.

Your browser does not support the video tag.

Video: An overview of the Aoxun Heavy-Duty Party Tent, demonstrating its features and various applications, including event setups and carports. This video is provided by Aoxun Direct.

MAINTENANCE

Proper maintenance will extend the life of your party tent.

- **Cleaning:** Clean the PE top cover and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as they can damage the fabric's waterproof and UV-resistant coatings.
- **Drying:** Ensure all fabric components are completely dry before folding and storing to prevent mold and mildew growth.
- **Frame Care:** Inspect the steel frame periodically for rust or damage. Clean any dirt or debris from the poles and connectors.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided carry bag for organized storage.

TROUBLESHOOTING

Here are solutions to common issues:

- **Tent Instability:** Ensure all ground stakes, wind ropes, and expansion bolts are securely fastened. Check that the frame connections are tight. Re-anchor if necessary.
- **Water Leakage:** Verify that the top cover is properly tensioned and secured to the frame, preventing water pooling. Check for any tears or punctures in the fabric.
- **Difficulty Zipping Door:** Ensure the tent is set up on level ground and the fabric is not overly stretched, which can misalign zippers.
- **Missing Parts:** If any parts are missing upon arrival, contact Aoxun customer support immediately with your purchase details.

SPECIFICATIONS

Feature	Detail
Brand	Aoxun
Model	40x20ft Party Tent Canopy
Dimensions (L x W x H)	40ft x 20ft (137.8"L x 230.71"W x 469.29"H)
Frame Material	Heavy-Duty Alloy Steel
Top Cover Material	180g PE (Polyethylene)
Sidewall Material	170g PE (Polyethylene) with PVC windows
Water Resistance Level	Waterproof
UV Protection	UV50+ Rated
Color	White
Assembly Required	Yes
Recommended Uses	Camping, Canopy, Outdoor Activities, Picnic, Recreation, Social Gathering, Tailgate Party

WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact Aoxun customer service through the retailer where the product was purchased. Please have your purchase receipt and product model information available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GT4H7BWJ>

More documents and user manuals: <https://manuals.plus/>