

Hisense WF1I7022BWJ

Hisense WF1I7022BWJ Slim Washing Machine User Manual

Model: WF1I7022BWJ

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Hisense WF1I7022BWJ Slim Washing Machine. Please read these instructions carefully before installation and operation, and retain them for future reference. This appliance is designed for domestic use only.

2. SAFETY INFORMATION

General Safety

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Keep packaging materials out of reach of children.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Never force the door open during operation.
- Unplug the appliance before cleaning or maintenance.

Electrical Safety

- Connect the appliance to a power supply that matches the specifications on the rating plate.
- Do not use extension cords or multiple socket adapters.
- Do not operate the appliance with a damaged power cord or plug.

Water Connection Safety

- Ensure all water hoses are securely connected to prevent leaks.
- Do not use old hose sets; always use the new hose sets supplied with the appliance.


3. PRODUCT OVERVIEW AND FEATURES

The Hisense WF117022BWJ is a slim 7 kg washing machine designed for efficient and quiet operation. It features an Inverter Motor, Touch Display, and 15 washing programs.

Key Features:

- **7 kg Slim Capacity:** Compact design ideal for smaller spaces, offering a 7 kg load capacity.
- **1200 rpm Spin Speed:** Efficient water extraction for faster drying.
- **Inverter Motor:** Ensures quiet operation, reduced vibrations, and extended durability.
- **AutoMix Dispenser:** A unique roller design that thoroughly dissolves detergent, creating a dense foam for deep cleaning without residues.
- **Pure Jet:** Powerful water flow during rinsing to effectively remove detergent residues from gaskets and the door glass, promoting a clean washing environment and reducing mold and bacteria growth.
- **Quick Wash Programs:** Includes a 15-minute rapid program for lightly soiled items and a 49-minute program for half loads.
- **Programma Quicker:** Accelerates wash cycles, reducing washing time while maintaining cleaning quality.
- **Delayed End Function:** Allows you to set the desired end time for the wash cycle, offering flexible scheduling.
- **Hygiene Care:** Dedicated programs to keep the drum and gasket clean, reducing mold, odors, and dirt buildup.
- **Steam Wash:** Advanced pre-wash sterilization cycle using high-temperature steam to effectively remove microbes before the main wash, protecting against irritants and invisible allergens.
- **Allergy Care:** Sterilization and drying process using hot air to effectively eliminate up to 99.9% of harmful bacteria, including Escherichia coli and Staphylococcus aureus.
- **Anti-Crease Function:** Uses gentle steam and drum rotation to minimize creases, making garments softer and reducing the need for ironing.
- **Energy Class A:** High energy efficiency for reduced consumption.

Product View

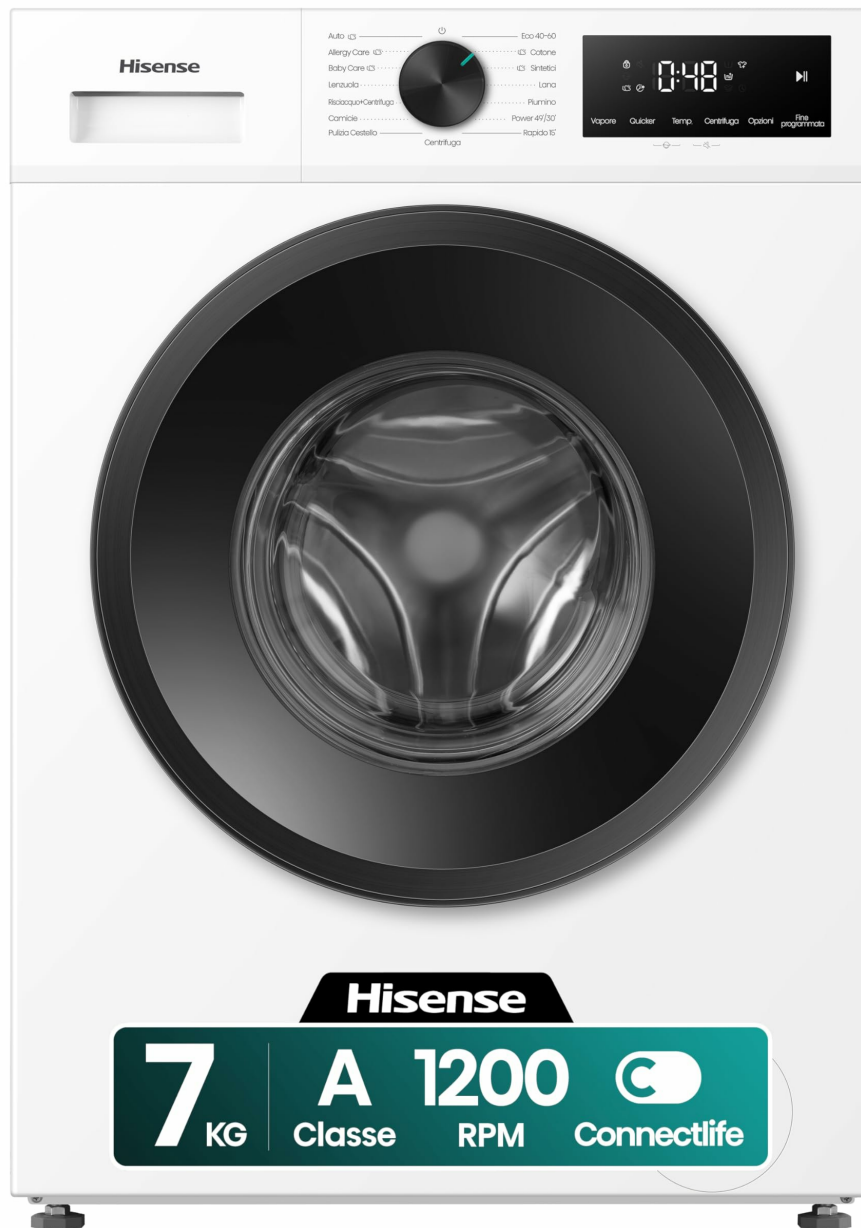

Front view of the Hisense WF117022BWJ Slim Washing Machine.



Hisense

Il futuro della pulizia impeccabile

Infinite Series 1i

WF117022BWJ

The Hisense WF117022BWJ washing machine integrated into a kitchen setting.

15 Programmi di Lavaggio

Prestazioni Eccellenti per le Tue Esigenze



Side view of the washing machine showing its dimensions: 845mm height, 595mm width, 435mm depth.

4. SETUP AND INSTALLATION

Before installation, ensure all transit bolts are removed from the rear of the machine. Refer to the separate installation instructions provided in the packaging for detailed steps.

Unpacking

Carefully remove all packaging materials. Check for any damage during transit. The package includes: Power cable, Fill hose, WF117022BWJ Washing machine x 1, User manual x 1, Energy label, PIS x 1, Installation instructions x 1, Warranty card x 1.

Positioning and Leveling

Place the washing machine on a firm, level surface. Adjust the four adjustable feet to ensure the appliance is stable

	Un quarto	2:40		
Emissioni di rumore aereo nella fase centrifuga ^(a) (dB(A) re 1 pW)		72	Classe di emissione di rumore aereo ^(a) (fase centrifuga)	A
Modo spento (W) (se applicabile)		0,49	Modo stand-by (W) (se applicabile)	-
Avvio ritardato (W) (se applicabile)		4,00	Modo stand-by in rete (W) (se applicabile)	n. a.
Durata minima della garanzia offerta dal fornitore: 24 mesi				
Questo prodotto è stato progettato per liberare ioni d'argento durante il ciclo di lavaggio			NO	
Informazioni supplementari:				
Link al sito web del fornitore che riporta le informazioni di cui all'allegato II, punto 9, del regolamento (UE) 2019/2023 della Commissione: https://global.hisense.com/				

^(a) per il programma eco 40-60.

Modello immesso sul mercato dell'Unione da 08/12/2025.



Numero di registrazione EPREL: 2560381

<https://eprel.ec.europa.eu/qz/2560381>

Fornitore: GORENJE GOSPODINJSKI APARATI D.O.O. (Imp. ortatore) **Sito web:** www.gorenje.com

Servizio di assistenza alla clientela:

Nome: Gorenje gospodinjski aparati, d.o.o.

Sito web:

E-mail: eprel.notifications@gorenje.com

Telefono: +38638992222

Indirizzo:

Partizanska cesta 12
3320 Velenje
Slovenia

The touch display and program selector knob for controlling wash cycles.

Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; refer to the program guide for maximum load capacities. Close the door firmly.

Dispenser Automix

Miscela Potente, Pulizia Efficace



*Utilizziamo il rullo verde come esempio dimostrativo. Il colore dei rulli può variare a seconda del modello, ma la funzione e le prestazioni rimangono le stesse. Si prega di fare riferimento al prodotto effettivo. I test sono stati effettuati confrontando il programma Cotone Hisense QA e il programma Cotone Hisense Ii, con carichi di 4 kg a 40°C. I risultati effettivi possono variare in base all'uso individuale.

The washing machine door open, revealing the stainless steel drum.

Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. The AutoMix Dispenser feature ensures optimal dissolution of detergent.

Ciclo di Lavaggio Veloce

Lavaggio Veloce, Pulizia Perfetta



15 min 1 kg
49 min Mezzo carico

The detergent dispenser drawer with compartments for detergent and softener.



Funzione Anti Pieghe

Di Addio Alle Pieghe

La funzione Anti Pieghe utilizza vapore delicato e rotazione del cestello per ridurre al minimo le pieghe. Garantisce che gli indumenti appaiano più morbidi e riduce la necessità di stiratura, mantenendo la qualità e la freschezza dei tessuti.

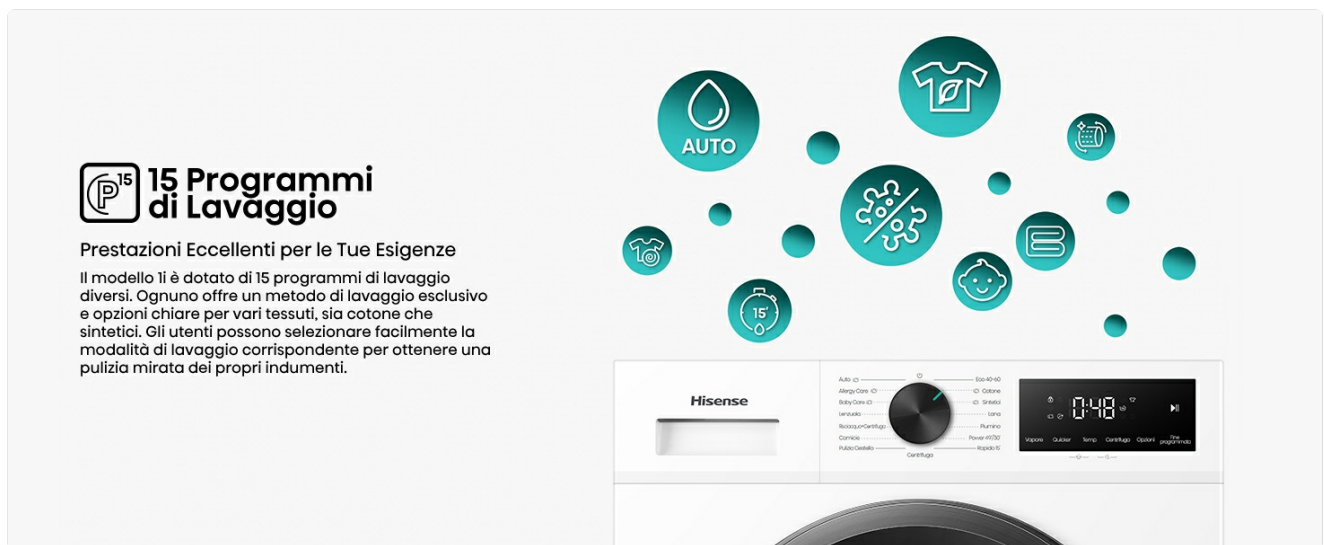


Illustration of the AutoMix Dispenser, showing how detergent is mixed for effective cleaning.

Selecting a Program

Turn the program selector knob to choose one of the 15 available washing programs. The selected program will be displayed on the touch screen. Available programs include:

- Auto
- Allergy Care
- Baby Care
- Lingerie
- Rinse/Spin
- Shirts
- Drum Clean
- Spin
- Eco 40-60
- Cotton
- Synthetics
- Wool
- Duvet
- Power 49' / Quick 15'
- Rapid 15'



Visual representation of the 15 washing programs and control interface.

Adjusting Options

Use the touch display to select additional options such as temperature, spin speed, 'Quicker' function, 'Vapore' (Steam), or 'Fine Programmata' (Delayed End).



Ciclo di Lavaggio Veloce

Lavaggio Veloce, Pulizia Perfetta

Il ciclo Lavaggio Veloce garantisce una pulizia rapida ed efficiente. Per un mezzo carico bastano solo 49 minuti. Anche con la funzione di accelerazione, la qualità del lavaggio non viene compromessa: otterrai comunque risultati impeccabili.

15 min 1 kg
49 min Mezzo carico

The 'Quicker' program button, which reduces wash cycle duration.

Starting the Wash

Press the Start/Pause button to begin the selected wash cycle.

Special Functions

- **Quick Wash (15 min / 49 min):** For small loads of lightly soiled items. The 15-minute program is for 1 kg, and the 49-minute program is for a half load.



Programma Quicker

Accelera Il Tuo Lavaggio

Il programma Quicker risparmia tempo di lavaggio riducendo la durata del ciclo di lavaggio. Premi il pulsante per attivarlo: ogni volta che lo premi, il tempo di lavaggio si riduce ulteriormente. Goditi una pulizia rapida senza rinunciare alla qualità, ideale per le giornate in cui hai bisogno di fare lavaggi veloci ma desideri risultati eccellenti.



Quick wash cycle options for different load sizes and durations.

- **Steam Wash:** Utilizes steam for enhanced hygiene and wrinkle reduction.



Lavaggio a Vapore

Sterilizzazione Avanzata Prima del Lavaggio

Il potere penetrante del ciclo di prelavaggio a vapore ad alta temperatura rimuove efficacemente i microbi prima che inizi il lavaggio vero e proprio. Questo mantiene il bucato al sicuro da allergeni irritanti e nemici invisibili.



Steam wash function for advanced sterilization and bacteria removal.

- **Allergy Care:** Specifically designed to remove allergens from fabrics.



Allergy Care

Nessuna traccia di allergeni

Il processo di sterilizzazione e asciugatura utilizza aria calda ad alta temperatura per eliminare efficacemente il 99,9%* dei batteri nocivi, inclusi Escherichia coli e Staphylococcus aureus. Questo metodo garantisce che gli indumenti rimangano impeccabilmente puliti, senza compromettere le prestazioni di asciugatura.

*Test effettuati da SGS su Staphylococcus aureus ed Escherichia coli nella modalità Allergy Care.



Allergy Care function, designed to eliminate allergens from laundry.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and reinsert.

Drum Clean Function (Hygiene Care)

Use the dedicated 'Drum Clean' program to clean the washing machine drum and gasket. This helps prevent mold, odors, and dirt accumulation.

Easy-Clean Drain Pump

The washing machine is equipped with an Easy-Clean drain pump. Regularly check and clean the filter to prevent

blockages and ensure proper drainage. This intuitive water collection tray and improved drainage system simplify cleaning and maintenance by simply opening the pump cover, preventing coins from getting stuck and water from overflowing onto the floor, further reducing mold formation and unpleasant odors.



The Easy-Clean Drain Pump, simplifying maintenance and reducing odors.

Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter any issues with your washing machine, refer to the following common problems and solutions before contacting customer service.

Common Issues:

- **Machine does not start:** Check if the power cord is plugged in, the door is closed properly, and the start button has been pressed. Ensure there is water supply.
- **Water leakage:** Check all hose connections for tightness. Ensure the drain hose is correctly positioned.
- **Excessive vibration/noise:** Ensure the machine is level and all transit bolts have been removed. Distribute laundry evenly in the drum.
- **Detergent residue in dispenser:** Clean the detergent dispenser regularly. Ensure sufficient water pressure.
- **Clothes not clean:** Check if the correct program and detergent amount were used. Do not overload the machine.
- **Door cannot be opened:** Wait for the wash cycle to complete and the door lock indicator to turn off. If the machine is still hot, it may remain locked for safety.

For persistent issues, consult the detailed troubleshooting section in the full user manual or contact Hisense customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	WF1I7022BWJ
Product Dimensions (D x W x H)	42P x 60I x 85H cm (Depth: 47 cm)
Capacity	7 Kilograms
Maximum Spin Speed	1200 Revolutions per minute
Energy Class	A
Noise Level (Spin)	74 Decibels
Number of Standard Cycles	15
Control Type	Touch
Installation Type	Freestanding
Material	Stainless steel (drum), Plastic or enameled steel (basket material)
Color	White / Black
Voltage	50 Volt
Country of Origin	China

Energy Label



The energy label for the Hisense WF1I7022BWJ, indicating its Class A energy efficiency.

9. WARRANTY AND SUPPORT

Your Hisense WF1I7022BWJ washing machine comes with a **2-year manufacturer's warranty**. Please refer to the warranty card included in the packaging for full terms and conditions.

For technical assistance, spare parts, or any inquiries, please contact Hisense customer support. Keep your model number (WF1I7022BWJ) and purchase details ready when contacting support.

A detailed user manual and installation instructions are included with your product for further reference.

