

[Manuals.plus](#) /

› [Jocoevol](#) /

› Jocoevol Pull Out Trash Can Cabinet C-2023 User Manual

Jocoevol C-2023

Jocoevol Pull Out Trash Can Cabinet C-2023 User Manual

Model: C-2023

1. PRODUCT OVERVIEW

The Jocoevol Pull Out Trash Can Cabinet, Model C-2023, is a versatile and functional furniture piece designed to discreetly store trash cans, laundry hampers, or other items. It features a smooth-gliding pull-out mechanism for easy access to the main compartment and an integrated top drawer for additional storage. Its design helps maintain a clean and organized living space while preventing pet access to waste.



Household Waste Storage



Spare Laundry Hamper



Pet-Raid Prevention



Image 1.1: The cabinet offers multiple functionalities, including waste storage, laundry, and pet-proof design.

2. IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the drawer or the pull-out compartment. Refer to specifications for weight limits.
- Use caution when operating the pull-out mechanism to avoid pinching fingers.
- This cabinet is designed for indoor use only.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged,

contact customer support.

- Cabinet Panels (Side panels, back panel, top panel, bottom panel)
- Drawer Components (Drawer front, sides, back, bottom)
- Pull-Out Door Components (Door panel, frame)
- Hardware Pack (Screws, dowels, cam locks, handles, drawer slides, pull-out slides)
- Assembly Tool (Hex key, if required)

Note: Trash cans are not included with this product.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your Jocoevol Pull Out Trash Can Cabinet. It is recommended to have two people for assembly.

Step 4.1: Prepare the Base and Side Panels

1. Attach the base supports to the bottom panel using the provided screws.
2. Connect the side panels to the bottom panel using dowels and cam locks. Ensure the pre-drilled holes for drawer slides are facing the correct direction.

Step 4.2: Install Drawer Slides and Back Panel

1. Secure the drawer slides to the inner sides of the cabinet panels using the designated screws.
2. Slide the back panel into the grooves on the side and bottom panels, then secure it with small nails or screws.

Step 4.3: Assemble the Top Drawer

1. Assemble the drawer box by connecting the drawer sides, back, and front panels. Insert the drawer bottom into the grooves.
2. Attach the drawer handles to the drawer front.
3. Install the corresponding drawer slides to the sides of the assembled drawer box.

Step 4.4: Assemble the Pull-Out Mechanism

1. Attach the pull-out slides to the bottom frame of the pull-out door assembly.
2. Connect the pull-out door panel to its frame.
3. Attach the handle to the pull-out door.



Image 4.1: The cabinet features smooth 3-section glides for enhanced durability and ease of use.

Step 4.5: Final Assembly

1. Attach the top panel to the assembled side and back panels using dowels and cam locks.
2. Carefully insert the assembled top drawer into its designated slides.
3. Align the pull-out door assembly with the lower slides and secure it according to the hardware instructions.
4. Ensure all components move smoothly and all fasteners are tight.

5. OPERATION

5.1 Using the Pull-Out Compartment

To access the main compartment, gently pull the lower handle. The smooth-gliding mechanism will extend the compartment forward. You can place one or two 13-gallon trash cans inside. Refer to the specifications for recommended trash can dimensions.



Smooth-Slide Trash Cabinet

Flawless sliding motion, flush-fitting closure

Image 5.1: The smooth-slide mechanism allows for easy access to the hidden trash cans.

5.2 Utilizing the Storage Drawer

The top drawer provides additional storage space for various items such as kitchen utensils, coffee beans, trash bags, or paper towels. Pull the upper handle to open the drawer.



Image 5.2: The top drawer and lower pull-out compartment offer ample storage and waste management solutions.

5.3 Countertop Usage

The cabinet's top surface can be used as a countertop. It features a raised edge design to help prevent items from falling off. Do not place excessively heavy or hot items directly on the surface without protection.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Environment:** Avoid placing the cabinet in direct sunlight or near heat sources, as this can cause warping or fading.

7. TROUBLESHOOTING

Issue	Possible Cause	Solution
Drawer/Pull-out sticks or is difficult to open/close.	Loose screws on slides; debris in slides; overloaded compartment.	Check and tighten all screws on slides. Clean slides of any debris. Reduce weight in compartment.
Cabinet wobbles.	Uneven floor; loose assembly screws.	Ensure cabinet is on a level surface. Check and tighten all assembly screws.
Unpleasant odors persist.	Trash cans not sealed; compartment needs cleaning.	Ensure trash cans have tight-fitting lids. Clean the interior of the cabinet and trash cans regularly.

8. PRODUCT SPECIFICATIONS

Product Size

FITS TWO 13-GALLON TRASH CANS

 Package does not include trash can

Image 8.1: Product dimensions and recommended trash can sizes.

Feature	Detail
---------	--------

Feature	Detail
Brand	Jocoevol
Model Number	C-2023
Color	White
Material	Engineered Wood
Mounting Type	Freestanding
Number of Drawers	1
Recommended Trash Can Size (Two)	15" L x 11.8" W x 23.6" H (each 13-gallon can)
Recommended Trash Can Size (One)	23.4" L x 15" W x 23.6" H
Item Weight	61.7 Pounds
Special Feature	Anti-slip, Raised Edge Countertop

9. WARRANTY AND SUPPORT

Jocoevol products are manufactured with quality and durability in mind. For specific warranty information, please refer to the documentation included with your purchase or contact Jocoevol customer support directly.

If you encounter any issues or have questions regarding your Jocoevol Pull Out Trash Can Cabinet, please contact our customer support team for assistance. Provide your model number (C-2023) and a detailed description of the issue to expedite service.

Contact information can typically be found on the manufacturer's website or on the packaging.