

[Manuals.plus](#) /

› [Jojoka](#) /

› Jojoka Modern 5-Drawer Tall Dresser with LED Lights & Charging Station User Manual

Jojoka PHK_35TUVH7XLBvdl

Jojoka Modern 5-Drawer Tall Dresser User Manual

Model: PHK_35TUVH7XLBvdl

INTRODUCTION

Thank you for purchasing the Jojoka Modern 5-Drawer Tall Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- **WARNING:** Furniture tip-over hazard. To prevent injury, this furniture must be securely attached to the wall using the anti-tip kit provided. Never allow children to climb on drawers or shelves.
- Do not overload drawers. Distribute weight evenly.
- Keep small parts away from children during assembly.
- Only use the charging station for compatible electronic devices. Do not exceed the specified electrical ratings.

ANTI-TIP KIT

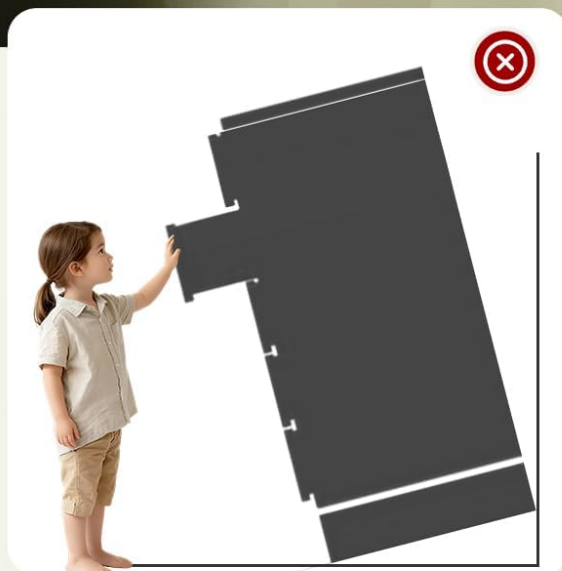


Image: Anti-tip kit showing proper installation to prevent furniture from tipping over. The diagram illustrates a child safely next to a secured dresser versus an unsecured, tipping dresser.

PACKAGE CONTENTS

Before assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dresser Panels (Top, Bottom, Sides, Back)
- Drawer Panels (Front, Back, Sides, Bottom)
- Drawer Slides (Ball-bearing)
- Hardware Pack (Screws, Dowels, Cam Locks, etc.)
- Anti-Tip Kit
- LED Light Strip

- Charging Station Unit (with AC outlets and USB ports)
- Power Cord
- Assembly Instructions Manual

ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Follow the numbered steps in the included detailed assembly guide. Ensure you have a Phillips head screwdriver and a hammer (not included).

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the dresser components.
2. **Identify Parts:** Lay out all parts and hardware. Match them with the parts list in the separate assembly guide.
3. **Assemble the Frame:** Begin by connecting the side panels to the bottom panel using the specified hardware. Ensure cam locks are tightened securely.
4. **Install Drawer Slides:** Attach the drawer slides to the inner side panels of the dresser frame and to the drawer side panels. Ensure they are oriented correctly for smooth operation.
5. **Assemble Drawers:** Construct each drawer by connecting the front, back, and side panels. Insert the drawer bottom into the grooves.
6. **Insert Drawers:** Carefully slide the assembled drawers into the dresser frame.
7. **Attach Top Panel:** Secure the top panel to the assembled frame.
8. **Install LED Lights:** Adhere the LED light strip to the designated area on the dresser, typically under the top panel or within a recessed shelf. Connect it to the power source.
9. **Install Charging Station:** Mount the charging station unit into its designated slot, usually on the top surface or side. Connect its power cord.
10. **Attach Anti-Tip Kit:** Securely fasten the anti-tip strap to the back of the dresser and to a wall stud using the provided hardware. This step is critical for safety.



Image: Two Jojoka 5-drawer tall dressers, one with green LED lighting, positioned in a room. This illustrates the assembled product.

OPERATING INSTRUCTIONS

LED Lighting System

The integrated RGB LED lighting system offers customizable ambiance. It can typically be controlled via a remote control (if included) or a smartphone application.

- **Power On/Off:** Use the designated button on the remote or app to turn the lights on or off.
- **Color Selection:** Choose from over 6000 color levels using the color wheel or preset options in the app.
- **Brightness Adjustment:** Adjust the intensity of the light to your preference.
- **Music Sync:** Activate the music sync feature via the app to make the lights react to sound, utilizing the built-in microphone.

- **Timing Function:** Set schedules for the lights to turn on or off automatically.



Image: A Jojoka dresser with vibrant green LED lighting, accompanied by an image of a smartphone displaying the LED control application interface, highlighting features like color levels, music sync, and timing.

Charging Station

The dresser includes a built-in charging station for convenient power access.

- **AC Outlets:** Features 3 standard 125V/12A AC outlets. Plug in lamps, chargers, or other small appliances.
- **USB Ports:** Includes 2 USB ports (5V/2A) for charging smartphones, tablets, and other USB-powered devices.
- **Power Cord:** The charging station is powered by a 4.9-foot power cord. Ensure it is plugged into a grounded wall outlet.
- **Caution:** Do not exceed the maximum power rating of the charging station. Avoid using damaged cords or adapters.

LED DRESSER WITH CHARGING STATION



125V/12A
AC Outletsx3



5V/2A
USBx2



4.9-FOOT
Power Cord

Image: A detailed view of the Jojoka dresser's integrated charging station, showing three AC outlets and two USB ports in use, charging a smartphone, tablet, and wireless earbuds.

CARE AND MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent water damage, as the dresser is water-resistant but not waterproof.
- **Drawer Slides:** The ball-bearing slides are designed for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary to maintain stability.
- **LED Lights:** The LED lights are designed for long life. If a strip malfunctions, contact customer support for

replacement options.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned slides, loose hardware, or debris in tracks.	Check alignment of drawer slides. Tighten all hardware. Clean tracks of any debris. Apply silicone lubricant if needed.
LED lights are not turning on.	Power cord unplugged, remote battery dead, or light strip connection issue.	Ensure the LED power cord is securely plugged into an outlet. Check remote battery. Verify all connections to the LED strip are firm.
Charging station is not working.	Charging station power cord unplugged, or device not compatible.	Ensure the charging station's power cord is securely plugged into a working wall outlet. Test with a different device or cable. Do not exceed power limits.
Dresser feels unstable.	Loose assembly hardware or anti-tip kit not installed/secured.	Re-tighten all assembly hardware. Ensure the anti-tip kit is correctly installed and securely anchored to a wall stud.

PRODUCT SPECIFICATIONS

Brand	Jojoka
Model Number	PHK_35TUVH7XLBvdl
Material	Engineered Wood
Finish Type	Powder Coated
Product Dimensions (D x W x H)	52.36" x 18.5" x 7.87"
Number of Drawers	5
Item Weight	97 Pounds
Color	Black
Required Assembly	Yes
Charging Station AC Outlets	3 (125V/12A)
Charging Station USB Ports	2 (5V/2A)
Power Cord Length	4.9 feet

PRODUCT SIZE



Image: A diagram illustrating the overall dimensions of the Jojoka 5-drawer tall dresser, including height, width, and depth, with a human figure for scale and detailed drawer measurements.

WARRANTY AND CUSTOMER SUPPORT

This product comes with a standard return policy. For specific warranty details, please refer to your purchase documentation or contact the seller directly.

For any questions, missing parts, or assistance with assembly or operation, please contact Jojoka Customer Support. Refer to your purchase platform for contact information or visit the official Jojoka store page on Amazon: [Jojoka Store](#). Please have your model number (PHK_35TUVH7XLBvdl) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question