



[Manuals.plus](#) /

› [Lifetime Air](#) /

› Lifetime Air 9000 BTU Mobile Air Conditioner User Manual (Model MELIEL6560/0021)

## Lifetime Air MELIEL6560/0021

# Lifetime Air 9000 BTU Mobile Air Conditioner User Manual

Model: MELIEL6560/0021

## 1. INTRODUCTION

---

Thank you for choosing the Lifetime Air 9000 BTU Mobile Air Conditioner. This appliance is designed to provide efficient cooling, ventilation, and dehumidification for your indoor spaces. Please read this manual thoroughly before operating the unit to ensure safe and optimal performance. Keep this manual for future reference.



Image 1.1: Overview of the 3-in-1 functions: Cooling, Fan, and Dehumidifier.

## 2. SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the appliance.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the unit with a damaged cord or plug.
- Keep the appliance away from heat sources and direct sunlight.
- Do not block the air inlets or outlets.
- Always place the unit on a flat, stable surface.
- Unplug the appliance before cleaning or servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1x Lifetime Air Mobile Air Conditioner Unit
- 1x Remote Control
- 1x Exhaust Hose
- 1x Window Sealing Plate Kit
- 1x User Manual (this document)



Image 3.1: All components included in the package: the air conditioner unit, remote control, exhaust hose, and window sealing kit.

### 4. PRODUCT OVERVIEW

---

Familiarize yourself with the main parts of your mobile air conditioner.

#### 4.1 Unit Features

- **3-in-1 Functionality:** Cooling, Fan, and Dehumidifier modes.
- **Cooling Capacity:** 9000 BTU (2.64 kW) suitable for rooms up to approximately 60 m<sup>3</sup>.
- **Adjustable Thermostat:** Temperature range from 16°C to 31°C.
- **Timer:** Programmable from 1 to 24 hours.
- **Fan Speeds:** Two fan speed settings (High/Low).
- **Sleep Mode:** For quieter operation during the night.
- **Portability:** Equipped with castor wheels and integrated handles for easy movement.
- **Control:** Touch control panel on the unit and a remote control.



Image 4.1: Visual representation of the three primary functions: Air Circulation (Fan), Dehumidification, and Cooling.

# Facile à utiliser

Avec télécommande et panneau de commande tactile



Image 4.2: Close-up of the easy-to-use touch control panel on the unit and the included remote control.

## 5. SETUP

Proper setup is crucial for the efficient operation of your air conditioner.

### 5.1 Placement

- Place the unit on a firm, level surface in the room you wish to cool.
- Ensure there is at least 30 cm (12 inches) of space around the unit for proper airflow.
- Avoid placing the unit near heat sources or in direct sunlight.

### 5.2 Exhaust Hose Installation

1. Attach one end of the exhaust hose to the air outlet on the back of the unit. Twist clockwise to secure.
2. Extend the exhaust hose to the nearest window or opening. Avoid bending or kinking the hose, as this can reduce efficiency.

## 5.3 Window Sealing Kit Installation

The window sealing kit helps to prevent hot air from re-entering the room and improves cooling efficiency.

1. Open the window and adjust the window sealing plate to fit the opening. Secure it in place.
2. Insert the flat end of the exhaust hose into the opening of the window sealing plate.
3. Close the window as much as possible to seal around the plate and hose.



Image 5.1: Product dimensions for placement reference: 69.8 cm (height), 35.5 cm (width), 34.1 cm (depth).

## 6. OPERATING INSTRUCTIONS

Your mobile air conditioner can be operated using the control panel on the unit or the remote control.

### 6.1 Power On/Off

- Plug the power cord into a grounded electrical outlet.
- Press the **POWER** button on the control panel or remote control to turn the unit on or off.

## 6.2 Mode Selection

Press the **MODE** button to cycle through the available modes:

- **Cool Mode:** For cooling the room. The compressor will operate.
- **Fan Mode:** Circulates air without cooling.
- **Dehumidify Mode:** Reduces humidity in the air.

## 6.3 Temperature Adjustment (Cool Mode Only)

- In Cool Mode, use the **UP** and **DOWN** arrows to set your desired temperature between 16°C and 31°C.

## 6.4 Fan Speed Adjustment (Cool and Fan Modes)

- Press the **FAN SPEED** button to select between High and Low fan speeds.

## 6.5 Timer Function

- Press the **TIMER** button to set the desired operating duration (1-24 hours). The unit will automatically turn off or on after the set time.

## 6.6 Sleep Mode

- Press the **SLEEP** button for quieter operation and reduced energy consumption during sleep. The fan speed will automatically adjust to low.

# Capacité refroidissement 9000 BTU

Pour des espaces jusqu'à 60m<sup>2</sup>



Image 6.1: The 9000 BTU cooling capacity is effective for spaces up to 60 m<sup>3</sup>, providing comfort in various room settings.

# Silencieux

Maximal 65 dB de bruit



Avec mode veille  
Fonctionnement silencieux



Minuterie réglable  
De 1 à 24 heures



Image 6.2: The unit operates quietly with a maximum noise level of 65 dB, featuring a sleep mode for silent function and a timer adjustable from 1 to 24 hours.

## 7. MAINTENANCE

---

Regular maintenance ensures the longevity and efficiency of your air conditioner.

### 7.1 Cleaning the Air Filter

The air filter should be cleaned every two weeks or more frequently depending on usage.

1. Unplug the unit from the power outlet.
2. Locate the air filter panel (usually on the back or side of the unit).
3. Remove the filter.
4. Wash the filter with warm, soapy water. Rinse thoroughly and allow it to air dry completely before reinserting.
5. Reinstall the dry filter and close the panel.

### 7.2 Draining Condensed Water

During cooling and dehumidifying operations, water will condense inside the unit. The unit has a self-evaporating system, but in high humidity conditions, the water tank may fill up. When full, the unit will stop operating and display an error code (refer to troubleshooting).

1. Unplug the unit.
2. Place a shallow pan or tray under the drain outlet at the bottom rear of the unit.
3. Remove the drain plug. Water will flow out.
4. Once all water has drained, replace the drain plug securely.

## 7.3 Storage

If storing the unit for an extended period:

- Drain all condensed water completely.
- Clean the air filter.
- Store the unit in a dry, upright position, away from direct sunlight and extreme temperatures.

## 8. TROUBLESHOOTING

Before contacting customer support, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	No power supply; Power cord damaged; Water tank full	Check power connection; Inspect power cord; Drain water tank
Insufficient cooling	Air filter dirty; Exhaust hose blocked/kinked; Room too large; Doors/windows open	Clean air filter; Check and straighten exhaust hose; Ensure room size is within limits; Close all doors and windows
Unit is noisy	Unit not on a level surface; Obstruction in fan	Place on a flat, stable surface; Check for and remove any obstructions
Water leakage	Drain plug not secured; Unit tilted	Ensure drain plug is tightly closed; Place unit on a level surface

## 9. SPECIFICATIONS

Feature	Specification
Model Number	MELIEL6560/0021 (JHS-A016-09KR2/M)
Cooling Capacity	9000 BTU / 2.64 kW
Power Consumption	1010 W
Voltage / Frequency	220–240 V ~ 50 Hz
Energy Class	A
EER	2.6

Feature	Specification
Air Flow Rate	Max. 350 m <sup>3</sup> /h
Recommended Room Size	Up to approx. 60 m <sup>3</sup>
Thermostat Range	16 – 31 °C
Fan Speeds	2 (High, Low)
Max. Noise Level	65 dB(A)
Refrigerant	R290 (0.195 kg)
Timer	1 – 24 hours
Functions	Cooling, Ventilation, Dehumidification
Control Method	Remote Control, Touch Panel
Dimensions (L x W x H)	698 x 355 x 341 mm (27.5 x 14 x 13.4 inches)
Weight	24 kg (52.9 lbs)
Protection Class	IPX0

## 10. WARRANTY & SUPPORT

---

### 10.1 Warranty Information

This Lifetime Air product comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, neglect, accident, alteration, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

### 10.2 Customer Support

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Lifetime Air customer support. Refer to the product packaging or the official Lifetime Air website for contact details.