

[Manuals.plus](#) /

› [RAPSUAR](#) /

› RAPSUAR 30-inch Wall Mount Range Hood (Model: Wall-mounted-TW1) Instruction Manual

RAPSUAR GRT369a

RAPSUAR 30-inch Wall Mount Range Hood

Model: Wall-mounted-TW1 (GRT369a)

Instruction Manual

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power supply matches the voltage requirements (110 volts). Disconnect power before servicing.
- **Installation:** Install according to local codes and regulations. Ensure proper grounding.
- **Ventilation:** This range hood is designed for ducted ventilation. Ensure the ductwork is correctly installed and sealed.
- **Cleaning:** Clean grease filters regularly to prevent fire hazards and maintain performance.

2. PRODUCT OVERVIEW

The RAPSUAR Wall Mount Range Hood (Model: Wall-mounted-TW1) is a 30-inch stainless steel unit designed for efficient kitchen ventilation. It features 1200 CFM powerful suction, 4-speed fan control, gesture and touch controls, dimmable LED lighting, and dishwasher-safe baffle filters.

Components Included:

- Range Hood Unit
- LED Lights (pre-installed)
- Grease Filters (baffle type)
- Oil Cup
- Mounting Hardware (check packaging for full list)

Dimensions:

Refer to the diagram below for detailed product dimensions.



Figure 2.1: Range Hood Dimensions. The unit measures 19.7"D x 30"W x 31.6"H. Chimney height is adjustable from 18.8" to 38.5".

3. SETUP AND INSTALLATION

Professional installation is recommended. Ensure the mounting surface is structurally sound to support the weight of the range hood.

Mounting Location:

This is a wall-mount range hood. It should be installed directly above your cooking surface. Maintain appropriate clearance as specified in the full installation guide (not provided here, refer to packaging for detailed instructions).

Ducting:

The unit requires ducted ventilation. Connect the exhaust outlet to appropriate ductwork that leads to the outside. Ensure all duct connections are sealed to prevent air leaks.

4. OPERATING INSTRUCTIONS

The range hood features both touch and gesture controls for convenient operation.

Control Panel Overview:



Figure 4.1: Control Panel Layout.

Power On/Off:

Press the **Power button** (⏻) to turn the range hood on or off.

Fan Speed Adjustment (Touch Control):

The range hood has 4 adjustable fan speeds (F1-F4).

1. Press the **"+" button** to increase the fan speed.
2. Press the **"-" button** to decrease the fan speed.



Figure 4.2: Touch Control for Fan Speed.

Fan Speed Adjustment (Gesture Control):

Gesture control is enabled by default. Wave your hand in front of the control panel to adjust fan speed.

- Wave your hand to the **right** to increase fan speed.
- Wave your hand to the **left** to decrease fan speed.



Figure 4.3: Gesture Control for Fan Speed.

Video 4.1: Demonstration of how to use the gesture control feature to adjust fan speed.

LED Light Control:

The range hood is equipped with 2 dimmable LED lights.

- Press the **Light button** (💡) to turn the lights on or off.
- Press and hold the **Light button** to adjust the brightness (dimming or brightening).



Figure 4.4: Dimmable LED Lights.

Video 4.2: Demonstration of how to adjust light brightness.

Timer Function and Delayed Shut-off:

The range hood includes a timer for delayed shut-off.

- **Delayed Shut-off (180 seconds):** Tap the **Timer button** (⏸) to activate the 180-second delayed shut-off mode. The fan will continue to run for 180 seconds and then turn off automatically.
- **Custom Timer (up to 15 minutes):** Press and hold the **Timer button** to set a custom shut-off time, adjustable up to 15 minutes. Use the "+" and "-" buttons to adjust the time.



Figure 4.5: Delayed Shutdown Feature.

Video 4.3: Demonstration of how to use the delayed shutdown and timed shutdown functions.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your range hood.

Cleaning Baffle Filters:

The range hood is equipped with heavy-duty stainless steel baffle filters that are dishwasher-safe.

1. To remove, locate the release latches on each filter and pull down.
2. Place filters in a dishwasher for cleaning or wash by hand with warm, soapy water.
3. Ensure filters are completely dry before re-installing.
4. To re-install, align the filters with the slots and push up until they click into place.

Detachable Oil Cup

A plastic oil cup collects grease buildup, preventing solidification and drips.




Figure 5.1: Cleaning Baffle Filters.

Cleaning the Oil Cup:

The detachable oil cup collects grease and impurities.

1. Carefully slide out the oil cup from its housing.
2. Empty collected grease and wash the cup with warm, soapy water.
3. Ensure the oil cup is clean and dry before re-inserting.

Effortless Cleaning

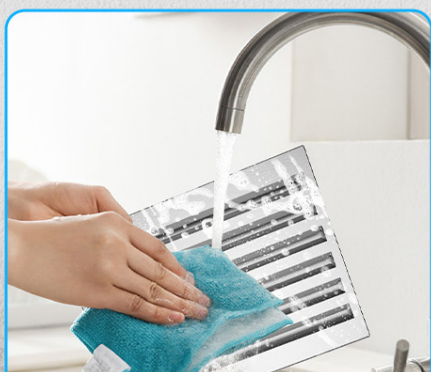

Hand-Washable



Dishwasher-Safe



Easy-Care

Figure 5.2: Detachable Oil Cup.

Cleaning the Exterior:

Wipe the stainless steel surface with a soft cloth and a non-abrasive stainless steel cleaner. Avoid harsh chemicals or abrasive pads that can scratch the finish.

6. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Range hood does not turn on.	No power supply; circuit breaker tripped; loose wiring.	Check power connection. Reset circuit breaker. Consult a qualified electrician for wiring issues.
Fan is weak or noisy.	Grease filters are clogged; ductwork obstruction; motor issue.	Clean or replace grease filters. Check ductwork for obstructions. If problem persists, contact support.
LED lights are not working.	Light bulb failure; loose connection.	Check if lights are properly seated. If necessary, replace LED light modules (consult manual for replacement instructions).
Gesture control is unresponsive.	Sensor obstruction; gesture control disabled.	Ensure the sensor area is clean and unobstructed. Check if gesture control is enabled via the control panel.

7. SPECIFICATIONS

Feature	Detail
Brand	RAPSUAR
Model Number	GRT369a
Product Dimensions (DxWxH)	19.7" x 30" x 31.6"
Color	Wall-mounted-TW1 (Stainless Steel)
Air Flow Capacity	1200 CFM
Noise Level	50 dB (max)
Mounting Type	Wall Mount
Control Type	Touch, Gesture
Number of Speeds	4
Light Source	LED (Dimmable)
Wattage	235 watts
Filter Type	Baffle (Dishwasher-Safe)

Feature	Detail
Ventilation Type	Ducted
Material Type	Stainless Steel
Special Features	Auto Fan Shut-Off, Timer

8. WARRANTY INFORMATION

This RAPSUAR range hood comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications. Please retain your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For technical assistance, warranty claims, or questions regarding your RAPSUAR range hood, please contact our customer support team.

Online Support: Visit the official RAPSUAR website for FAQs and support resources. [RAPSUAR Store on Amazon](#)

Please have your model number (GRT369a) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question