

DUMOS M-60F6

DUMOS 16-in-1 Electric Pressure Cooker User Manual

Model: M-60F6 | Brand: DUMOS

INTRODUCTION

Thank you for choosing the DUMOS 16-in-1 Electric Pressure Cooker. This versatile appliance is designed to simplify your cooking experience, offering a wide range of functions in a single unit. Please read this manual thoroughly before first use to ensure safe and optimal operation.

This 6-quart programmable multi-cooker is equipped with 12 one-touch presets, a ceramic inner pot, and features like delay start and keep warm, making it an essential tool for any kitchen.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in fire, electric shock, serious injury, or property damage.

- Always ensure the lid is properly secured before operating the pressure cooker. A clear lid indicator flashes if not properly secured.
- Do not place hands or face near the steam release valve during operation or when releasing pressure.
- Ensure the float valve is down before attempting to open the lid.
- Only use the original pressure cooking lid provided with the appliance.
- Do not immerse the appliance in water or any other liquid.
- Keep out of reach of children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.

Ceramic Inside, Easy-Clean Outside

Ceramic-Lined Inner Pot Designed for Healthier Meals

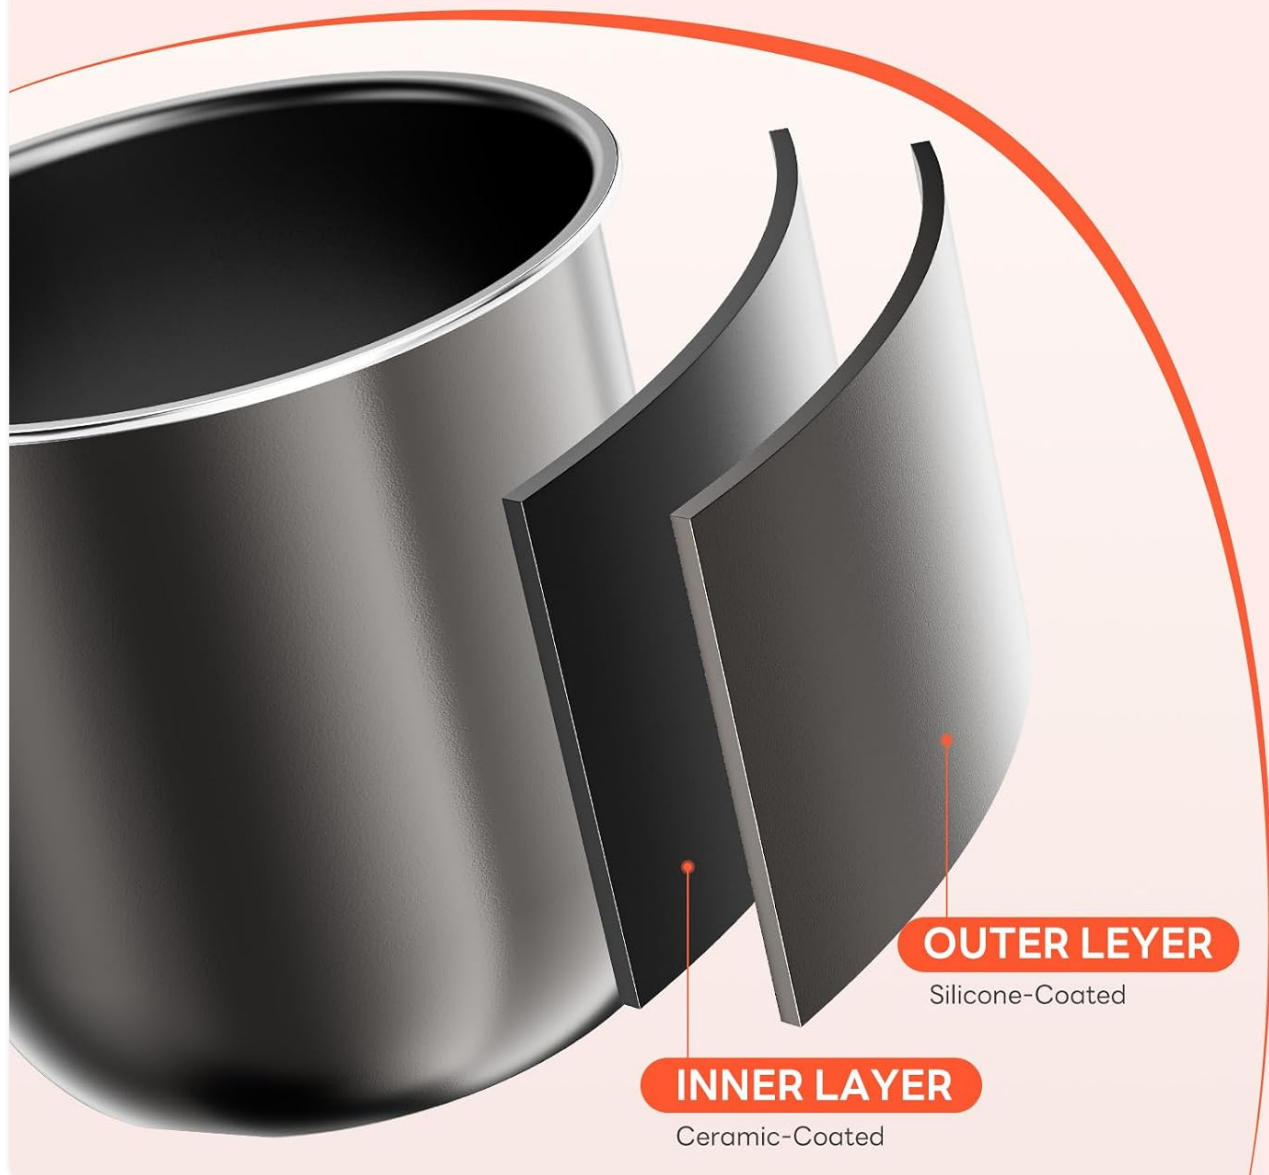


Figure 1: Built-in Safety Features - Float Valve, Steam Release Valve, and Condensation Collector.

PRODUCT OVERVIEW

The DUMOS Electric Pressure Cooker is designed for ease of use and durability. Below are the key components:

- **Main Unit:** Stainless steel exterior with integrated control panel.
- **Inner Pot:** Ceramic-lined, non-stick, and scratch-resistant for healthier meals and easy cleanup.
- **Lid:** Features a float valve, steam release valve, and a secure locking mechanism.
- **Condensation Collector:** Gathers moisture from the inner lid, seal, and pressure release.
- **Accessories:** Includes a measuring cup and rice scoop.

24 Hour Preset Cook



Figure 2: Package Contents - Electric Pressure Cooker, Inner Pot, Condensation Collector, Measuring Cup, Rice Scoop, Recipe Book, and User Manual.



Porridge



Steam



Yogurt



Canning

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Cleaning:** Before first use, wash the inner pot, sealing ring, and condensation collector with warm, soapy water. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Assembly:**
 - Place the inner pot into the main unit.
 - Attach the condensation collector to the back of the main unit.
 - Ensure the sealing ring is correctly seated inside the lid.
 - Place the lid on the cooker, aligning the arrow on the lid with the arrow on the base, then twist clockwise until it locks into place.
4. **Placement:** Place the pressure cooker on a stable, level surface away from heat sources and direct sunlight. Ensure adequate ventilation around the unit.

OPERATING INSTRUCTIONS

The DUMOS Electric Pressure Cooker features a user-friendly control panel with 12 one-touch presets and additional functions.

6QT Family Size



Figure 4: Control Panel with 12 One-Touch Menus.

Basic Operation:

1. Add ingredients to the inner pot. Do not exceed the MAX fill line.
2. Secure the lid and ensure the steam release valve is in the "Seal" position for pressure cooking.
3. Plug in the appliance. The display will show "OFF".
4. Select a cooking program by pressing the corresponding button (e.g., "Rice", "Soup", "Meat/Stew"). The default cooking time will appear.
5. Adjust cooking time using the "+" and "-" buttons if desired.
6. Press "Start" to begin cooking. The display will show "Preheating" then "Cooking" with a countdown.
7. Once cooking is complete, the cooker will beep and automatically switch to "Keep Warm" mode.
8. Carefully release pressure by moving the steam release valve to the "Vent" position (for quick release) or allow it to naturally release.

9. Once the float valve drops, twist the lid counter-clockwise to open.



Special Functions:

- **Delay Start:** Allows you to program the cooker to start cooking at a later time (up to 24 hours). Press "Delay Start", then use "+" "/" "-" to set the delay time, then select your cooking program.
- **Keep Warm:** Automatically activates after most cooking programs to keep food warm. Can also be selected manually.
- **Sauté:** Use this function to brown meats or sauté vegetables before pressure cooking. Adjust temperature levels (Low, Mid, High) with the "Temp Set" button.
- **Yogurt:** Dedicated program for making homemade yogurt.

Built in Safety Features

Float Valve

Locks the Lid Under Pressure for Safe Cooking

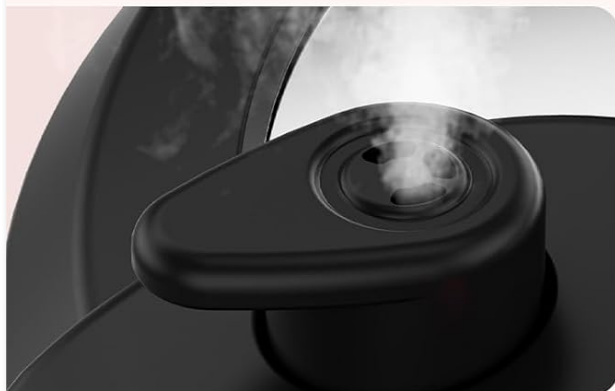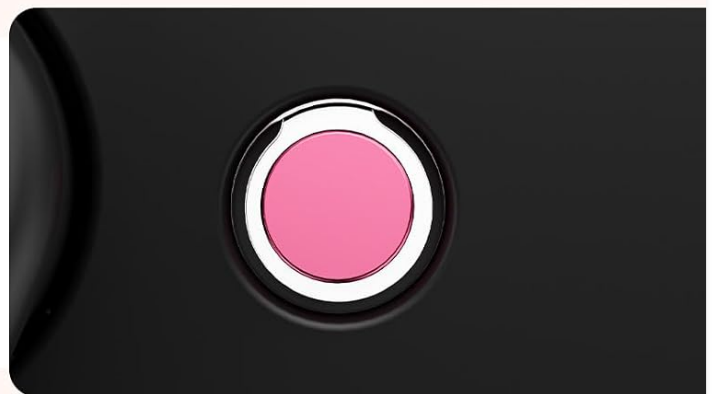

Steam Release Valve

Releasing Excess Steam for Safe Cooking Pressure

Condensation Collector

Gathers Moisture from the Inner Lid, Seal, and Pressure Release



Figure 5: 24-Hour Preset Cook Function.

COOKING FUNCTIONS OVERVIEW

This 16-in-1 multi-cooker combines the functionality of several kitchen appliances:

- **Pressure Cooker:** For fast cooking of meats, stews, and beans.
- **Rice Cooker:** Perfect for various types of rice and grains.
- **Steamer:** Ideal for vegetables, fish, and other delicate foods.
- **Slow Cooker:** For tender, flavorful dishes cooked over a longer period.
- **Yogurt Maker:** Prepare homemade yogurt with ease.
- **Sauté:** Brown ingredients directly in the pot before cooking.
- **Soup:** Dedicated setting for various soup recipes.
- **Meat/Stew:** Optimized for cooking meat and stew dishes.
- **Bean/Chili:** Specific program for beans and chili.
- **Poultry:** For cooking chicken and other poultry.
- **Multigrain:** Handles different types of grains.
- **Porridge:** For creamy porridges.
- **Cake:** Bake cakes directly in the pressure cooker.
- **Egg:** Cook eggs to your desired consistency.
- **Canning:** For safe home canning.

Your browser does not support the video tag.

Video 1: Overview of the DUMOS 16-in-1 Electric Pressure Cooker's features and functions.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your pressure cooker.

- **Inner Pot:** The ceramic inner pot is non-stick and dishwasher safe. For best results, hand wash with warm, soapy water.
- **Lid and Sealing Ring:** The lid and sealing ring are removable and dishwasher safe. Ensure the sealing ring is clean and free of food debris for proper sealing.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- **Condensation Collector:** Empty and clean the condensation collector after each use.
- **Steam Release Valve:** Periodically check the steam release valve for any blockages and clean if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pressure not building	Lid not properly sealed; Steam release valve in "Vent" position; Sealing ring not installed correctly or damaged.	Ensure lid is locked and indicator is off; Turn steam release valve to "Seal"; Check and re-install or replace sealing ring.
Food undercooked	Insufficient cooking time; Not enough liquid.	Increase cooking time; Add more liquid (minimum 1 cup for pressure cooking).
Error codes on display	Specific error (refer to full manual for detailed codes).	Unplug, wait a few minutes, then plug back in. If error persists, contact customer support.
Lid difficult to open	Pressure still inside the cooker.	Ensure all pressure is released and the float valve has dropped before attempting to open.

SPECIFICATIONS

- **Brand:** DUMOS
- **Model Number:** M-60F6
- **Capacity:** 6.34 Quarts (approx. 6 Liters)
- **Material:** Stainless Steel exterior, Ceramic Inner Pot
- **Color:** Black
- **Product Dimensions:** 11.85"D x 13.39"W x 13.07"H
- **Wattage:** 1000 watts
- **Voltage:** 120 Volts
- **Control Method:** Push Button, Digital Controller
- **Special Features:** Dishwasher Safe (Inner Pot, Lid, Sealing Ring), Keep Warm Setting, Locking Lid, Programmable, 12 One-Touch Presets.

Multiple Size Options



Figure 6: Product Dimensions for 6QT and 8QT models.

WARRANTY AND SUPPORT

DUMOS products are designed for quality and reliability. For warranty information, please refer to the warranty card included in your product packaging or visit the official DUMOS website.

For customer support, troubleshooting assistance, or to inquire about replacement parts, please contact DUMOS customer service through the contact information provided in your product documentation or on the DUMOS brand store page.

Note: Always use genuine DUMOS replacement parts to ensure product safety and performance.

© 2026 DUMOS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question