

[Manuals.plus](#) /

› [WEIZE](#) /

› WEIZE Kids Bike Instruction Manual - Model KBA-5064

WEIZE KBA-5064

WEIZE Kids Bike Instruction Manual

Model: KBA-5064

Brand: WEIZE

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your new WEIZE Kids Bike. Please read these instructions carefully before assembly and use to ensure safe and proper operation. Keep this manual for future reference.

The WEIZE Kids Bike is designed for children aged 4-12 years, available in 16-inch and 20-inch wheel sizes. This manual primarily focuses on the 16-inch model (KBA-5064) but general instructions apply to both sizes.

SAFETY INFORMATION

WARNING: Always wear a helmet when riding this bicycle. Adult supervision is required during assembly and initial rides.

- Ensure all bolts and fasteners are securely tightened before each ride.
- Check tire pressure regularly.
- Verify that brakes are functioning correctly before each use.
- Do not ride at night without proper lighting.
- Teach children proper hand signals and road safety rules.
- The fully enclosed chain guard is designed for safety; do not remove it.

PACKAGE CONTENTS

Your WEIZE Kids Bike package should include the following components:

- Bicycle Frame (partially assembled)
- Front Wheel
- Handlebar
- Seat with Seat Post
- Pedals (Left and Right)

- Training Wheels (for 16-inch model)
- Front Fender
- Rear Fender
- Chain Guard (pre-installed)
- Assembly Tools (basic wrench, screwdriver)
- Instruction Manual

ASSEMBLY INSTRUCTIONS

Your WEIZE Kids Bike is 85% pre-installed for quick assembly. The estimated assembly time is approximately 20 minutes. For detailed visual guidance, please refer to the official installation video below.

Assembly Video Guide

Your browser does not support the video tag.

Video Description: This video provides a step-by-step guide for assembling your WEIZE Kids Bike, including handlebar, seat, pedals, and brake adjustments. It is an official installation video from the seller.

Step-by-Step Assembly Overview

Follow these general steps for assembly:

1. **Install the Front Wheel:** Secure the front wheel into the fork.
2. **Install the Handlebar:** Insert the handlebar stem into the fork tube and tighten securely.
3. **Install the Seat Cushion:** Attach the seat to the seat post and insert into the frame. Ensure the cushion buckle is tightened.
4. **Install the Pedals:** Note that pedals are marked 'L' for left and 'R' for right. Thread them carefully into the crank arms. The left pedal tightens counter-clockwise, and the right pedal tightens clockwise.
5. **Install Front Wheel Brake:** Connect and adjust the front brake cable.
6. **Install Fenders:** Attach the front and rear fenders.
7. **Install Training Wheels (if applicable):** Attach the training wheels to the rear axle.

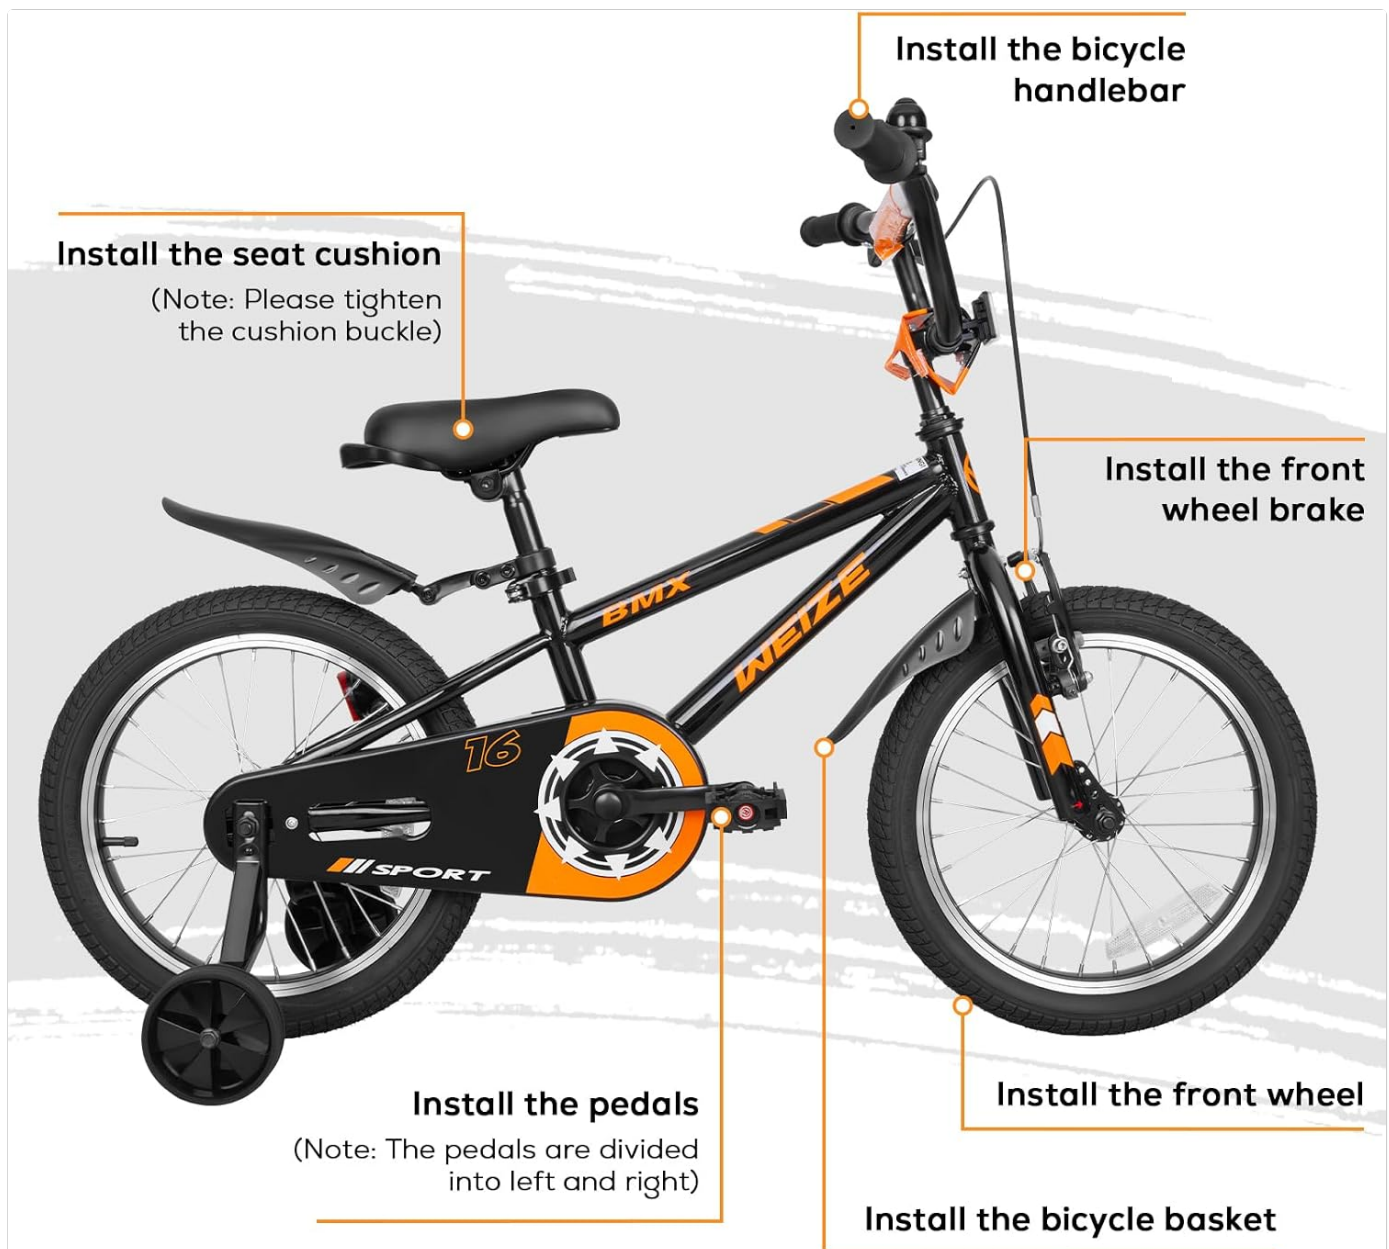


Image Description: An illustration detailing the assembly points of the bicycle, including installing the handlebar, seat cushion, front wheel, front wheel brake, and pedals. It highlights that pedals are divided into left and right and to tighten the cushion buckle.

OPERATING INSTRUCTIONS

Braking System

Your WEIZE Kids Bike features a dual braking system for enhanced safety:

- **Steel Front Hand Brake:** Located on the handlebar, this brake is operated by squeezing the lever.
- **Pedal Backwards Brake (Coaster Brake):** To engage this brake, pedal backward. This is particularly useful for younger riders or those with less hand strength.

Powerful Braking


Steel front hand brake



Image Description: A close-up view of the bicycle's front wheel and handlebar, highlighting the steel front hand brake lever and cable mechanism.

Powerful Braking

Pedal backwards brake

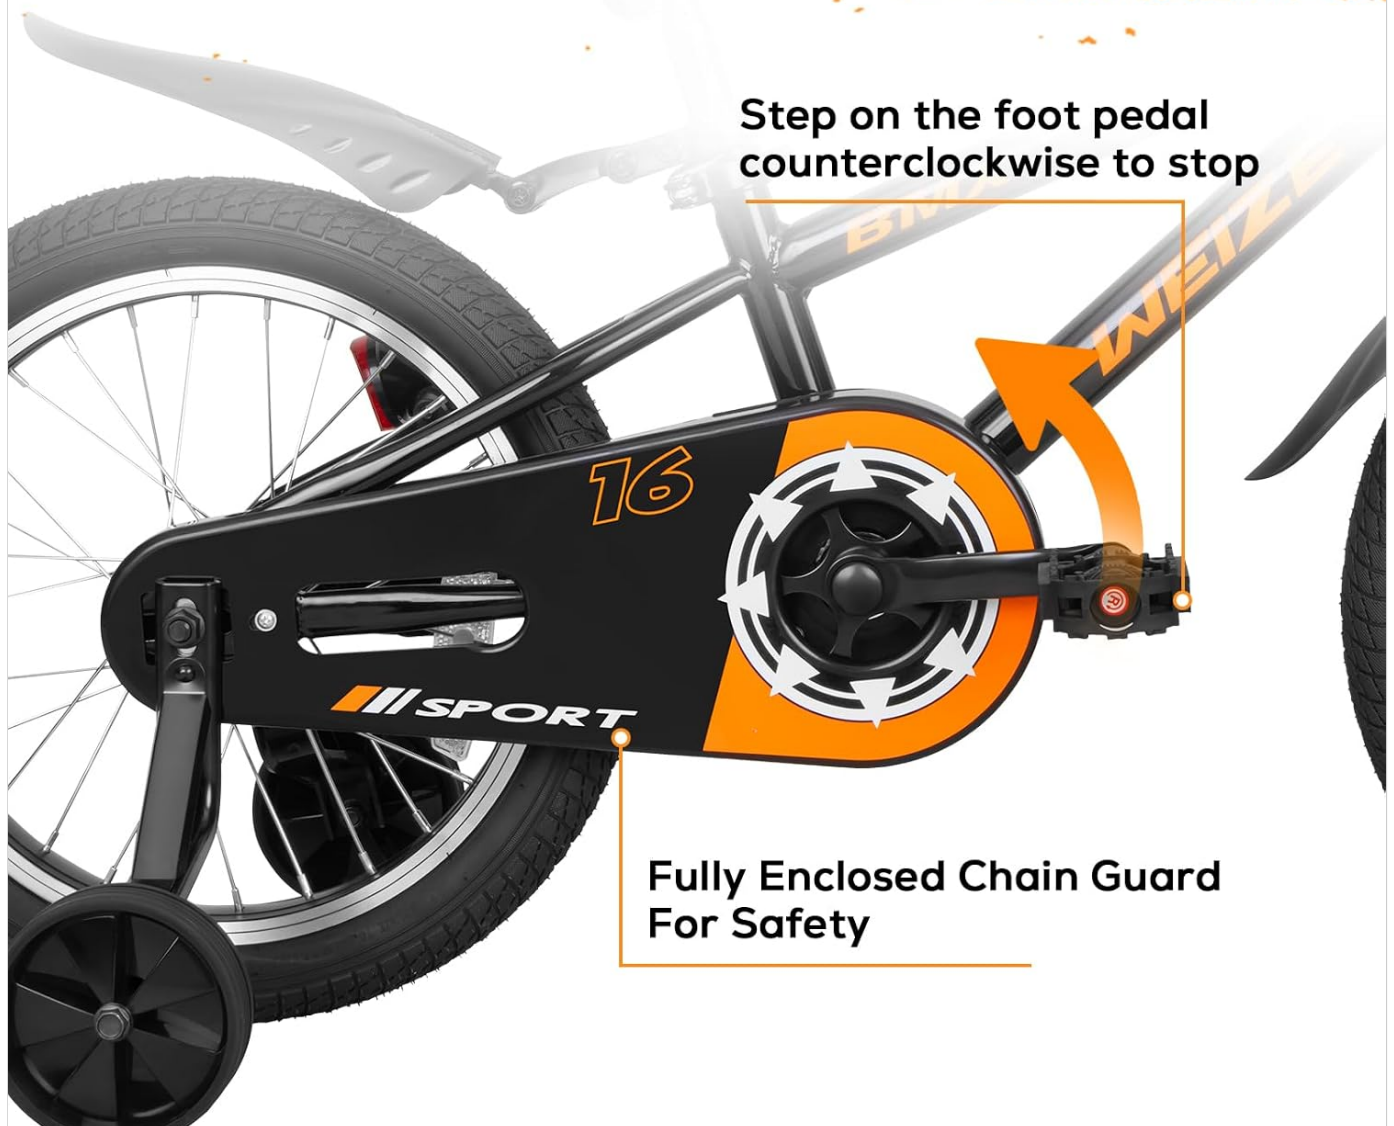

Step on the foot pedal
counterclockwise to stop

Fully Enclosed Chain Guard
For Safety

Image Description: A side view of the bicycle's rear wheel and pedal area, illustrating how to engage the pedal backwards brake by stepping on the foot pedal counterclockwise. The fully enclosed chain guard is also visible for safety.

Adjustable Seat

The bicycle features a tool-free adjustable seat post, allowing you to easily adjust the saddle height to accommodate your child's growth. Ensure the seat is at a height where the child can comfortably touch the ground with their toes while seated.

GROWS WITH YOUR CHILD



Image Description: A diagram illustrating the adjustable saddle, showing how the seat can be moved up and down on the seat post without tools.

Training Wheels (16-inch model)

The 16-inch model comes with detachable training wheels for beginners. These provide stability during the learning phase and can be removed once your child gains confidence and balance.

MAINTENANCE

Regular maintenance ensures the longevity and safety of your WEIZE Kids Bike.

- **Cleaning:** Wipe down the bike with a damp cloth after use. Avoid high-pressure washing.
- **Lubrication:** Periodically lubricate the chain and moving parts with bicycle-specific lubricant.
- **Tire Pressure:** Check tire pressure before each ride. Refer to the tire sidewall for recommended PSI.
- **Brake Check:** Ensure brake levers are responsive and brake pads are not excessively worn. Adjust as needed.
- **Bolt Tightness:** Regularly check and tighten all bolts and fasteners, especially on the handlebars, seat, and wheels.

- **Storage:** Store the bicycle in a dry, covered area to prevent rust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Brakes feel loose or ineffective	Brake cable slack, worn brake pads	Adjust brake cable tension; replace worn brake pads.
Tires are flat or soft	Low air pressure, puncture	Inflate tires to recommended PSI; inspect for punctures and repair if necessary.
Pedals are stiff or noisy	Lack of lubrication, loose bearings	Lubricate pedal bearings; check for tightness.
Chain is noisy or slips	Dry chain, misaligned chain	Clean and lubricate chain; ensure chain is properly seated on sprockets.

SPECIFICATIONS

Feature	Detail
Brand	WEIZE
Model Number	KBA-5064
Bike Type	Kids Bike (BMX Style)
Wheel Size	16 Inches (also available in 20 Inches)
Frame Material	High Carbon Steel
Suspension Type	Rigid
Number of Speeds	1
Brake Style	Handbrake (Linear Pull) and Coaster Brake
Included Components	Training Wheels, Front Fender, Rear Fender, Chain Guard
Special Feature	Lightweight, Adjustable Seat
Minimum User Height (16-inch)	43 Inches
Assembly Required	Yes (85% pre-assembled)

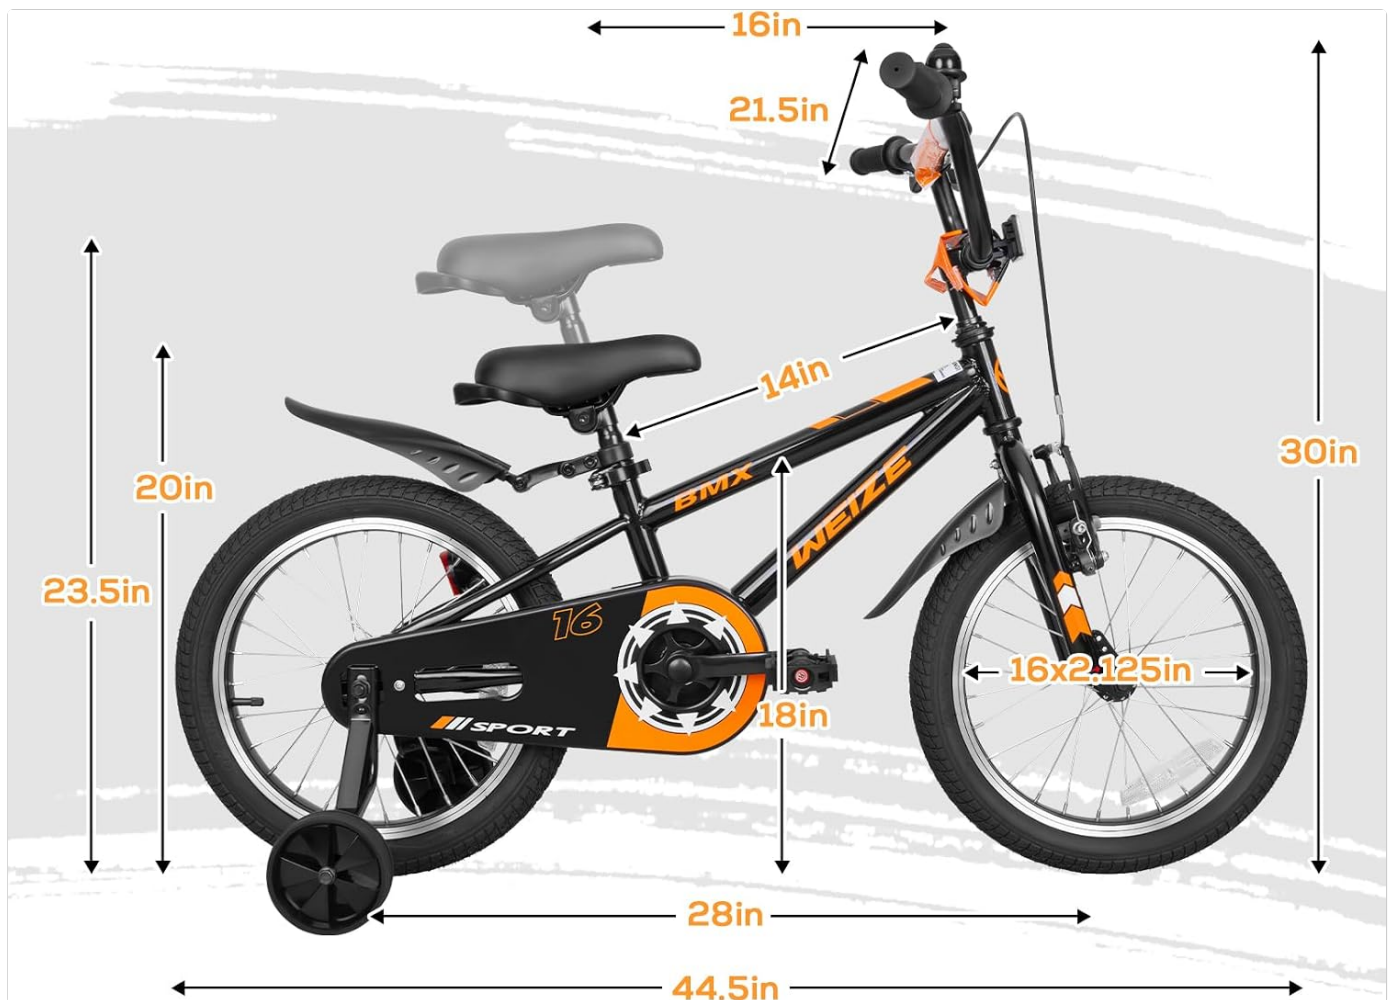 



Image Description: A technical drawing of the 16-inch WEIZE Kids Bike with various dimensions labeled, including wheel size, frame length, handlebar height, and seat height.

SIZING GUIDE

Choosing the correct bike size is crucial for safety and comfort. Refer to the table below to match the bike size to your child's age and height.

Wheel Size	Age Range	Height Range	Saddle Height	Bike Weight
16 Inches	4-6 years old	43-49 inches	20" - 23.6"	21 lbs
20 Inches	6-12 years old	46-56 inches	23" - 27.5"	23 lbs

 SIZE CHART

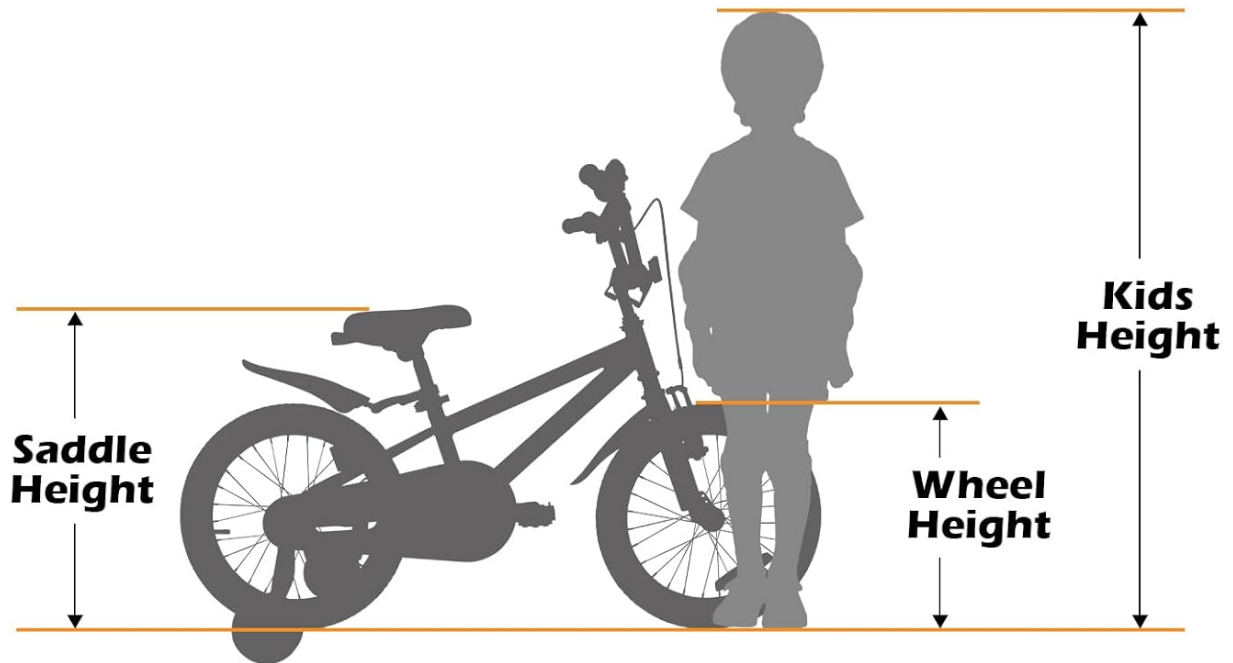

Wheel Size	Saddle Height	Kids Height	Bike Weight
16"	20" - 23.6"	43" - 49"	21lbs

Image Description: A visual size chart showing a child next to a bicycle, indicating recommended kids' height, saddle height, and wheel height for a 16-inch bike, along with a table for 16-inch and 20-inch models.

WARRANTY

The WEIZE Kids Bike comes with a Limited Warranty. Please retain your proof of purchase for any warranty claims. For specific terms and conditions, refer to the warranty card included in your package or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your WEIZE Kids Bike, please contact our customer support team. Refer to the contact information provided on the packaging or our official website. For more information, visit the [WEIZE Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question