

WeurGhy W70

WeurGhy W70 Wireless Bluetooth Earbuds User Manual

Model: W70

INTRODUCTION

Thank you for choosing the WeurGhy W70 Wireless Bluetooth Earbuds. These earbuds are designed to provide a high-quality audio experience with advanced features such as Bluetooth 5.4 technology, noise cancellation, and IPX7 waterproofing. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

WHAT'S IN THE BOX

- WeurGhy W70 Wireless Bluetooth Earbuds
- Charging Case
- Type-C USB Charging Cable
- User Guide (this manual)
- 3 Pairs of Silicone Ear Tips (Sizes S/M/L)

PRODUCT OVERVIEW

Familiarize yourself with the components of your WeurGhy W70 earbuds and charging case.



This image displays a detailed diagram of the WeurGhy W70 earbuds and their charging case, highlighting key features such as the LED indicator light, ENC microphone, Talk microphone, Smart Finger Touch area on the earbuds, LED bar for earbuds, and the battery status indicator of the charging case, along with the Type-C charging port.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. Connect the provided Type-C USB cable to the charging port on the case and a power source. The LED display on the case will indicate the charging status.

38 Hours Play Time

6-8 HRS
Single Charge

30 HRS
With Charging Case



1.5 HRS Type-C



This image illustrates the charging process and battery life of the WeurGhy W70 earbuds. It shows that a single charge provides 6-8 hours of playtime, and with the charging case, total playtime extends to 38 hours. The image also highlights the 1.5-hour Type-C quick charge capability and the LED display on the charging case.

- Charging Time: Approximately 1.5 hours for a full charge.
- Play Time: 6-8 hours on a single charge; over 30 hours with the charging case.

2. Pairing with Your Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings.
4. Search for available devices and select "W70" from the list.
5. Once connected, the earbuds will indicate successful pairing.

The earbuds utilize advanced Bluetooth 5.4 technology for stable and efficient connections.

Newly Upgraded Bluetooth 5.4 Technology



 More Sensitive Sensors

 More Stable Connection

 Longer Transmission Range

 Lower Power Consumption

 Lower Latency

 Faster Speed

This image highlights the benefits of the newly upgraded Bluetooth 5.4 Technology, including more sensitive sensors, more stable connection, longer transmission range, lower power consumption, lower latency, and faster speed.

3. Choosing the Right Ear Tips

Select the silicone ear tips (S/M/L) that provide the most comfortable and secure fit for optimal sound quality and noise isolation.

Ergonomic Design for Comfortable Fit



This image demonstrates the ergonomic design of the WeurGhy W70 earbuds for a comfortable fit, suitable for activities like workouts. It also shows the available ear tip sizes (S, M, L) and highlights the IPX7 waterproof rating and portable nature of the earbuds.

OPERATING INSTRUCTIONS

Smart Touch Controls

The WeurGhy W70 earbuds feature intuitive touch-sensitive controls for managing music and calls.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.

Sound Quality and Calls

Experience deep bass, delicate midrange, and bright treble with the Hi-Fi stereo sound quality. The built-in dual microphones and noise-cancelling technology ensure clear calls even in noisy environments.

Immersive Hi-Fi Stereo Surround Sound

Wear W70 Pro and immerse yourself in your own audio journey



This image provides an exploded view of the WeurGhy W70 earbud, highlighting its internal components responsible for immersive Hi-Fi Stereo Surround Sound, including deep bass and 14.2mm drivers. It emphasizes the overall audio experience.

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to maintain optimal performance and hygiene.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- Gently remove any earwax or debris from the ear tips and speaker mesh using a small brush or cotton swab.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

Water Resistance

The earbuds are IPX7 waterproof, meaning they can resist sweat and rain. They are not designed for swimming or prolonged submersion in water. Ensure the earbuds are dry before placing them back into the charging case to prevent damage.

TROUBLESHOOTING

- **Earbuds not pairing:** Ensure both earbuds are charged. Place them back in the case, close it, then open it again to re-enter pairing mode. Check your device's Bluetooth settings to ensure "W70" is selected.
- **Only one earbud working:** Try resetting the earbuds. Place both earbuds in the charging case, close the lid for a few seconds, then open it. If the issue persists, try unpairing from your device and re-pairing.
- **Poor sound quality:** Ensure the ear tips provide a secure seal in your ear. Clean any debris from the speaker mesh. Check your device's volume and audio settings.
- **Charging issues:** Ensure the Type-C cable is securely connected to both the case and the power source. Check if the charging port is clean and free of debris.
- **Earbuds not turning on/off:** Ensure the earbuds are charged. They should automatically turn on when removed from the case and turn off when placed back in.

SPECIFICATIONS

Model Name	W70
Bluetooth Version	5.4
Control Type	Smart Touch Control
Water Resistance Level	IPX7 Waterproof
Charging Time	1.5 Hours
Play Time (Earbuds)	6-8 Hours
Play Time (with Charging Case)	Over 30 Hours
Bluetooth Range	10 Meters
Product Dimensions (Charging Case)	2.44 x 1.89 x 1.01 inches
Item Weight	3.53 oz

WARRANTY

The WeurGhy W70 Wireless Bluetooth Earbuds come with a 2-Year Manufacturer Warranty. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

SUPPORT

For further assistance or inquiries, please refer to the contact information provided with your purchase or visit the official WeurGhy support website. Ensure you have your product model number (W70) and proof of purchase ready when

contacting support.

© 2026 WeurGhy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GTVHQFJS>

More documents and user manuals: <https://manuals.plus/>