

[Manuals.plus](#) /

› [Vipbear](#) /

› Vipbear Tall 6 Drawer Dresser (Model COD05) Instruction Manual

Vipbear COD05

Vipbear Tall 6 Drawer Dresser (Model COD05) Instruction Manual

Your guide to assembly, operation, and care.

PRODUCT OVERVIEW

The Vipbear Tall 6 Drawer Dresser, Model COD05, is designed for modern living spaces, offering ample storage and integrated features. This dresser includes six deep drawers, a sliding top with hidden storage and a lock, an RGB LED light strip, and a built-in charging station with AC outlets and USB ports. It is constructed from high-quality MDF with a sleek finish.

Key Features

- **RGB LED Light Strip:** Multi-color LED lighting with app and remote control for customizable ambiance.
- **Spacious Storage:** Six deep drawers, including two smaller top drawers and four larger drawers, providing organized storage.
- **Built-in Charging Station:** Features two AC outlets and two USB ports for convenient device charging.
- **Hidden Locking Storage:** A sliding top panel reveals a secure compartment for valuables, equipped with a key lock.
- **Durable Construction:** Crafted from high-quality MDF for stability and longevity.
- **Anti-Tip Kit:** Includes an optional anti-tip board for enhanced safety.

Product Dimensions

The dresser measures 48.4 inches (H) x 27.5 inches (W) x 15.2 inches (D). Detailed dimensions for drawers are provided in the diagram below.

Product Dimensions

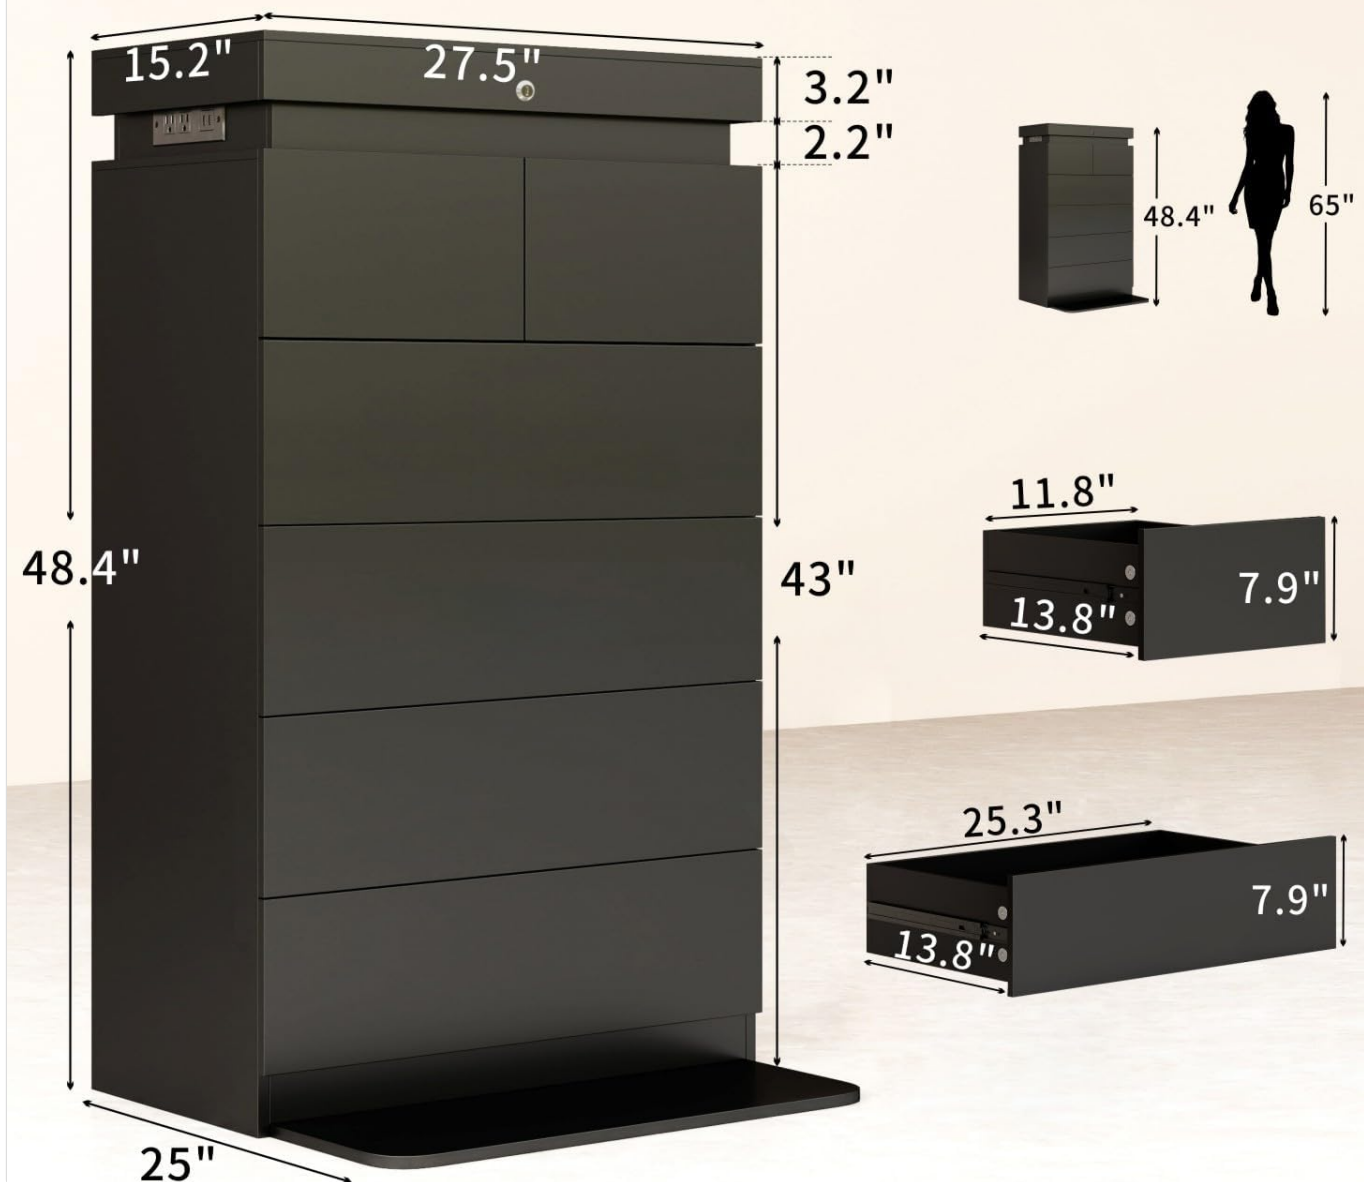


Image: Detailed dimensions of the dresser, including the main body (48.4" H x 27.5" W x 15.2" D) and drawer sizes.

SETUP INSTRUCTIONS

Please read all instructions carefully before beginning assembly. Ensure all parts are present and undamaged. Two people are recommended for assembly.

1. Unpacking and Part Identification

1. Carefully unpack all components from the packaging.
2. Lay out all parts on a clean, soft surface to prevent scratches.
3. Refer to the included parts list to identify each component and hardware.

2. Frame Assembly

1. Assemble the main frame of the dresser according to the diagrams in your physical manual. Ensure all connections are secure.

2. Install the drawer slides onto the inner panels of the dresser frame. Pay attention to the orientation of the slides.



Image: Internal view of the dresser frame with drawer slides.

3. Drawer Assembly

1. Assemble each drawer by attaching the sides, back, and bottom panel to the front panel.
2. Install the corresponding drawer slides onto the assembled drawers.
3. Insert the assembled drawers into the dresser frame, ensuring they slide smoothly.

2 Drawer Sizes to Meet Every Need



Image: Example of the two drawer sizes.

4. Top Panel and Hidden Storage Installation

1. Attach the sliding top panel mechanism to the top of the dresser frame.
2. Ensure the hidden compartment opens and closes smoothly.
3. Install the key lock mechanism for the hidden storage.

Sliding Desktop & Hidden Storage



Dresser with Lock



Image: Sliding desktop open, revealing hidden storage with lock.

5. LED Light and Charging Station Installation

1. Carefully attach the RGB LED light strip under the top panel as indicated in the manual.
2. Secure the built-in charging station into its designated slot.
3. Connect the power cord for the charging station and LED lights to a wall outlet.

6. Anti-Tip Kit Installation (Recommended)

1. For safety, it is highly recommended to install the anti-tip kit.
2. Attach the anti-tip bracket to the back of the dresser and secure it to a wall stud using the provided hardware.
3. Ensure the dresser is stable and cannot be easily tipped over.

OPERATING INSTRUCTIONS

Using the RGB LED Light Strip

The LED light strip can be controlled via the included remote control or a dedicated mobile application.

- **Remote Control:** Point the remote at the LED receiver. Use the color buttons to change the light color, and the brightness buttons to adjust intensity. Various modes (flash, fade, strobe) are also available.
- **Mobile App:** Download the specified app (refer to your physical manual for QR code or app name). Connect the app to the LED strip via Bluetooth. The app allows for more advanced customization, including custom colors, music sync, and timing functions.



Image: Demonstrates the adjustable RGB light strips and control options.

Using the Built-in Charging Station

The charging station provides convenient power access for your electronic devices.

- **AC Outlets:** Plug in small appliances or chargers into the two 120V/12A AC outlets.
- **USB Ports:** Connect your devices to the two 5V/2A USB ports for charging.

- Ensure the dresser's main power cord is plugged into a functional wall outlet for the charging station to operate.



Image: Built-in charging station with AC outlets and USB ports.

Accessing Hidden Locking Storage

- To open the hidden compartment, slide the top panel horizontally.
- To lock the compartment, close the sliding top panel and use the provided key to secure the lock. Keep the key in a safe place.

MAINTENANCE

Cleaning Instructions

- Wipe the dresser surfaces with a soft, dry cloth.
- For stubborn marks, use a slightly damp cloth with mild soap, then immediately dry with a clean cloth.

- Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.

General Care Tips

- Avoid placing hot items directly on the dresser surface. Use coasters or protective pads.
- Keep the dresser away from direct sunlight and heat sources to prevent warping or fading.
- Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- Do not overload drawers to ensure smooth operation and prevent damage to the slides.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights not turning on or changing color.	◦ Power cord not fully plugged in. ◦ Remote control battery is dead. ◦ LED strip connection is loose.	◦ Ensure the main power cord is securely plugged into a working outlet. ◦ Replace the remote control battery. ◦ Check the connection of the LED strip to its power source.
Charging station not working.	◦ Dresser power cord is unplugged. ◦ Device cable is faulty. ◦ Charging station is damaged.	◦ Verify the dresser's power cord is connected. ◦ Try a different charging cable or device. ◦ If issues persist, contact customer support.
Drawers do not slide smoothly.	◦ Drawers are overloaded. ◦ Drawer slides are misaligned or damaged. ◦ Loose screws on drawer slides.	◦ Reduce the weight in the drawers. ◦ Inspect drawer slides for damage or misalignment and adjust as needed. ◦ Tighten all screws on the drawer slides and drawer components.
Sliding top is stiff or stuck.	◦ Obstruction in the sliding mechanism. ◦ Mechanism needs lubrication.	◦ Check for any objects blocking the sliding path. ◦ Apply a small amount of silicone lubricant to the sliding tracks.

SPECIFICATIONS

Feature	Detail
Brand	Vipbear
Model Name	COD05
Product Dimensions (D x W x H)	15.2" x 27.5" x 48.4"

Feature	Detail
Material	Wood (MDF)
Finish Type	Painted
Number of Drawers	6 (2 small, 4 large)
Charging Station	2 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
Power Cord Length	4.9 Feet
Lighting	RGB LED Strip with Remote & App Control
Security Feature	Sliding Top with Key Lock
Safety Feature	Anti-Tip Kit Included
UPC	753747442786

WARRANTY INFORMATION

Vipbear products are manufactured with quality and durability in mind. This product comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. The specific terms and duration of your warranty may vary. Please retain your proof of purchase for warranty claims.

For detailed warranty information, please refer to the warranty card included with your product or contact Vipbear customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your Vipbear Tall 6 Drawer Dresser, please do not hesitate to contact our customer support team.

Contact Information:

- **Email:** support@vipbear.com (Example email, replace with actual if available)
- **Phone:** 1-800-XXX-XXXX (Example phone, replace with actual if available)
- **Website:** www.vipbear.com (Example website, replace with actual if available)

Please have your model number (COD05) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question