

[Manuals.plus](#) /

› [YKYI](#) /

› [YKYI Electric Grill Brush - Cordless Rechargeable BBQ Cleaner \(Model YKYI-8057\) User Manual](#)

YKYI YKYI-8057

YKYI Electric Grill Brush - Model YKYI-8057 User Manual

Cordless Rechargeable BBQ Cleaner with 180° Adjustable Head

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your YKYI Electric Grill Brush, Model YKYI-8057. Please read this manual thoroughly before operating the device and retain it for future reference.

IPX7 Deep Waterproofing



Image: The YKYI Electric Grill Brush, showing the main unit, two interchangeable brush heads, and the charging cable.

2. SAFETY INFORMATION

- Always wear protective gloves when handling or changing brush heads.
- Ensure the device is turned off before attaching or detaching brush heads.
- Do not immerse the charging port in water. The device is IPX7 waterproof, meaning it can withstand submersion up to 1 meter for 30 minutes, but ensure the charging port cover is securely closed.
- Keep out of reach of children.
- Do not use the brush on extremely hot surfaces exceeding 392°F (200°C).
- Use only the provided charging cable.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- YKYI Electric Grill Brush Main Unit
- Stainless Steel Wire Brush Head
- Scouring Pad Brush Head
- USB Type-C Charging Cable
- Protective Gloves
- Splash Guard

4. PRODUCT FEATURES

- **3-Speed Power System:** Adjustable speeds (300-350-400 RPM) for varying cleaning needs.
- **180° Adjustable Head:** 7 adjustable locking positions for comprehensive cleaning.
- **2600mAh Lithium Battery:** Provides up to 120 minutes of continuous use on a 30-minute charge.
- **5-Level LED Indicator:** Displays battery charge level.
- **High-Heat Resistance:** Shell withstands temperatures up to 392°F (200°C).
- **IPX7 Waterproof Rating:** Allows for safe rinsing of the entire brush.
- **Anti-Shedding Bristles:** Stainless steel bristles are securely anchored.
- **Universal Type-C Charging Port:** For convenient recharging.
- **Dishwasher-Safe Brush Heads:** For easy cleaning.

5. SETUP

5.1 Assembling the Brush Head

1. Select the desired brush head (stainless steel wire brush for residue removal, scouring pad for polishing).
2. Align the socket on the brush head with the connector on the main unit.
3. Push firmly until the brush head clicks into place.



Image: A diagram illustrating how to attach the brush head to the main unit, showing the alignment of the socket and connector.

5.2 Initial Charging

Before first use, fully charge the grill brush. Connect the USB Type-C charging cable to the brush and a compatible power source. The 5-level LED indicator lights will show the charging progress. A full charge takes approximately 30 minutes.

STEP 2

Press and Start

Press the power button to start the brush, press lightly again to change the brush gear, long press to turn off the brush.



Image: An illustration of the 5-level LED battery indicator, showing different charge levels from 20% to 100%.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Speed Adjustment

1. Press the power button once to turn on the brush at the lowest speed (300 RPM).
2. Press the power button again to cycle through the speeds: 350 RPM, then 400 RPM.
3. Long press the power button to turn off the brush.

Capacity of 2600 Milliamperes

Work Time: 90mins to 120mins

400 RPM

Adjustable Gear 3

350 RPM

Adjustable Gear 2

300 RPM

Adjustable Gear 1



Image: The YKYI Electric Grill Brush handle displaying the power button, LED battery indicator, and labels for 300 RPM, 350 RPM, and 400 RPM speed settings.

6.2 Adjusting the Brush Head Angle

The brush head can be adjusted to 7 different locking positions. Press the angle adjustment button located near the brush head pivot point and rotate the head to the desired angle. Release the button to lock it in place.

All-Round Decontamination



Image: The YKYI Electric Grill Brush demonstrating its 180-degree adjustable head, showing various angles it can be set to for cleaning.

6.3 Cleaning Your Grill

1. Ensure the grill is either warm (up to 392°F/200°C) or cool. Cleaning a warm grill can make grease removal easier.
2. Attach the appropriate brush head. Use the stainless steel wire brush for removing charred residue and stubborn carbon buildup.
3. Turn on the brush and select a suitable speed.
4. Gently guide the brush over the grill grates. The rotating action will scrub away debris. Adjust the head angle as needed to reach corners and between grates.
5. For grease stain removal and polishing after initial cleaning, switch to the scouring pad brush head.



IPX7

Full Body Waterproof



High Temperature
Resistance



Efficiency-
Max Ratio of Cleaning

Image: A hand holding the YKYI Electric Grill Brush with the scouring pad attached, demonstrating its use for grease stain removal on a grill.

STEP 1

Assemble the brush head

Match the socket and connector to attach the brush head.

*Wear gloves to protect yourself from the wire.



Image: A close-up of the wire brush head, designed for removing stuck-on food residue from grill grates.

Make Your Grills Shine Again !



Image: The YKYI Electric Grill Brush being used to clean different types of grills, including flat tops, cast iron, stainless steel, and charcoal grills.

6.4 Official Product Videos

Your browser does not support the video tag.

Video: A demonstration of the YKYI electric barbecue grill brush in action, showcasing its cleaning capabilities.

Your browser does not support the video tag.

Video: A short clip demonstrating the motorized grill brush, highlighting its ease of use and effectiveness.

Your browser does not support the video tag.

Video: A quick overview of the electric grill brush designed for outdoor grills, showing its features and benefits.

7. MAINTENANCE

7.1 Cleaning the Brush Heads

Both the stainless steel wire brush head and the scouring pad brush head are dishwasher-safe. After use, detach them

from the main unit and place them in the dishwasher for thorough cleaning. Alternatively, they can be hand-washed with soap and water.

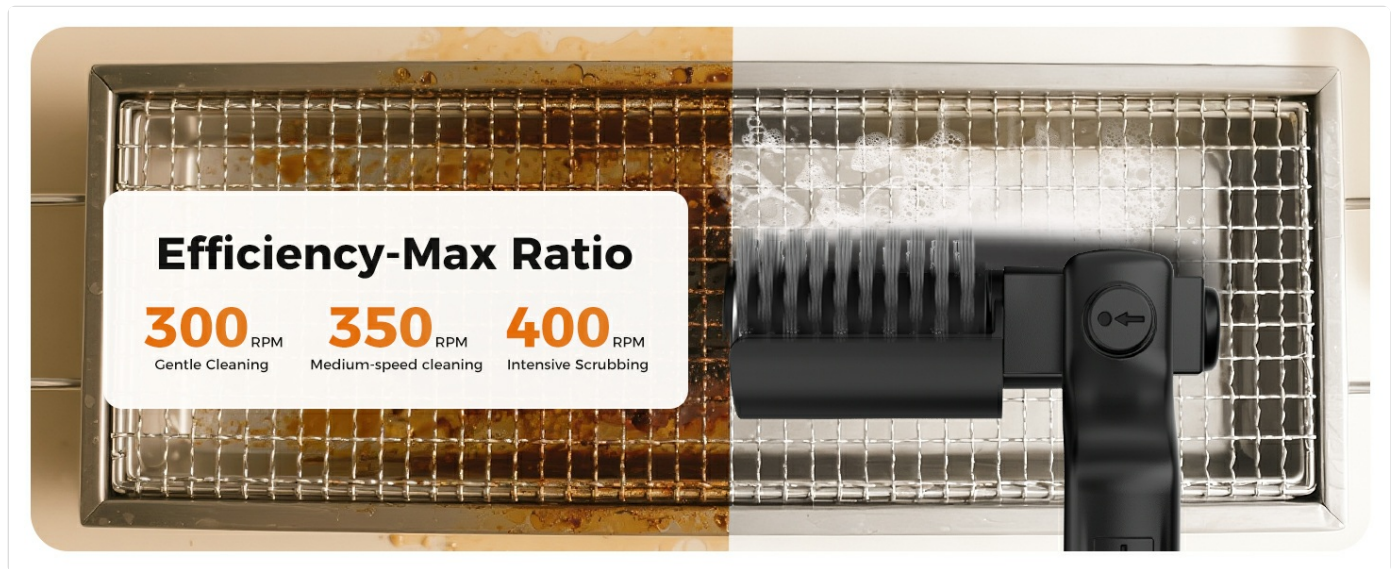


Image: The polishing brush head being rinsed under running water in a sink, demonstrating its easy cleaning process.

7.2 Cleaning the Main Unit

The main unit has an IPX7 waterproof rating, allowing it to be rinsed under water. Ensure the Type-C charging port cover is securely closed before rinsing. Do not use abrasive cleaners or solvents on the main unit.



Image: The YKYI Electric Grill Brush being rinsed under a faucet, illustrating its IPX7 full-body waterproofing feature.

7.3 Charging

Recharge the device when the LED battery indicator shows low power. Connect the Type-C cable to the charging port and a power adapter. Avoid overcharging the battery for extended periods.

8. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Connect to the charger and check the LED indicator.
- **Brush head not rotating:** Check if the brush head is securely attached. Ensure there are no obstructions preventing rotation.
- **Poor cleaning performance:** Ensure the correct brush head is used for the task. For heavy residue, use the wire

brush at a higher speed. Clean the brush heads regularly.

- **Battery not charging:** Verify the charging cable and power adapter are working correctly. Ensure the cable is fully inserted into the Type-C port.

9. SPECIFICATIONS

Feature	Specification
Model Number	YKYI-8057
Brand	YKYI
Battery Capacity	2600mAh Lithium Battery
Working Time	Up to 120 minutes
Charging Time	Approx. 30 minutes
Rotational Speeds	300 RPM, 350 RPM, 400 RPM
Adjustable Head	180° with 7 locking positions
Waterproof Rating	IPX7
Heat Resistance	Up to 392°F (200°C)
Color	Black

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact YKYI customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question