

CONTOURE RV-955SSAF

CONTOURE RV-955SSAF Built-In RV Air Fryer Microwave Combo User Manual

Model: RV-955SSAF

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your CONTOURE RV-955SSAF Built-In RV Air Fryer Microwave Combo. This versatile appliance combines the functions of an air fryer, convection oven, and microwave, designed for compact spaces like RVs and small kitchens. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.
- Ensure proper ventilation around the appliance during operation.
- Only use utensils suitable for microwave, air fry, or convection cooking as specified in this manual.

PRODUCT OVERVIEW

The CONTOURE RV-955SSAF is a multi-functional cooking appliance featuring microwave, air fry, convection, and grill capabilities. It is designed for built-in installation.



Image: Front view of the CONTOURE RV-955SSAF Built-In RV Air Fryer Microwave Combo. This image displays the sleek stainless steel finish and the integrated control panel on the right side.

Dimensions



Image: Diagram showing the dimensions of the CONTOURE RV-955SSAF. The unit measures approximately 16 inches wide, 11.38 inches high, and 19.5 inches deep, including the built-in trim.

Control Panel

The appliance features a touch control panel with a blue LED display. It includes numeric keys, function buttons for Microwave, Air Fry, Convection, Grill, and Combi modes, as well as preset cooking options, a timer/clock, and start/stop controls.



Image: A hand interacting with the touch control panel, highlighting the 'START' button. The panel shows various cooking modes and numeric inputs.

Interior Components

The interior is made of stainless steel and includes a rotating glass turntable for even cooking. A metal rack is provided for air frying and convection cooking.



Image: The appliance door is open, revealing the stainless steel interior and the glass turntable. This view demonstrates the internal capacity.

SETUP AND INSTALLATION

This appliance is designed for built-in installation. A trim kit is available separately for a seamless integrated look. Ensure the installation area meets the specified dimensions and ventilation requirements.

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the appliance for any damage.
2. **Placement:** Choose a stable, level surface within a cabinet opening that provides adequate clearance for ventilation. Refer to the separate installation guide for precise cutout dimensions.
3. **Electrical Connection:** Ensure the power outlet matches the voltage and frequency requirements of the appliance (120V, 60Hz). Plug the appliance into a grounded outlet.
4. **Turntable Installation:** Place the turntable ring inside the oven cavity, then position the glass turntable plate securely on top of the ring.

OPERATING INSTRUCTIONS

Your CONTOURE RV-955SSAF offers multiple cooking functions. Always ensure the correct accessories are used for each mode.

Microwave Cooking

Use microwave-safe dishes. The appliance operates at 900 watts.

- **Time Cook:** Press the 'Microwave' button, then use the numeric keypad to enter the desired cooking time. Press 'START'.
- **Power Level:** After setting time, press 'Microwave' again to adjust power level (e.g., P-80 for 80% power).
- **Express Cook:** For quick cooking, press '1', '2', or '3' for 1, 2, or 3 minutes of cooking at full power. Press 'START' to begin.

Smart Air Fry Function

This function uses hot air circulation to cook food with little to no oil. Use the provided metal rack for best results.

- Place food on the metal rack.
- Press the 'Air Fry' button.
- Select an Air Fry preset or manually set time and temperature if available.
- Press 'START'.

Convection Oven

Ideal for baking and roasting. Use oven-safe bakeware.

- Press the 'Convection' button.
- Enter the desired temperature using the numeric keypad.
- Enter the cooking time.
- Press 'START'. The oven will preheat, then begin cooking.

Grill Function

For browning and toasting. Use the metal rack.

- Place food on the metal rack.
- Press the 'Grill' button.
- Enter the desired grilling time.
- Press 'START'.

Combination Cooking

Combines microwave power with convection or grill for faster, more even cooking.

- Press the 'Combi' button.
- Select the desired combination mode (e.g., Combi 1 for Microwave + Convection, Combi 2 for Microwave + Grill).
- Set cooking time and power/temperature as prompted.
- Press 'START'.

Preset Cooking Modes

The appliance includes various preset modes for common foods like popcorn, potato, pizza, frozen mode, auto reheat, and auto cook. Refer to the control panel for specific options.

- Press the relevant preset button (e.g., 'Popcorn').
- Select the desired weight or quantity if prompted.
- Press 'START'.

CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your appliance.

Exterior Cleaning

- Wipe the exterior with a damp cloth and mild detergent.
- Avoid abrasive cleaners or scouring pads that can scratch the stainless steel finish.
- Dry thoroughly with a soft cloth.

Interior Cleaning

- Clean the interior cavity regularly with a damp cloth and mild soap.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave on high for 5-10 minutes to loosen residue, then wipe clean.
- Ensure the interior is dry before closing the door.

Turntable and Accessories

- The glass turntable and turntable ring can be washed in warm, soapy water or in the dishwasher.
- Clean the metal rack with warm, soapy water. Do not use abrasive cleaners.
- Ensure all accessories are completely dry before placing them back in the appliance.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or rotated; Incorrect power level or cooking time; Turntable not rotating.	Stir or rotate food during cooking; Adjust power level and cooking time; Ensure turntable and ring are correctly placed and free of obstructions.
Excessive steam or condensation	High moisture content in food; Normal operation.	This is normal for foods with high moisture. Wipe interior after use. Ensure proper ventilation.
Unusual noise during operation	Turntable or accessories not correctly placed; Foreign object in cavity.	Re-position turntable and accessories; Check for and remove any foreign objects.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	CONTOURE
Model Name	RV-955SSAF
Product Dimensions (D x W x H)	21.25" x 18.13" x 12.5"
Capacity	0.9 cubic feet
Wattage	900 watts
Color	Stainless Steel
Installation Type	Built-In
Special Feature	Smart Air Fry technology
Controller Type	Touch

Feature	Detail
Inner Material	Stainless Steel
Item Weight	34.9 pounds
Included Components	Microwave Oven

WARRANTY INFORMATION

This CONTOURE appliance comes with a one-year limited warranty covering manufacturer defects. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or contact CONTOURE customer support.

CUSTOMER SUPPORT

For technical assistance, service, or questions regarding your CONTOURE RV-955SSAF, please visit the official CONTOURE website or contact their customer service department. Have your model number (RV-955SSAF) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

