

[Manuals.plus](#) /

› [CONTOURE](#) /

› CONTOURE AZ-990S-OTR Over-the-Range RV Microwave User Manual

CONTOURE AZ-990S-OTR

CONTOURE AZ-990S-OTR Over-the-Range RV Microwave User Manual

Model: AZ-990S-OTR

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CONTOURE AZ-990S-OTR Over-the-Range RV Microwave. Please read these instructions thoroughly before installation and use, and retain them for future reference. This microwave oven is designed for residential use, specifically in RV and compact kitchen environments, offering 1.9 cubic feet capacity and 900 watts of cooking power.



Figure 1: Front view of the CONTOURE AZ-990S-OTR Over-the-Range RV Microwave.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of fire, electric shock, or injury to persons, do not use this appliance for other than its intended purpose.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Maintain the inside of the oven. Food particles or spilled liquids can cause arcing or fire.
- Do not attempt to service this appliance yourself. Contact qualified service personnel for repairs.

3. PRODUCT FEATURES

The CONTOURE AZ-990S-OTR microwave oven includes several features designed for convenience and efficiency:

- **1.9 cu. ft. Capacity:** Accommodates full-size cookware, suitable for RV and compact kitchen spaces.
- **900-Watt Cooking Power:** Provides consistent and even heating with 10 power levels.
- **Integrated Ventilation System:** Features a 4-speed fan with 300 CFM airflow to remove smoke and odors.
- **Auto Cooking Menus:** Simplifies meal preparation with pre-set cooking options.
- **30-Second Express Button:** Allows for quick operation and adjustment of cook times.
- **2-Stage Cooking Controls:** Enables multi-step meal preparation.
- **LED Cooktop Lighting:** Improves visibility over the cooking surface below.
- **Blue LED Display:** Offers a clear and modern interface for settings and time.
- **Air-Purifying Charcoal Filters:** Enhances air quality by filtering cooking odors.



Figure 2: Control panel highlighting key functions for everyday use.

4. SETUP AND INSTALLATION

This CONTOURE microwave is designed for over-the-range installation. Proper installation is crucial for safe and optimal performance. It is recommended that installation be performed by a qualified technician.

4.1 Unpacking

- Carefully remove all packaging materials and accessories.
- Inspect the oven for any damage, such as dents or a broken door. Do not install if damaged.
- Ensure all included components are present: Microwave Oven, Turntable, Turntable Ring, and Installation Hardware.

4.2 Location Requirements

- The microwave must be installed above a cooking surface, ensuring adequate clearance.
- Ensure the mounting surface is structurally sound to support the microwave's weight (approximately 57.6 lbs).
- A dedicated, properly grounded electrical outlet (120V, 60Hz, 15A or 20A circuit) is required.

4.3 Dimensions

Refer to the diagram below for precise product dimensions to ensure proper fit and installation clearance.



Figure 3: Product dimensions for installation planning.

Overall Dimensions:

Depth: 33.25 inches

Width: 20.13 inches

Height: 19.5 inches

Made for tight spaces

Ideal for RV and compact kitchens



Figure 4: Example of the microwave installed in an RV kitchen.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and functions for efficient use.



Figure 5: Control panel overview.

5.1 Setting the Clock

1. Press the **CLOCK** button.
2. Use the number pad to enter the current time (e.g., 1-2-3-0 for 12:30).
3. Press the **CLOCK** button again to confirm.

5.2 Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door.
3. Enter the desired cooking time using the number pad.
4. Press the **POWER LEVEL** button, then enter the desired power level (1-10, 10 being full power).
5. Press **START/+30SEC** to begin cooking.

5.3 Auto Cooking Menus

The microwave features pre-programmed settings for common foods:

- **POPCORN:** For popping popcorn.
- **POTATO:** For baking potatoes.
- **VEGGIES:** For cooking vegetables.
- **SNACK:** For reheating snacks.
- **MELT/SOFTEN:** For melting butter or softening ice cream.
- **AUTO COOK:** Additional pre-set options.

To use an auto menu, press the corresponding button, then select the quantity or weight if prompted, and press **START/+30SEC**.

5.4 Ventilation Fan Operation

The integrated ventilation fan helps remove cooking odors and smoke.

- Press the **FAN** button repeatedly to cycle through the 4 fan speeds (Low, Medium, High, Boost) or to turn the fan off.

5.5 Cooktop Lighting

The LED cooktop light illuminates the cooking surface below the microwave.

- Press the **LIGHT** button to turn the light on or off.



Figure 6: Interior view with door open, showing the turntable.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your microwave oven.

6.1 Cleaning the Exterior

- Wipe the exterior with a damp cloth and mild soap. Dry thoroughly.
- Avoid abrasive cleaners or scouring pads that can scratch the stainless steel finish.

6.2 Cleaning the Interior

- Clean the interior cavity with a damp cloth and mild detergent after each use.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean.
- The glass turntable and turntable ring can be removed and washed in warm, soapy water or in the dishwasher.

6.3 Filter Maintenance

The microwave is equipped with grease filters and charcoal filters for the ventilation system.

- **Grease Filters:** These should be cleaned monthly or as needed. Remove them from the bottom of the microwave and wash in hot, soapy water or a dishwasher.
- **Charcoal Filters:** These are not washable and should be replaced approximately every 6-12 months, depending on usage. Refer to the installation guide for replacement instructions.

7. TROUBLESHOOTING

If you experience issues with your microwave, consult the following table before contacting service.

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Blown fuse/tripped circuit breaker	Ensure door is securely latched; Check power cord connection; Reset circuit breaker or replace fuse
Food not cooking evenly	Food not stirred/rotated; Incorrect power level/cook time; Turntable not rotating	Stir or rotate food during cooking; Adjust power level/cook time; Ensure turntable and ring are correctly placed and clean
Excessive steam from vent	High moisture content in food; Fan speed too low	This is normal for some foods; Increase fan speed
Oven light not working	Bulb burned out	Contact customer support for bulb replacement instructions or service

8. SPECIFICATIONS

Detailed technical specifications for the CONTOURE AZ-990S-OTR microwave oven.

Feature	Specification
Brand	CONTOURE
Model Name	AZ-990S-OTR
Capacity	1.9 cubic feet
Wattage	900 watts
Power Levels	10
Installation Type	Over-the-Range
Product Dimensions (D x W x H)	33.25" x 20.13" x 19.5"
Item Weight	57.6 pounds
Material	Stainless Steel
Ventilation Airflow	300 CFM (4-speed fan)

Feature	Specification
Special Feature	Air-Purifying Charcoal Filters
Controller Type	Touch
Human Interface Input	Buttons
Heating Method	Electric
UPC	810139220473

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

This CONTOURE microwave oven is covered by a Manufacturer Defective, One Year Limited Warranty. This warranty covers defects in materials and workmanship under normal use for a period of one year from the date of purchase. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty service, or to order replacement parts (such as charcoal filters), please contact CONTOURE customer support. Refer to the contact information provided with your product packaging or visit the official CONTOURE website for current support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question