

[Manuals.plus](#) /

> [CONTOURE](#) /

> CONTOURE Built-In RV Microwave Oven RV-985BK Instruction Manual

CONTOURE RV-985BK

CONTOURE Built-In RV Microwave Oven

MODEL: RV-985BK

Introduction

Thank you for choosing the CONTOURE Built-In RV Microwave Oven. This manual provides essential information for the safe and efficient operation of your appliance. Please read these instructions thoroughly before use and retain them for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including:

1. Read all instructions before using the appliance.
2. Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
3. Do not heat liquids or other foods in sealed containers as they are liable to explode.
4. Do not attempt to service or repair the oven yourself. Contact qualified service personnel.
5. Ensure proper ventilation around the appliance.
6. Always use microwave-safe cookware.
7. Supervise children closely when the microwave is in use.

Package Contents

Your CONTOURE RV-985BK Microwave Oven package should include:

- CONTOURE RV-985BK Microwave Oven
- Glass Turntable
- Turntable Ring
- Instruction Manual

Note: The trim kit for built-in installation is sold separately.

Setup

1. Placement and Installation

This microwave oven is designed for built-in installation in RVs and small kitchens. Ensure the installation area meets the required dimensions for proper ventilation. Refer to the separate trim kit instructions for specific installation details.

Dimensions: 20"D x 15.38"W x 11.5"H

2. Electrical Connection

Connect the microwave oven to a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance rating label.

3. Turntable Installation

Place the turntable ring in the center of the oven cavity. Then, place the glass turntable securely on top of the ring. Ensure it rotates freely.



Interior view of the microwave with the door open, showing the glass turntable and its support ring.



Front view of the CONTOURE RV-985BK microwave oven.

Operating Instructions

1. Control Panel Overview

The control panel features a digital display, numeric keypad, and dedicated function buttons for various cooking modes and settings.



Angled view of the microwave, showing the control panel.

2. Setting the Clock

1. Press the 'Timer/Clock' button once.
2. Use the numeric keypad to enter the current time (e.g., 1-2-3-0 for 12:30).
3. Press the 'Timer/Clock' button again to confirm.

3. Basic Microwave Cooking (Time Cook)

1. Place food in the oven. Close the door.
2. Press the 'Time Cook' button.
3. Enter the desired cooking time using the numeric keypad.
4. Press 'Start' to begin cooking.

4. Express Cook Functions

For quick cooking of common items, use the dedicated Express Cook buttons:

- **Popcorn:** Press 'Popcorn' for automatic popcorn cooking.
- **Potato:** Press 'Potato' for automatic potato cooking.
- **Pizza:** Press 'Pizza' for automatic pizza reheating.
- **Frozen Vegetable:** Press 'Frozen Vegetable' for automatic frozen vegetable cooking.
- **Beverage:** Press 'Beverage' for automatic beverage heating.
- **Dinner Plate:** Press 'Dinner Plate' for automatic dinner plate reheating.

Pressing an Express Cook button multiple times may adjust the quantity or serving size.

5. Defrosting (Time Defrost / Weight Defrost)

1. **Time Defrost:** Press 'Time Defrost', enter the desired defrosting time, then press 'Start'.
2. **Weight Defrost:** Press 'Weight Defrost', enter the food's weight in pounds (e.g., 1.0 for 1 pound), then press 'Start'.

6. Power Levels

To adjust the cooking power:

1. Press 'Power'.
2. Enter a power level from 1 to 10 (10 being 100% power).
3. Proceed with setting cooking time and pressing 'Start'.

7. Stop/Cancel Function

Press the 'Stop' button once to pause cooking or twice to cancel the current program and clear the display.

Maintenance

1. Cleaning the Exterior

Wipe the exterior surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

2. Cleaning the Interior

Clean the oven interior regularly with a mild detergent and a soft cloth. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue before wiping.

3. Cleaning the Turntable

The glass turntable and turntable ring can be removed and washed in warm, soapy water or in the dishwasher.

Troubleshooting

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is latched; Check power cord connection; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Door not closed; Microwave-safe cookware not used.	Adjust time/power; Close door firmly; Use appropriate cookware.
Turntable not rotating	Turntable not positioned correctly; Debris under turntable.	Reposition turntable and ring; Clean oven floor.
Display shows error code	Internal malfunction.	Unplug the oven for 30 seconds, then plug back in. If error persists, contact customer support.

Specifications

Feature	Specification
Brand	CONTOURE
Model Name	RV-985BK
Capacity	1.0 cubic feet
Wattage	900 watts
Product Dimensions (D x W x H)	20" x 15.38" x 11.5"
Item Weight	27.42 Pounds
Turntable Diameter	10.5 Inches
Installation Type	Built-In
Controller Type	Touch
Defrost System Type	Auto Defrost
Special Feature	EnergySmart technology

Warranty Information

This CONTOURE RV-985BK Microwave Oven comes with a Manufacturer Defective, One Year Limited Warranty. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or contact customer support.

Customer Support

For technical assistance, service inquiries, or to order replacement parts, please contact CONTOURE customer support. Visit the official CONTOURE website for contact information and frequently asked questions.

Online Support: [Visit the CONTOURE Store on Amazon](#)

