

[Manuals.plus](#) /

› [INTEMPO](#) /

› Intempo Kids Bluetooth Headphones EE8172 User Manual

INTEMPO EE8172

Intempo Kids Bluetooth Headphones Model EE8172 User Manual

Safe Listening for Children

INTRODUCTION

Thank you for choosing the Intempo Kids Bluetooth Headphones, Model EE8172. These headphones are designed to provide a safe and enjoyable audio experience for children, featuring an 85 dB volume limit to protect delicate hearing. With a comfortable design and long-lasting battery, they are ideal for various activities, from learning to entertainment.

Please read this manual carefully before using the headphones to ensure proper operation and maintenance.



Image: A young child wearing pink Intempo Kids Bluetooth Headphones, engrossed in content on a tablet while seated in a car. This illustrates the headphones' use during travel.

SETUP

1. Charging the Headphones

Before first use, fully charge the headphones. Use the included USB-C cable to connect the charging port on the headphones to a compatible USB power source (e.g., computer USB port, USB wall adapter).

- A full charge takes approximately **2 hours**.
- For quick use, a **10-minute charge provides up to 1 hour** of listening time.
- The LED indicator will show charging status (e.g., red for charging, blue for fully charged).

2. Bluetooth Pairing

Follow these steps to connect your headphones to a Bluetooth-enabled device:

1. Ensure the headphones are turned off.
2. Press and hold the **Power button** (usually indicated by a power symbol) for approximately 3-5

seconds until the LED indicator flashes blue and red alternately. This indicates pairing mode.

3. On your device (smartphone, tablet, laptop), go to the Bluetooth settings and turn Bluetooth on.
4. Search for available devices. The headphones will appear as "Intempo" or a similar name.
5. Select "Intempo" from the list to connect. Once connected, the LED indicator will typically show a solid blue light or flash blue slowly.
6. The headphones have a wireless range of up to **25 meters** (82 feet) in open areas.



Image: A close-up side view of the pink Intempo Kids Bluetooth Headphones, highlighting the control buttons on the earcup. These buttons are used for power, volume adjustment, and media playback.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up blue.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off.

2. Volume Control

The headphones feature an **85 dB volume limit** for safe listening. Use the volume buttons on the headphones or your connected device to adjust the sound level.

- **Volume Up:** Press the '+' button.
- **Volume Down:** Press the '-' button.

3. Music Playback

- **Play/Pause:** Press the Multi-function button (often the Power button or a dedicated play/pause button) once.
- **Next Track:** Press and hold the '+' button (or double-press the Multi-function button, depending on model).
- **Previous Track:** Press and hold the '-' button (or triple-press the Multi-function button, depending on model).

4. Call Management

If connected to a smartphone, you can manage calls directly from the headphones.

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.

MAINTENANCE

1. Cleaning

- Wipe the earcups and headband with a soft, dry, or slightly damp cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture into the charging port or speaker grilles.

2. Storage

When not in use, store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. The headphones feature a foldable design for compact storage.








Image: The Intempo Kids Bluetooth Headphones shown in a folded position, demonstrating their compact design for easy storage and portability.

TROUBLESHOOTING

- **Headphones not turning on:** Ensure the headphones are fully charged. Connect them to a power source using the USB-C cable.
- **Cannot pair with device:**
 - Make sure the headphones are in pairing mode (LED flashing blue and red).
 - Ensure Bluetooth is enabled on your device.
 - Move the headphones closer to your device.
 - Turn off and on both the headphones and your device, then try pairing again.
 - Clear previous Bluetooth connections on your device if too many are stored.
- **No sound or low volume:**
 - Check the volume levels on both the headphones and your connected device.
 - Ensure the headphones are properly connected via Bluetooth.
 - Try playing different audio content.
- **Charging issues:**
 - Verify the USB-C cable is securely connected to both the headphones and the power source.
 - Try a different USB-C cable or power adapter.
 - Ensure the charging port is clean and free of debris.

SPECIFICATIONS



Image: A top-down view of the pink Intempo Kids Bluetooth Headphones, showcasing the adjustable headband and soft earcups.

| Feature | Detail |
|-------------------------|-------------------------|
| Brand | INTEMPO |
| Model Number | EE8172 |
| Connectivity Technology | Wireless (Bluetooth) |
| Form Factor | On-ear |
| Volume Limit | 85 dB |
| Playtime | Up to 35 hours |
| Charging Time | Approx. 2 hours (USB-C) |

| | |
|---------------------|---|
| Quick Charge | 10 minutes for 1 hour playtime |
| Wireless Range | Up to 25 meters |
| Material | PP+ABS |
| Color | Pink |
| Compatible Devices | Android (and other Bluetooth-enabled devices) |
| Components Included | 1 x Intempo Kids Bluetooth Headphones, 1 x USB-C Charging Cable |

WARRANTY INFORMATION

Based on the product information, there is **No Guarantee** explicitly provided for this product. Please refer to your retailer's return policy for any issues.

SUPPORT

If you encounter any problems not covered in the troubleshooting section, or require further assistance, please contact the retailer or manufacturer's customer support. Keep your purchase receipt for reference.