

[Manuals.plus](#) /

› [Lumisky](#) /

› Lumisky CORALI D106CM LED Ceiling Fan User Manual

Lumisky CORALI

Lumisky CORALI D106CM LED Ceiling Fan User Manual

Model: CORALI D106CM

1. INTRODUCTION

Thank you for choosing the Lumisky CORALI D106CM LED Ceiling Fan. This 2-in-1 solution is designed to enhance both air circulation and lighting in rooms up to approximately 15 m². Featuring a 30W DC motor, it offers reduced energy consumption while ensuring efficient and consistent ventilation. Its 6 speeds allow precise adjustment of airflow intensity, from a gentle breeze to a powerful circulation of up to 6180 m³/h. The fan is also suitable for outdoor use.

Operating at a quiet 34 dB, it is ideal for bedrooms or resting areas, providing comfort without noise disturbance. It integrates a 15W LED light delivering up to 2700 lumens, offering clear, homogeneous, and economical lighting. The reversible summer/winter function allows you to change the direction of blade rotation to cool in summer or redistribute accumulated heat from the ceiling in winter, improving energy efficiency year-round. Fully controllable via remote, it offers simple and intuitive use.



Image 1.1: The Lumisky CORALI D106CM LED Ceiling Fan installed in an outdoor setting, showcasing its modern design and functionality.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always disconnect power at the main circuit breaker before attempting any installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician and in accordance with all local electrical codes.
- Ensure the mounting structure can support the weight of the fan (3.2 kg) plus the dynamic load during operation.
- Do not connect the fan to a dimmer switch or variable speed controller other than the one provided.
- Keep hands, clothing, and other objects clear of the fan blades when the fan is in operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Ensure all connections are secure and properly insulated.

3. SETUP AND INSTALLATION

3.1. Package Contents

- Fan Motor Housing
- Fan Blades (x3)
- Downrod
- Mounting Bracket
- Remote Control
- Mounting Hardware (screws, washers, etc.)

3.2. Dimensions

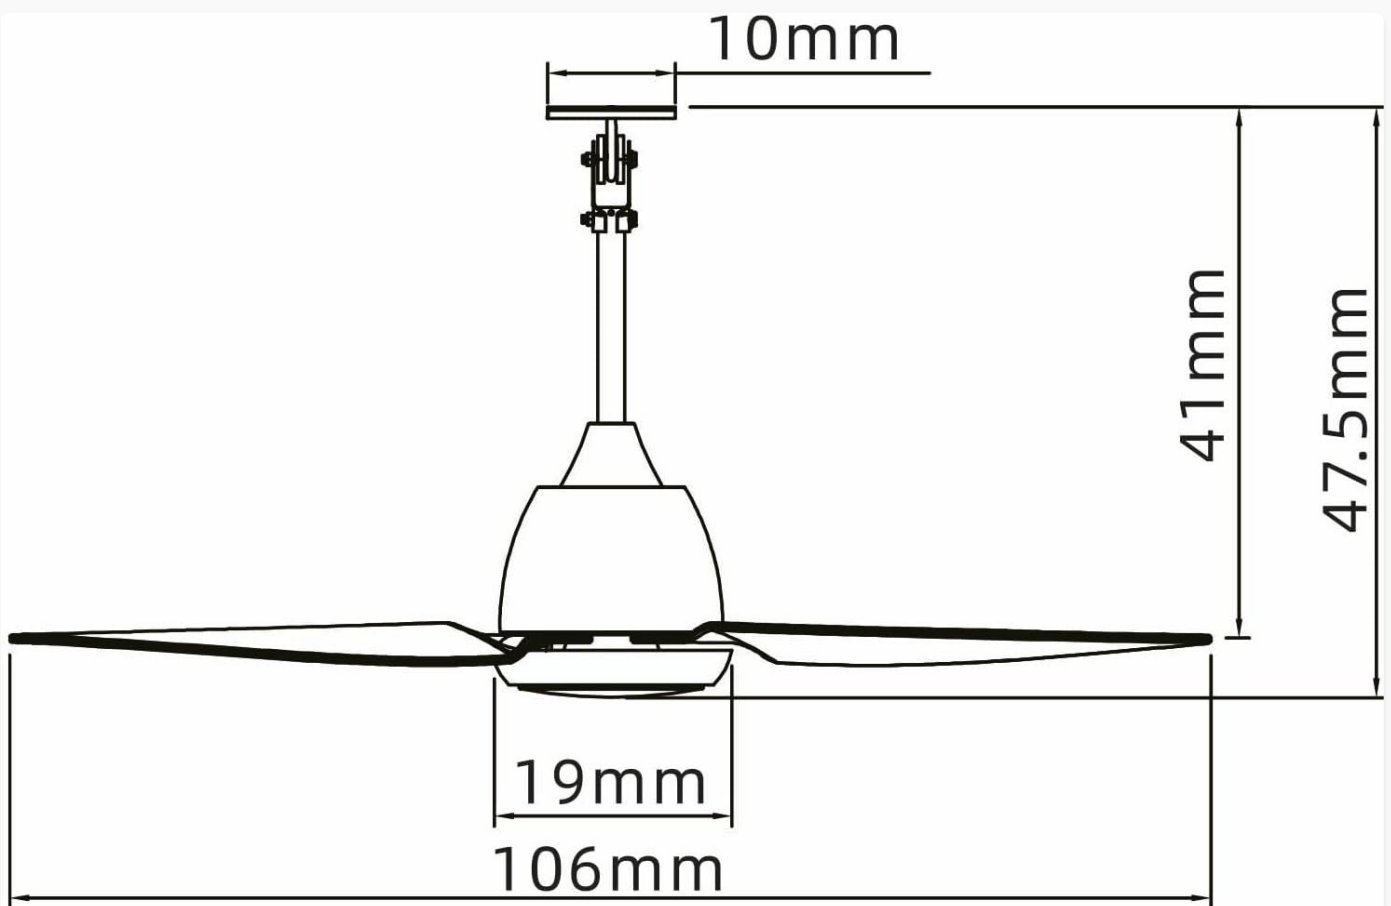


Image 3.1: Dimensional drawing of the CORALI D106CM fan. The fan has a diameter of 106 cm and a height of 38 cm.

3.3. Installation Steps

1. **Turn off Power:** Ensure the power supply to the installation area is completely disconnected at the circuit breaker.
2. **Mounting Bracket Installation:** Securely attach the mounting bracket to the ceiling joist or a suitable electrical junction box capable of supporting the fan's weight. Use appropriate screws and anchors.
3. **Assemble Downrod:** Insert the downrod through the canopy and connect it to the fan motor housing. Secure with pins and screws as per the detailed instructions in the included manual.
4. **Hang Fan:** Carefully lift the fan assembly and hang it on the mounting bracket hook.
5. **Wiring Connections:** Connect the electrical wires (Live, Neutral, Earth) from the ceiling to the corresponding wires on

- the fan. Ensure all connections are tight and insulated with wire nuts.
- 6. **Attach Blades:** Securely attach the fan blades to the motor housing using the provided screws. Ensure all blades are firmly attached.
 - 7. **Secure Canopy:** Slide the canopy up to the ceiling and secure it to the mounting bracket, covering all wiring.
 - 8. **Restore Power:** Once installation is complete and all connections are checked, restore power at the circuit breaker.

4. OPERATING INSTRUCTIONS

The Lumisky CORALI D106CM fan is operated using the included remote control.



Image 4.1: The CORALI D106CM fan and its remote control, illustrating the various functions available for fan and light operation.

4.1. Remote Control Functions

Button/Function	Description
-----------------	-------------

Button/Function	Description
ON/OFF (Fan)	Turns the fan on or off.
1-6 (Fan Speed)	Selects one of 6 fan speeds. 1 is the lowest, 6 is the highest.
Summer/Winter Mode	Changes the direction of blade rotation. In summer, blades rotate counter-clockwise to create a downdraft. In winter, blades rotate clockwise to create an updraft, recirculating warm air.
Light ON/OFF	Turns the integrated LED light on or off.
Light Color Temperature	Cycles through different light color temperatures (e.g., warm white, neutral white, cool white).
Light Dimmer	Adjusts the brightness of the LED light.
Timer (1H, 4H, 8H)	Sets the fan to automatically turn off after 1, 4, or 8 hours.

4.2. Summer/Winter Mode Explained

The reversible motor allows for year-round comfort:

- **Summer Mode (Counter-clockwise rotation):** Creates a direct breeze, making you feel cooler.
- **Winter Mode (Clockwise rotation):** Gently circulates warm air trapped near the ceiling downwards, helping to distribute heat more evenly and potentially reducing heating costs.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the fan is turned off and power is disconnected before cleaning.
- **Blade Balance:** If the fan wobbles, check that all blade screws are tight and that the blades are not bent or damaged. Refer to the troubleshooting section for further guidance.
- **Electrical Connections:** Annually check all electrical connections for tightness. This should only be done by a qualified professional.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery dead.	Check circuit breaker; Verify wiring connections (consult electrician); Replace remote control battery.
Fan wobbles excessively	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Check for bent blades; Ensure mounting bracket is securely fastened.
Light does not work	Loose wiring; LED module failure; Remote control battery dead.	Check wiring connections; Contact customer support for LED module replacement; Replace remote control battery.

Problem	Possible Cause	Solution
Remote control not responding	Dead battery; Remote not paired; Obstruction.	Replace battery; Re-pair remote control (refer to specific pairing instructions in the full manual); Ensure clear line of sight to receiver.

7. SPECIFICATIONS

Feature	Detail
Brand	Lumisky
Model Name	CORALI
Color	Beige
Fan Design	Ceiling Fan
Power Source	Corded Electric
Style	Modern
Product Dimensions (D x W x H)	106P x 38l x 106H centimeters (106 cm diameter, 38 cm height)
Special Features	Silent operation, LED Light, Timer, Oscillating (referring to air movement), Remote Control
Mounting Type	Ceiling Mount
Number of Speeds	6
Noise Level	34 Decibels
Airflow Capacity	6180 Cubic meters per hour
Usage	Outdoor or Indoor
Control Method	Remote Control
Smart Home Compatibility	Not Smart Home Compatible
Item Weight	3.2 Kilograms
Included Components	Remote Control
Manufacturer	Lumisky
Manufacturing Year	2026
International Article Code	03666162013097
Product Type Name	LED Ceiling Fan

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Lumisky website. If you encounter any issues not covered in this manual, please contact Lumisky customer service for assistance.

Lumisky Contact Information: Please refer to your product packaging or the Lumisky official website for the most up-to-date contact details.

© 2026 Lumisky. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question