

Seesii S005

SEESII Cordless Portable Washer Model S005 User Manual

Your guide to efficient and versatile cleaning.

1. INTRODUCTION

Thank you for choosing the SEESII Cordless Portable Washer Model S005. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new portable power cleaner. Please read this manual thoroughly before first use and retain it for future reference.

The SEESII S005 is designed for versatile cleaning tasks, offering cordless convenience for washing vehicles, patios, garden tools, and more. Its lightweight design and dual battery system ensure extended use and ease of handling.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- Always wear appropriate eye protection (safety glasses) and protective clothing when operating the washer.
- Do not direct the water spray at people, pets, electrical devices, or the unit itself.
- Keep children and bystanders away from the operating area.
- Ensure the battery is fully charged before use and stored in a dry, cool place.
- Do not operate the washer if any part is damaged. Contact customer support for assistance.
- Use only manufacturer-approved accessories and replacement parts.
- Disconnect the battery pack before making any adjustments, changing accessories, or storing the power tool.
- Avoid spraying flammable liquids or using the washer in explosive atmospheres.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- SEESII Cordless Portable Washer Gun
- 2 x 4000mAh Lithium-ion Batteries
- Battery Charger
- 6-in-1 Multi-function Nozzle
- 27FT Water Inlet Hose with Filter
- Foam Cannon Attachment
- Various Water Source Adapters (Faucet, Garden Hose, Quick Release, Soda Bottle)
- User Manual



Image: The SEESII Cordless Portable Washer with its main components, including the gun, battery, hose, and nozzle.

4. PRODUCT FEATURES

- **Cordless and Portable Design:** Offers freedom from power cords, allowing use in various locations.
- **Dual 4000mAh Batteries:** Provides up to 60 minutes of continuous operation for extended cleaning tasks.
- **Extended 27FT Hose:** Allows for flexible water sourcing from buckets, pools, or other containers without moving the main unit.
- **Lightweight Operation:** Weighs approximately 3 lbs, ensuring comfortable handling for prolonged use.
- **Versatile 6-in-1 Nozzle:** Easily switch between different spray patterns (0°, 15°, 25°, 40°, Shower, Foam) for various cleaning needs.
- **Multiple Water Source Options:** Compatible with buckets, pools, rivers, garden hoses, faucets, and even standard soda bottles for quick cleanups.

5. SETUP GUIDE

5.1 Charging the Batteries

Before first use, fully charge both 4000mAh batteries. Insert the battery into the charger, then plug the charger into a power outlet. The indicator light on the charger will show the charging status.

Smart Power for Longer Use



  **2*4000**
mAh Batteries

 **40-90**
Min Runtime

 **2-3**
Hours Charging Time

Image: Two 4000mAh batteries connected to the charger on a workbench, indicating the charging process.

5.2 Connecting the Water Inlet Hose

The 27FT water inlet hose allows you to draw water from various sources. Ensure the filter head is securely attached to one end of the hose.

1. Attach the quick-connect fitting of the hose to the water inlet port on the bottom of the washer gun.
2. Place the filter end of the hose into your chosen water source (e.g., bucket, pool, river). Ensure the filter is fully submerged to prevent air intake.

Easy Home Exterior Cleaning



Image: The water inlet hose with its weighted filter head submerged in a swimming pool, demonstrating water sourcing.

5.3 Using Adapters for Faucet or Garden Hose

For direct connection to a faucet or garden hose, use the appropriate adapters included in your kit.

Video: This video demonstrates how to connect the water inlet hose and various adapters to different water sources, including a faucet and a bucket.




Image: A diagram showing the faucet-compatible design and various adapters for connecting to a water tap.



Image: A diagram illustrating how to connect the washer to a standard garden hose using the provided adapters.

5.4 Attaching the Nozzle and Accessories

1. Align the 6-in-1 nozzle with the front of the washer gun and push it firmly until it clicks into place.
2. To change spray patterns, rotate the nozzle head to select the desired setting (0°, 15°, 25°, 40°, Shower, Foam).
3. For foam application, attach the foam cannon accessory to the washer gun. Fill the foam cannon with appropriate detergent before attaching.

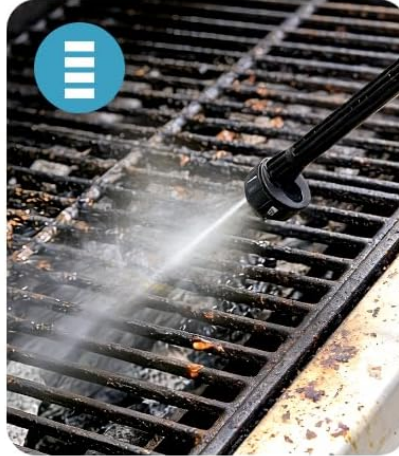

**Snap, Twist,
Clean**

**6 Specialized
Nozzles in One**



Image: A detailed view of the 6-in-1 nozzle, showcasing its various spray patterns for different cleaning tasks.



Image: The foam cannon attachment connected to the washer, ready for applying cleaning solutions.

6. OPERATING INSTRUCTIONS

6.1 Powering On and Priming

1. Ensure a charged battery is securely inserted into the washer gun.
2. Submerge the filter end of the hose into your water source.
3. Press and hold the trigger. It may take a few seconds for water to be drawn through the hose and for the unit to prime. Once a steady stream of water is achieved, the washer is ready for use.

Video: This video provides an overview of the SEESII Cordless Portable Washer, demonstrating its features and basic operation.

6.2 Using the 6-in-1 Nozzle

Rotate the nozzle head to select the desired spray pattern:

- **0° (Direct Jet):** For concentrated cleaning on tough spots. Use with caution on delicate surfaces.
- **15° (Narrow Fan):** Ideal for targeted cleaning of stubborn dirt.
- **25° (Medium Fan):** Suitable for general cleaning of surfaces like patios and driveways.
- **40° (Wide Fan):** Best for rinsing and cleaning larger, less soiled areas.
- **Shower:** Gentle spray for watering plants or light rinsing.
- **Foam:** For use with the foam cannon attachment to apply detergent.



Image: A close-up showing the different spray patterns available on the 6-in-1 nozzle.

6.3 General Cleaning Applications

The SEESII S005 is suitable for a variety of outdoor cleaning tasks:

- **Car Washing:** Use a wide fan spray for rinsing and the foam setting with detergent for cleaning.
- **Patio and Deck Cleaning:** Use a medium fan spray to remove dirt and grime.
- **Garden Tools and Furniture:** A medium or wide fan spray is effective for cleaning.
- **House Exterior:** For light cleaning of siding, use a wide fan spray.



Image: A woman using the portable washer to clean a car, demonstrating its ease of use for vehicle maintenance.

Your Complete Setup, Ready for Action



Image: A man using the portable washer to clean a wooden deck, highlighting its effectiveness for outdoor surfaces.

Clean Gear Anywhere. No Tap Needed



Image: A man cleaning the exterior wall of a house, showcasing the washer's utility for home maintenance.

7. MAINTENANCE

7.1 After Each Use

- **Rinse the System:** Run clean water through the washer for a few minutes to flush out any detergent or debris.
- **Clean the Filter:** Remove the filter from the water inlet hose and rinse it thoroughly to remove any trapped particles.
- **Drain Water:** Disconnect the hose and nozzle, and allow any remaining water to drain from the unit.
- **Wipe Down:** Clean the exterior of the washer gun and accessories with a damp cloth.

7.2 Battery Care and Storage

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store batteries in a discharged state for extended periods. Recharge them periodically if not in use.
- Avoid exposing batteries to water or moisture.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Washer does not turn on.	Battery not charged or improperly inserted.	Ensure battery is fully charged and correctly inserted.
Low water pressure.	• Water inlet filter clogged. • Air in the system (not primed). • Insufficient water supply.	• Clean the water inlet filter. • Ensure filter is fully submerged and hold trigger until steady stream. • Check water source for adequate supply.
Water leakage from connections.	Loose connections or worn O-rings.	Tighten all connections. Inspect and replace O-rings if damaged.
No water suction.	Hose not fully submerged or air leak in hose.	Ensure filter is completely underwater. Check hose for kinks or damage.

9. SPECIFICATIONS

Feature	Detail
Brand	Seesii
Model Number	S005
Power Source	Battery Powered
Battery Type	Lithium-ion (2x 4000mAh included)
Maximum Pressure	300 PSI (Pound per Square Inch)
Hose Length	27 Feet (7.98 Meters)
Product Dimensions (L x W x H)	15" x 7" x 10"
Item Weight	Approximately 3 lbs (excluding battery)

10. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please contact SEESII

customer service through the retailer where you purchased the product or visit the official SEESII store online.
Keep your purchase receipt as proof of purchase.
Visit the [Seesii Store](#) for more information.

© 2026 Seesii. All rights reserved.